


Paccar Engine Manuals Paccar Px 8 Engine Operators Manual

Full download: <http://manualplace.com/download/paccar-engine-manuals-paccar-px-8-engine-operators-manual/>

PACCAR PX-8

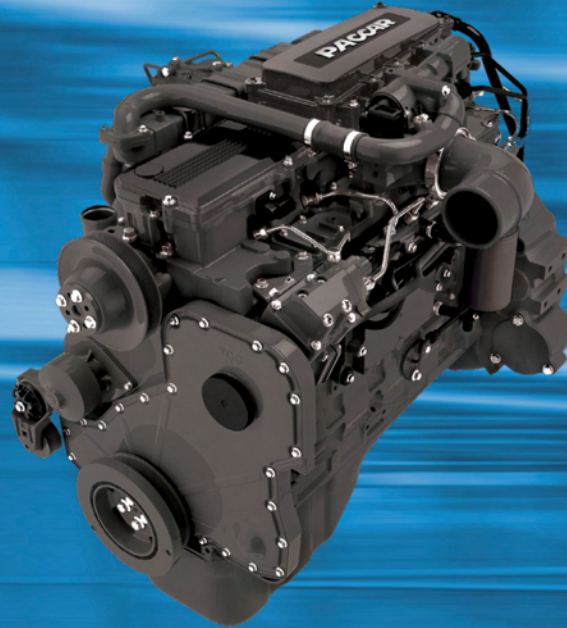

Operator's Manual

This is the cut pages sample. Download all 94 page(s) at: ManualPlace.com

PACCAR PX-8

Operator's Manual

Y53-1030A 12/09

©2010 PACCAR INC - ALL RIGHTS RESERVED

This manual illustrates and describes the operation of features or equipment which may be either standard or optional on this vehicle. This manual may also include a description of features and equipment which are no longer available or were not ordered on this vehicle. Please disregard any illustrations or descriptions relating to features or equipment which are not on this vehicle.

PACCAR reserves the right to discontinue, change specifications, or change the design of its vehicles at any time without notice and without incurring any obligation.

The information contained in this manual is proprietary to PACCAR. Reproduction, in whole or in part, by any means is strictly prohibited without prior written authorization from PACCAR Inc.

FOREWORD

This manual contains information for the correct operation and maintenance of your PACCAR engine.

Read and follow all safety instructions. Refer to the WARNING in the “[General Safety Instructions](#)” on page 5.

Keep this manual with the vehicle. If the vehicle is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. PACCAR Inc reserves the right to make changes at any time without obligation. If you find differences between your engine and the information in this manual, contact your local PACCAR Authorized Repair Location or write to PACCAR Inc c/o Medium Duty Engines, PO Box 1518, Bellevue, WA 98009.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine parts from PACCAR.



NOTE: Warranty information including the EPA and California Emission Warranty is located in the section entitled “[WARRANTY](#),” beginning on page 73. Make sure you are familiar with the warranty or warranties applicable to your engine.

Foreword

Introduction

Safety Signals	3
Illustrations	4
General Safety Instructions	5
Acronyms and Abbreviations	8

Engine Identification

Engine Dataplate	11
PACCAR Engine Nomenclature	12

Operating Instructions

General Information	13
Normal Starting Procedure	15
Cold Weather Starting	19
Starting Procedure After Extended Shutdown or Oil Change	20
Operating the Engine	20
Cold Weather	24
Coolant Recommendations and Specifications	24
Lubricating Recommendations and Specifications	25
Diesel Fuel Recommendations	25
Engine Indicator Lamps	25

Engine Operating Range	27
Engine Braking System	28
Tips for Operation on Level and Dry Pavement	36
Tips for Operation on Grades with Dry Pavement	37
Tips for Operation on Slick Roads	40
Engine Shutdown	42
Electromagnetic Interference (EMI)	42

Maintenance Guidelines

Overview	45
Maintenance Schedule	45
Maintenance Record Form	51

Service Literature

Additional Service Literature	53
---	----

Maintenance Specifications

General Engine Specifications	55
Lubricating Oil System	56
Cooling System	57
Filter Specifications	58
Diesel Exhaust Fluid Recommendations and Specifications	59
Fuel Recommendations and Specifications	59
Lubricating Oil Recommendations and Specifications	62

Coolant Recommendations and Specifications	66	United States and Canada Fire Apparatus Truck Applications Coverage	76
WARRANTY		Emission Warranty	79
<hr/>		California Emission Control System Warranty, On-Highway	81
PACCAR PX-8 Engine United States and Canada Coverage	73	California Emissions Components Statement for the PX-8 Engine (2010) Emission Engine Coverage	82

INTRODUCTION

Safety Signals

A number of alerting messages are in this manual. Please read and follow them. They are there for your protection and information. These messages can help you avoid injury to yourself, your passengers, and help prevent costly damage to the vehicle.

Key symbols and “signal words” are used to indicate what kind of message is going to follow. Pay special attention to instructions prefaced by symbols and signal words “WARNING”, “CAUTION”, or “NOTE”. Please do not ignore any of these alerts.

WARNING



When you see this symbol & word, the message that follows is especially vital. This signals something that can cause injury or even death. This message will tell you what the hazard is, what can happen if you don't heed the warning, and how to avoid it.

Example:



WARNING! Do not carry additional fuel containers in your vehicle. Fuel containers, either full or empty, may leak, explode, and cause or feed a fire. Do not carry extra fuel containers, even empty ones are dangerous.

CAUTION



This symbol and word signals something that could damage your vehicle.

Example:



CAUTION: Continuing to operate your vehicle with insufficient oil pressure will cause serious engine damage.