Caterpillar 966h Wheel Loader Electrical System

INTERACTIVE SCHEMATIC

CAT®

Bookmarks   X

Options ▾

- 📄 **Features**
- 📄 **Cover Page**
- 📄 **Information**
  - 📄 Component Table
  - 📄 Tap Table
  - 📄 Fluid Power Symbols
  - 📄 Electrical Symbols
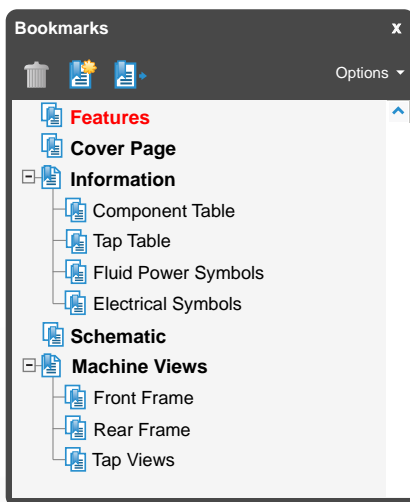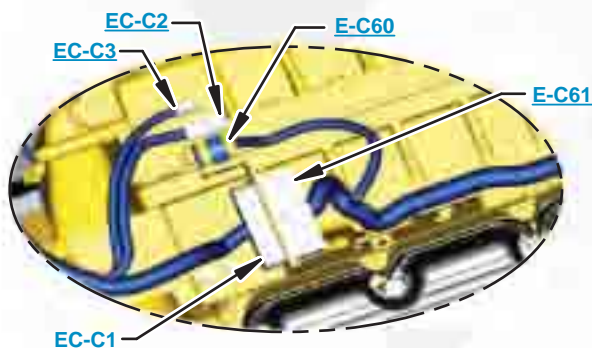- 📄 **Schematic**
- 📄 **Machine Views**
  - 📄 Front Frame
  - 📄 Rear Frame
  - 📄 Tap Views

This document is best viewed at a screen resolution of 1024 X 768.

To set your screen resolution do the following:
RIGHT CLICK on the **DESKTOP**.
Select **PROPERTIES**.
CLICK the **SETTINGS TAB**.
MOVE THE SLIDER under **SCREEN RESOLUTION** until it shows **1024 X 768**.
CLICK OK to apply the resolution.

The Bookmarks panel will allow you to quickly navigate to points of interest.

EC-C2
EC-C3
E-C60
E-C61
EC-C1

Click on <u>any text that is BLUE and underlined</u>. These are hyperlinks that can be used to navigate the schematic and machine views.

VIEW ALL CALLOUTS

When only one callout is showing on a machine view this button will make all of the callouts visible. This button is located in the top right corner of every machine view page.

	HOTKEYS (Keyboard Shortcuts)	
	FUNCTION	**KEYS**
⊕	**Zoom In**	"CTRL" / "+"
⊖	**Zoom Out**	"CTRL" / "-"
▢	**Fit to Page**	"CTRL" / "0" (zero)
🖐	**Hand Tool**	"SPACEBAR" (hold down)
	Find	"CTRL" / "F"