

# SS1926 STICK CRANE

## (SPARE PARTS LIST)

부 품 목 록



**동양기전주식회사**  
DONGYANG MECHATRONICS CORP.

AUTOACTION.COM

# STICK CRANE

## 부 품 목 록



**동양기전주식회사**  
DONGYANG MECHATRONICS CORP.

### 소유주(Owner)

성 명(Name) :

주 소(Address) :

구입일자 (Date of Purchase):

### 공급자(Dealer)

성 명(Name) :

상 호(Business Name) :

주 소(Address) :

장비일련번호(Equipment s/n) :

### 주 의(Caution)

장비를 사용하기 전에 취급설명서를 반드시 읽은 후 사용하십시오.

**Before using the equipment, read the manual thoroughly.**

AUTOACTION.COM

## 머리말

먼저 동양기전(주)가 판매하는 **SS** 시리즈 크레인을 구입하여 주신데 대하여 감사드립니다.

본 부품 목록은 **SS** 시리즈 크레인에 대한 것으로 구입하신 장비의 부품 주문과 수급을 정확하게 하기 위하여 만들어진 안내 책자입니다.

아울러 고객 여러분께서 사용하시는 장비의 이용 효율을 극대화하기 위해 사용중 불편한 사항이나 문제점 등이 발생 시 당사로 연락하여 주시면 저희 회사 공장, 직영 영업소, 애프터 서비스 센터에서 신속히 조치해 드리겠습니다. 고객 여러분의 만족을 위해 최선을 다할 것을 약속드립니다.

또한, 필요한 부품이 있을 경우에는 부품목록(SPARE PARTS LIST)에서 번호와 이름을 찾아서 신청하여 주십시오.

부품을 신청하실 때에는 아래 사항을 명기하여 당사 애프터서비스(A/S) 센터로 연락하여 주시면, 공급에 걸리는 시간이 많이 단축될 것입니다.

1. 크레인 기종
2. 신청 부품이 수록된 페이지 번호 및 지시 번호
3. 품번 및 품명
4. 부품 수량
5. 신청자의 주소 및 성명

주)

1. 본 목록상의 부품번호(품번) 및 형상은 당사의 설계 변경 및 품번 체계 변경에 의하여 사전 통보없이 변경될 수 있습니다.
2. 당사 크레인이 장착된 차량에 관한 사용 및 유지, 보수 관리에 대한 자세한 사항은 차량 제작사에서 발급한 지침서를 참조하여 주십시오.

AUTOACTION.COM

## Introduction

Best of all, we appreciate your purchase of SS Series Crane manufactured by DONG-YANG MECHATRONICS CORP. This parts list guide was intended to facilitate the order and supply of SS Series Crane parts correctly.

Meanwhile, for maximizing the utilization of the facility you use, please contact our factory, branch office or A/S service center if you had any complaint or trouble in use. We'll be shortly with you for taking an appropriate measure for customers' best satisfaction.

When you need any parts, first off, check the name and part number in the list and order it.

Please fill out the following items in an order form and contact our A/S service center to reduce the time to supply when you order parts.

1. Crane Model No.
2. Page No. and Indication No. containing ordered parts
3. Part Number and Part Name
4. Quantity of Parts
5. Name and address of an applicant(requestor)

Note)

1. The parts number and shapes in the list shall change at any time due to design change or part numbering system of the company without any prior notice.
2. For matters of the use, maintenance and repair of a vehicle mounted with the crane, refer to the manual issued by such vehicle manufacturer.

- 부품 목록 보는 방법

1. PART LIST 표시 형식(예시)

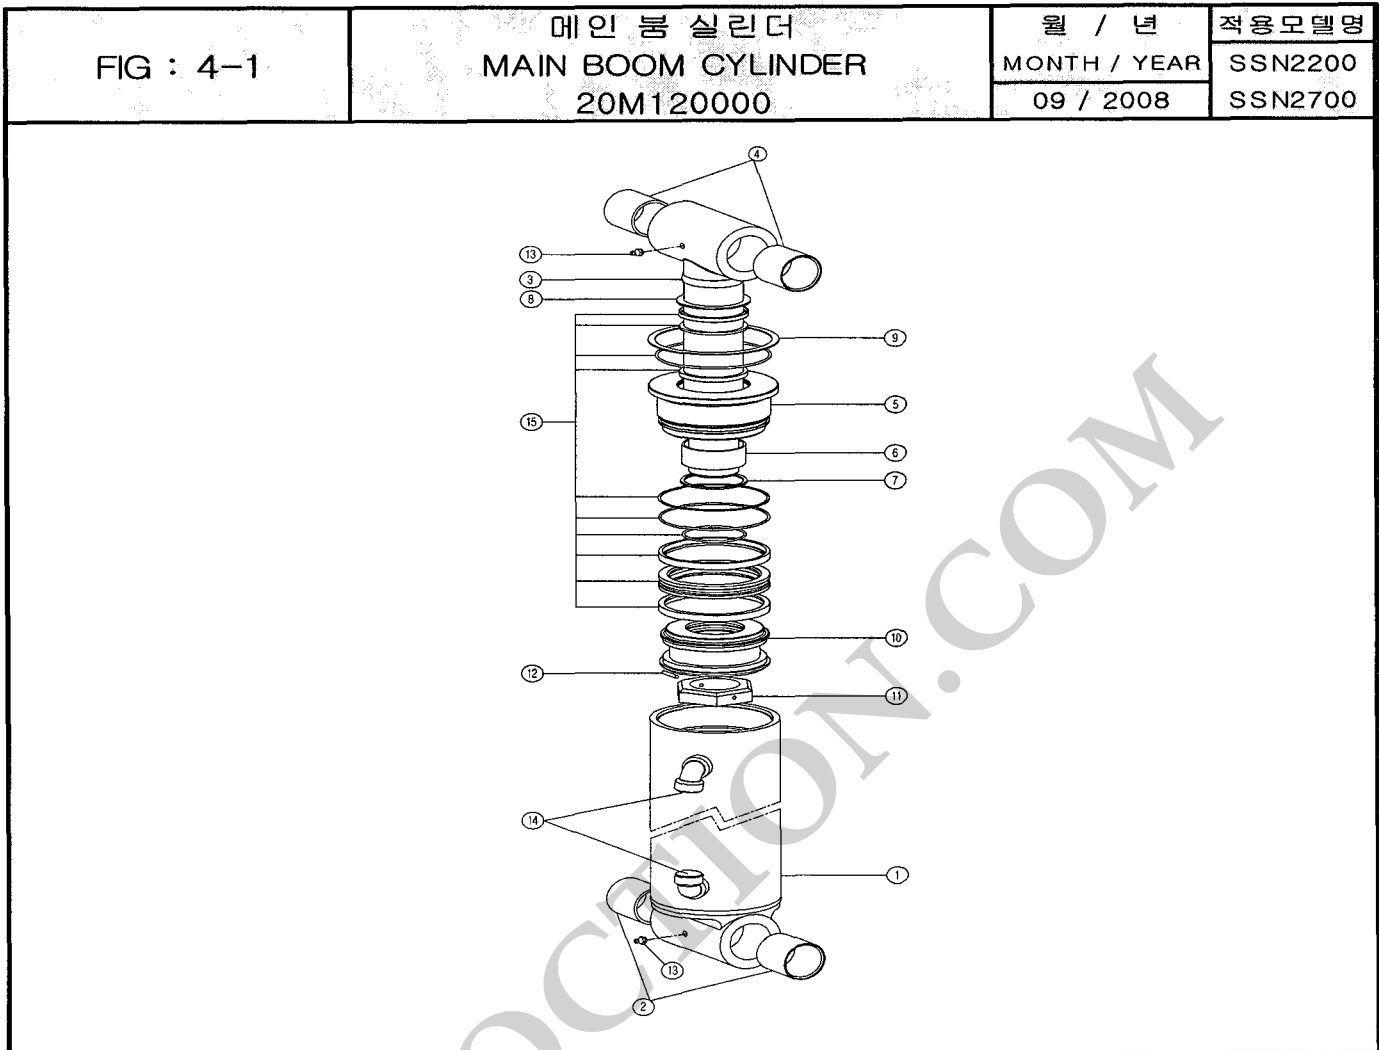


FIG : 4-1		메인 붐 실린더 MAIN BOOM CYLINDER 20M120000			월 / 년 MONTH / YEAR 09 / 2008	적용모델명 SSN2200 SSN2700	
번호 NO	품 번 PART NO.	품 명 DESCRIPTION	수량 Q'TY	규 격 SPEC	소모빈도 REPAIR	설변적용호기 EFFECTIVE NO	비 고 REMARKS
1	62D371-2	튜브 조립체 TUBE ASS'Y	1		A	~500호 (~2005년 7월)	
2	N.S 62D399-0	부시 BUSH	2	D50XD57X L60	A		
3	# 62D377-2	로드 조립체 ROD ASS'Y	1		B		
4	N.S 62D399-0	부시 BUSH	2	D50XD57X L60			
5	62D383-1	로드 커버 ROD COVER	1			500호~ (2005년 8월~)	
6	N.S E8412171	디유 부시 DU-BUSH	1	MB7530DU			
7	00M323-0	멈춤링 RING, RETAINING	1	AR82			
8	00M320-0	멈춤링 RING, RETAINING	1	AR92			
9	61D334-0	와셔	1				



## 2. 지시부 설명

① 그림 번호 : ②번의 그림번호

② 부 품 명 : 장비의 SUB ASS'Y 및 부품명(파트명)

③ 제 작 일 : 부품목록 작성년월

④ 모 델 명 : 적용되는 모델명 표기

⑤ 분 해 도 : ②번 그림의 분해도 표시 번호

⑥ 번 호 : 분해도 순열 번호

⑦ 공급 여부 : 공급 범위 순열 번호

N.S : 공급불가

# : 별도 상세 부품도

⑧ 품 번 : 당사가 관리하는 도면에 표기된 도번 또는 표준 부품 번호

⑨ 품 명 : 당사가 관리하는 도면에 표기된 품명

⑩ 수 량 : 현재 부품에 사용되는 개수

⑪ 규 격 : 표준부품의 규격이나 제품의 규격을 표시

⑫ 소모 빈도 등급 : 소비자에게 소모성 및 A/S 관련 부품 확보에 도움을 주고자 부품의

공급 빈도를 예상하여 등급을 구분

A : 소모성 부품(공급 빈도가 많은 부품)

B : 준소모성 부품(공급 빈도가 가끔 발생하는 부품)

C : 내구부품(공급 빈도가 거의 없는 부품)

⑬ 설변 적용 : 설변 적용전후 적용 호기(적용년월)

⑭ 비 고 : 참고 내용 요약

<주의> 볼트류, 너트류, 와셔류, 분할핀 코퍼 가스켓, 멈춤링, 오링류 등 일반적인 표준품은

지원하지 않습니다.

<b>FIG : 0-0</b>	스틱 크레인 조립도 <b>STICK CRANE ASS'Y</b>	월 / 년 MONTH / YEAR	적용모델명
		07 / 2012	SS1926

