#### Toyota 00016 32901 Installation Instructions Manual

Full download: http://manualplace.com/download/toyota-00016-32901-installation-instructions-manual/ TOYOTA Camry 2012 - Keyless Entry System

Part Number: 00016-32901 Accessory Code: KE10



# Conflicts

NOTE: Not for installation on vehilce's equipped with factory installed keyless entry.

### **General Applicability**

Power door locks required

## **Kit Contents**

Item #	Quantity Req	d Description
1	1	Keyless Module
2	1	Main Harness
3	1	Hardware Bag
4	1	Valet Switch
5	2	24" Cable Ties
6	2	3-Button Transmitter
7	1	Owner's Card


#### **Hardware Bag Contents**

Item #	Quantity Reqd	Description
1	8	Red T-Taps
2	8	Black T-Taps
3	2	Blue T-Taps
4	6	8" Cable Ties
5	1	2-1/4"x 2-1/4" Foam Pad
6	1	Yellow T-Tap

## **Recommended Tools**

Safety Tools		
Special Tools		
<b>INSTALLATION TOOLS</b>		
Phillip screwdriver	Straight-Slot screwdriver	
Ratchet w/extension	10 mm socket	
Diagonal wire cutters	Common pliers	
Flashlight	Nylon trim tool	
Torque Wrench	48" lbs	
Special Chemicals		

# Color Applicability/Trim Level

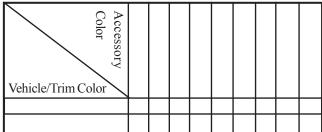

### **Recommended Sequence of Events**


Item #	Accessory	

#### Vehicle Service Parts (may be required for reassembly)

00016-79200-01	1	Keyless Entry Control Module
00016-34030-05	2	Keyless Entry Transmitter
00016-32901-01	1	Main Wiring Harness
00016-30960-56	1	On/Off Toggle Control Switch
00016-32901-02	1	Miscellaneous Hardware Kit
00016-30960-09	1	34" Headlight Extension Wire
		<b>.</b>

#### Legend

\* Mandatory

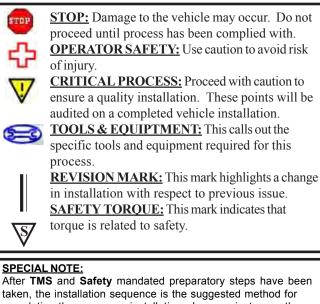

taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install and in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.