

2004 ELECTRICAL

Body Electrical Connectors & Harnesses - TSX

CONNECTORS AND HARNESSSES

CONNECTOR INDEX

Identification numbers have been assigned to in-line connectors. The number is preceded by the letter "C" for connectors, "G" for ground terminals or "T" for non-ground terminals.

2004 Acura TSX

2004 ELECTRICAL Body Electrical Connectors & Harnesses - TSX

Harness	Location		
	Engine Compartment	Dashboard	Others (Floor, Door, Trunk, and Roof)
Battery ground cable	(-) G1		
Engine ground cable A	T1 G2		
Engine ground cable B	T2 G3		
Starter subharness	C101 and C151 T101 through T104 (+)		
Engine Wire harness	C101 and C102 C152 G101	C201 and C251	
Transmission range switch subharness	C152		
Front engine compartment wire harness (right branch)	G201		
Front engine compartment wire harness (left branch)	C301 G301		
Engine compartment wire harness (right branch)	G202 and G203		
Engine compartment wire harness (left branch)	C151 and C301 G302	C401 through C404	
Dashboard wire harness (left branch)		C401 through C407, C451, C501 and C502, C601, C851 G501 and G502, G504	
Dashboard wire harness (right branch)		C201, C551 through C556, C651, C731 and C732 G503, G505 and G506	
Floor wire harness (left side)		C501 and C502	C701, C751 and C901 G601 and G603
Floor wire harness (right side)		C551 and C552	C781 and C801 G602
Rear window defogger ground wire			G604
Rear wire harness			C702 and C703 G701
Roof wire harness		C601 and C651	
Cable reel subharness		C451	
Throttle actuator control module subharness		C251	
Driver's door wire harness			C631 and C632
Driver's door subharness			C631 and C632
Front passenger's door wire harness			C731 and C732
Left rear door wire harness			C751
Right rear door wire harness			C781
OPDS unit harness			
Side curtain airbag harness			
Driver's seat wire harness			C901
A/C wire harness		C851	

G01820782

Fig. 1: Connector Index

CONNECTOR TO HARNESS INDEX

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
G1	6		Left side of engine compartment	Body ground, via battery ground cable	
(-)	5		Battery	Battery negative terminal	

G01820783

Fig. 2: Battery Ground Cable

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
T1	2		Right side of engine compartment	Body ground, via battery ground cable	
G2	1		Right side of engine compartment	Body ground, via engine ground cable A	


G01820784

Fig. 3: Engine Ground Cable A

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
T2	3		Left side of engine compartment	Transmission housing	
G3	4		Left side of engine compartment	Body ground, via engine ground cable B	

G01820785

Fig. 4: Engine Ground Cable B

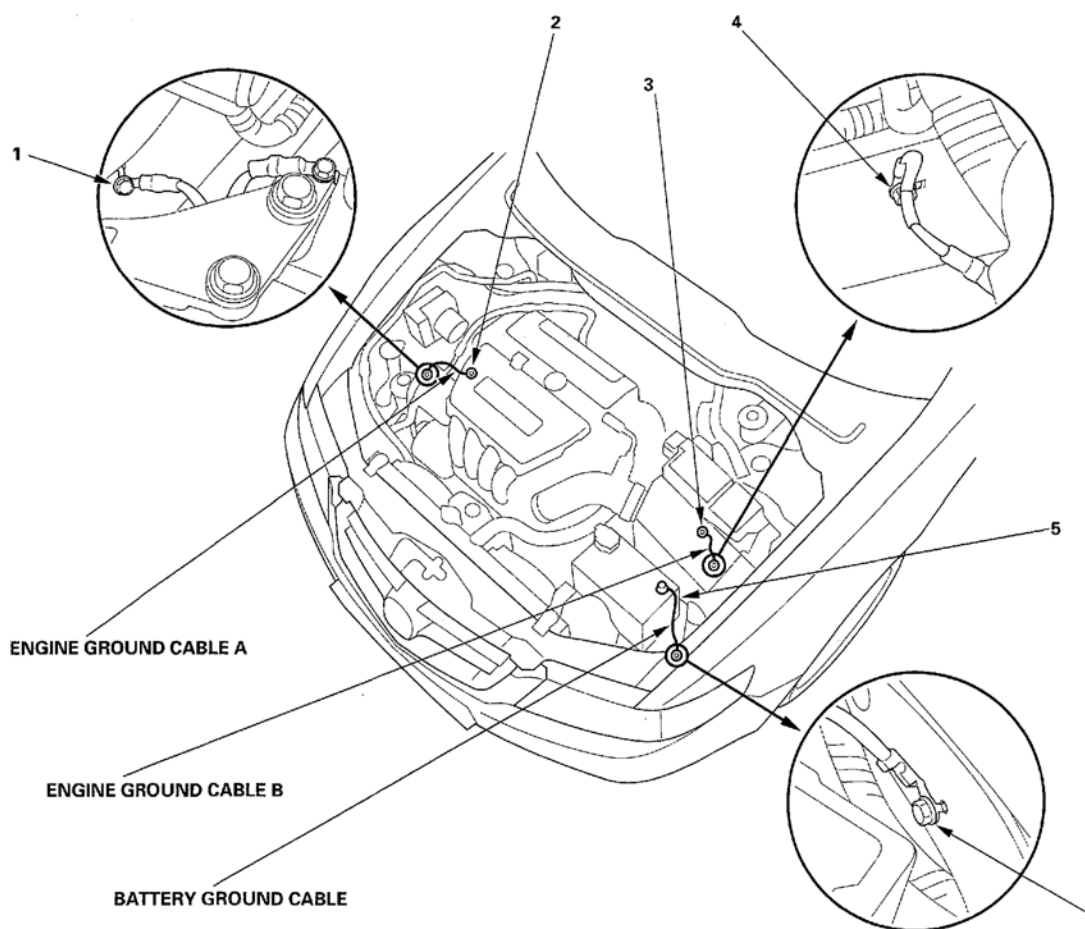

G01820786

Fig. 5: Locating Cables