


Date	Group	No.	Release	Page
11.07	284	102 05		1(20)

MID 128 Engine control unit, fault codes

MID 128 Engine control unit, fault codes

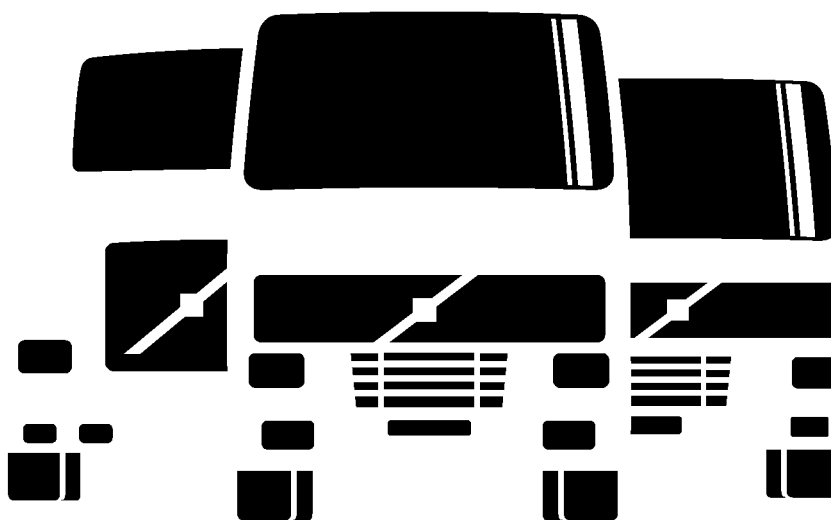

T0009739

Contents

- "MID 128 Engine control unit, fault codes" page 2
- "Engine control unit, check" page 9
- "SCRT, fault tracing" page 19

MID 128 Engine control unit, fault codes

Note: More information about fault codes is available in Guided Diagnostics

Fault code	Function	FMI	Fault
PID26	Fan speed	3	Signal not available Short-circuit+, signal cable Short-circuit-, signal cable Open-circuit, signal cable Open-circuit, earth cable
		8	Interference in the signal cable.
PID45	Pre-heater relay	3	Short-circuit+
		4	Short-circuit-
		5	Open-circuit
PID84	Vehicle speed	9	Signal absent from VECU (MID144)
PID85	Cruise control status	9	Signal absent from CC
PID91	Pedal message	9	Signal absent from VECU (MID144)
PID94	Fuel pressure	1	Pressure critically low
		3	Short-circuit+ Signal cable Open-circuit Earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
		7	Low pressure
PID97	Water in the fuel sensor	3	Short-circuit+, signal cable
		4	Short-circuit-, signal cable
PID98	Oil level	1	Below the range
		4	Short-circuit-, positive side
		5	Short-circuit+, positive side Open-circuit, positive side Open-circuit, negative side
PID100	Oil pressure	1	Below the range
		3	Short-circuit+, signal cable Open-circuit, earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
PID 102	Charge pressure	0	Below the range
		2	Incorrect
		3	Short-circuit+, signal cable Open-circuit, earth cable
		5	Open-circuit, 5V supply cable Short-circuit-, signal cable Open-circuit, signal cable
PID105	Charge air temperature	2	Incorrect
		4	Short-circuit-, signal cable