



Specifications

3100 HEUI Diesel Truck Engine

8WL1-Up
1WM1-Up
4ES1-Up
2CW1-Up
8HW1-Up
7LZ1-Up

**Engines Equipped With
Hydraulically Actuated Electronic Unit Injectors (HEUI)**

Important Safety Information

Most accidents involving product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards. This person should also have the necessary training, skills and tools to perform these functions properly.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "WARNING" as shown below.



The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning, explaining the hazard, can be either written or pictorially presented.

Operation that may cause product damage are identified by NOTICE labels on the product and in this publication.

Caterpillar cannot anticipate every possible circumstance that might involve a potential hazard. The warning in this publication and on the product are therefore not all inclusive. If a tool, procedure, work method or operating technique not specifically recommended by Caterpillar is used, you must satisfy yourself that it is safe for you and others. You should also ensure that the product will not be damaged or made unsafe by the operation, lubrication, maintenance or repair procedures you choose.

The information, specifications, and illustrations in this publication are on the basis of information available at the time it was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service given to the product. Obtain the complete and most current information before starting any job. Caterpillar dealers have the most current information available. For a list of the most current publication form numbers available, see the Service Manual Contents Microfiche, REG1139F.

Index

Specifications

Air Compressor	34
Air Inlet And Exhaust System	
Air Inlet Elbow	13
Ether Starting Aid	33
Inlet Air Heater	33
Camshaft	11
Cylinder Head	10
Exhaust Manifold	12
Turbocharger	12
Valve Cover	10
Valve Rocker Arms And Lifters	9
Valves	9
Basic Engine Components	
Adapter Group (Engine To Transmission)	31
Connecting Rod	22
Connecting Rod And Main Bearing Journals	23
Crankshaft	21
Crankshaft Pulley Group	21
Crankshaft Seals	20
Cylinder Block	18
Cylinder Block Cover Group	20
Flywheel	26
Flywheel Housing	26
Flywheel Housing Bore	28
Flywheel Housing Runout	28
Flywheel Runout	27
Front Gear Group	24
Front Housing	25
Front Housing Cover	25
Piston Cooling Jet	19
Pistons And Rings	22
Cooling System	
Belt Tension Chart	16
Fan Drive	17
Water Pump	15
Water Pump Belt Tightener	16
Water Temperature Regulator	17
Electrical System	
Alternator	32
Electric Starting Motor	32
Electronic Control Group (Wiring And Sensors)	30
Inlet Air Heater	33
Regulator	33
Wiring Group (Air Inlet Heater)	34
Engine Design	4
Fuel System	
Fuel Heater And Water Separator	6
Fuel Lines Group	5
Fuel Filter Lines Group	5
Fuel Transfer Pump	8
High Pressure Oil Pump	8
Hydraulic Electronic Unit Injector (HEUI)	6

Hydraulic Oil Lines	7
Hydraulic Pump Group	8
Injection Actuation Pressure Control Valve	8
Lubrication System	
Breather (Crankcase)	14
Engine Oil Pressure	15
Oil Cooler Bypass Valve	14
Oil Filter Base	14
Oil Pump	13

NOTE: Refer to the complete Service Manual for information not found here.

Introduction

The specifications given in this book are on the basis of information available at the time the book was written. These specifications give the torques, operating pressures, measurements of new parts, adjustments and other items that will affect the service of the product.

When the words "use again" are in the description, the specification given can be used to determine if a part can be used again. If the part is equal to or within the specification given, use the part again.

When the word "permissible" is in the description, the specification given is the "maximum or minimum" tolerance permitted before adjustment, repair and/or new parts are needed.

A comparison can be made between the measurements of a worn part and the specifications of a new part to find the amount of wear. A part that is worn can be safe to use if an estimate of the remainder of its service life is good. If a short service life is expected, replace the part.


NOTE: The specifications given for "use again" and "permissible" are intended for guidance only and Caterpillar Inc. hereby expressly denies and excludes any representation, warranty or implied warranty of the reuse of any component.

Reference: See 3100 HEUI Diesel Truck Engine, SENR6558, for Systems Operation, Testing and Adjusting.

Specifications

Engine Design

8WL1-UP

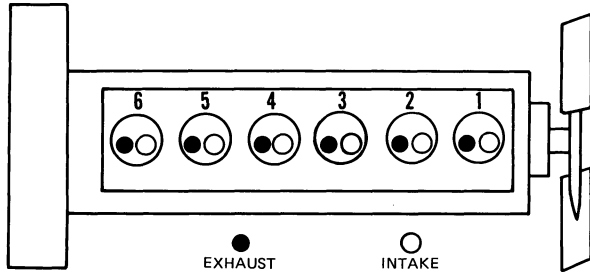


C21097P1

Cylinder And Valve Location

Bore	105.025 ± 0.025 mm (4.134 ± 0.0010 in)
Stroke	127 mm (5.0 in)
Displacement	6.6 liter (403 cu in)
Number Of Cylinders	6
Cylinder Arrangement	In-line
Valves Per Cylinder	2
Valve Lash Setting	
Intake	0.38 mm (.015 in)
Exhaust	0.64 mm (.025 in)
Type of Combustion	Direct Injection
Firing Order	1-5-3-6-2-4
Direction of Crankshaft Rotation (when viewed from flywheel end)	Counterclockwise

NOTE: Front end of engine is opposite the flywheel end. Left side and right side of engine are as viewed from flywheel end. No. 1 cylinder is the front cylinder.

1WM1-UP

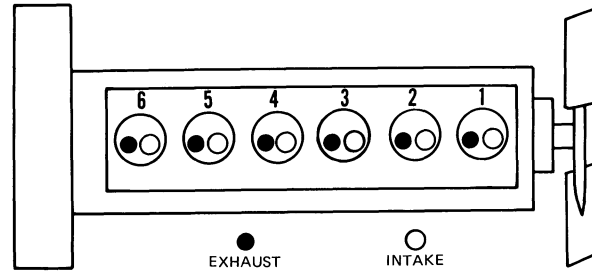


C21097P1

Cylinder And Valve Location

Bore	110.025 ± 0.025 mm (4.331 ± 0.0010 in)
Stroke	127 mm (5.0 in)
Displacement	7.25 liter (442 cu in)
Number Of Cylinders	6
Cylinder Arrangement	In-line
Valves Per Cylinder	2
Valve Lash Setting	
Intake	0.38 mm (.015 in)
Exhaust	0.64 mm (.025 in)
Type of Combustion	Direct Injection
Firing Order	1-5-3-6-2-4
Direction of Crankshaft Rotation (when viewed from flywheel end)	Counterclockwise

NOTE: Front end of engine is opposite the flywheel end. Left side and right side of engine are as viewed from flywheel end. No. 1 cylinder is the front cylinder.


Fuel Lines Group

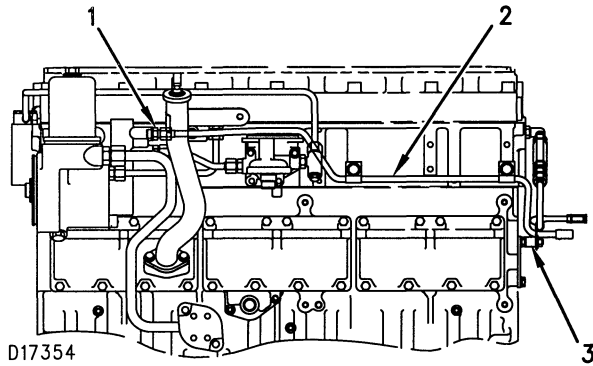

Left Side Of Engine

- (1) Fuel inlet port.
- (2) Tube assembly (fuel from tank).
- (3) Spacer.

Fuel Filter Lines Group

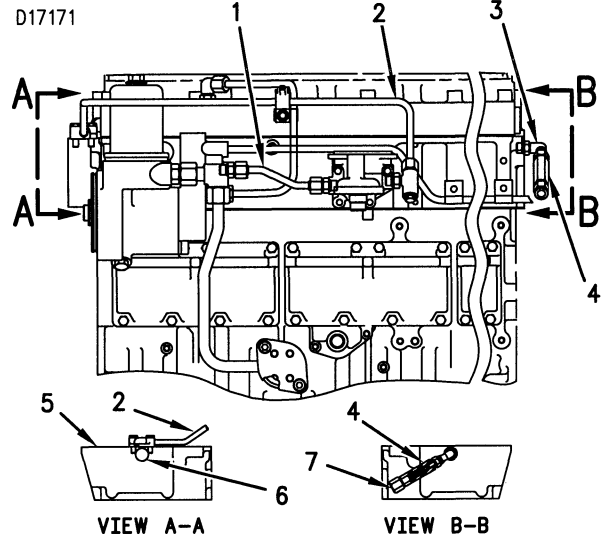


Left Side Of Engine.

- (1) Tube assembly (fuel transfer pump to fuel filter).
- (2) Tube assembly (fuel filter to fuel gallery).
- (3) Fitting (fuel return to tank).
- (4) Regulating valve assembly (maintains minimum fuel system pressure).
Minimum at low idle 400 kPa (58 psi)

NOTE: Refer to the Testing and Adjusting Section of the Service Manual, for the procedure to check the fuel pressure.


- (5) Cylinder head.
- (6) Fuel gallery.
- (7) Fuel outlet port.

Fuel Heater And Water Separator (If Equipped)

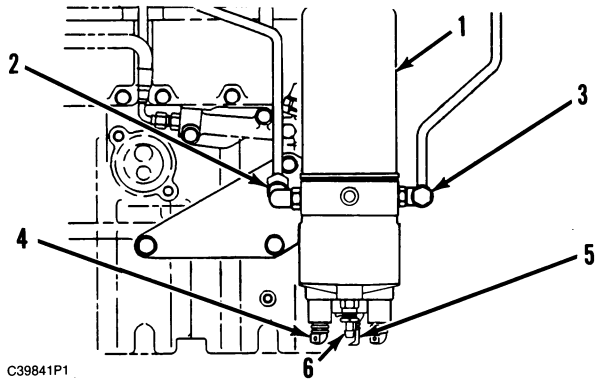



- (1) Fuel filter.
- (2) Fuel inlet.
- (3) Fuel outlet.
- (4) Heater 12 V/150 W
- (5) Temperature sensor.
 Fuel temperature 2°C (35°F) ON
 Fuel Temperature 7°C (45°F) OFF
- (6) Drain.

Hydraulic Electronic Unit Injector (HEUI)

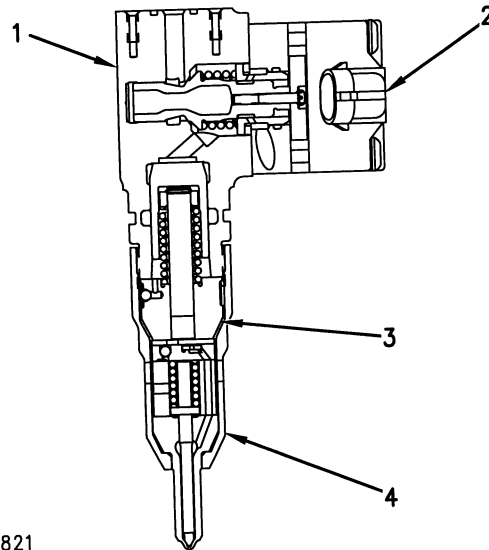

- (1) Body group.
- (2) Solenoid valve assembly.
- (3) Barrel group.
- (4) Nozzle group.
Six orifices evenly spaced.

Hydraulic Oil Lines

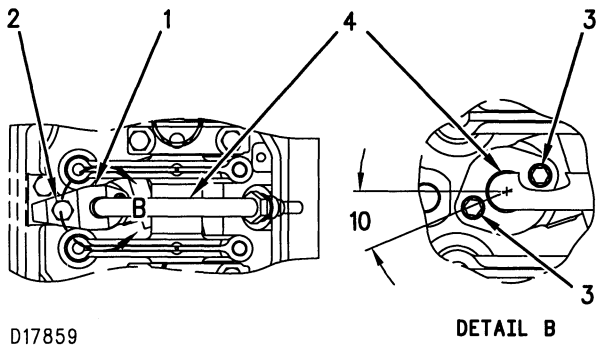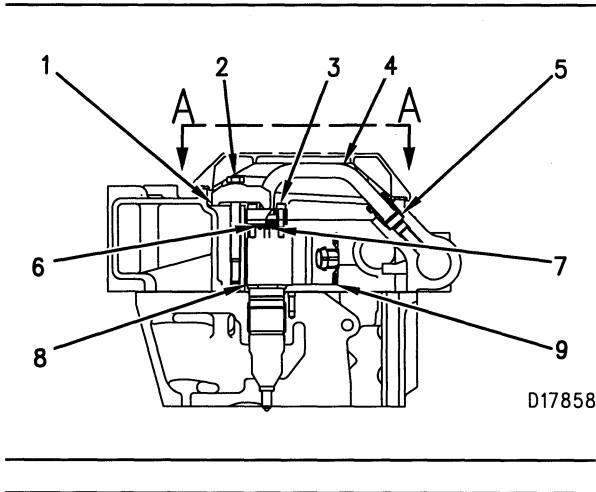

Section View A-A.

- (1) Injector hold-down clamp.
- (2) Bolt. Tighten to torque $30 \pm 7 \text{ N}\cdot\text{m}$ ($22 \pm 5 \text{ lb ft}$)
- (3) Bolt. Tighten to torque $5 \pm 0.5 \text{ N}\cdot\text{m}$ ($45 \pm 4 \text{ lb in}$)
- (4) Jumper tube assembly.
Tighten flare nut to $40 \pm 5 \text{ N}\cdot\text{m}$ ($30 \pm 4 \text{ lb ft}$)

NOTE: See jumper tube (installation) for injector orientation and installation in this module.

- (5) Orifice fitting. Tighten to a torque $25 \pm 3 \text{ N}\cdot\text{m}$ ($18 \pm 2 \text{ lb ft}$)
- (6) Seat.
- (7) O-ring.
- (8) Hydraulic electronic unit injector.
- (9) Solenoid.
- (10) Angle of bolt orientation with jumper tube assembly (4). $26 \pm 3 \text{ degrees}$

Hydraulic electronic unit injector orientation/jumper tube installation:

Rotate hydraulic electronic unit injector (8) until the solenoid (9) touches the rear rocker stand. Rotate the hydraulic electronic unit injector (8) back 1.0 to 6.0 mm (.039 to .236 in). This will orient the injector in the cylinder head correctly.

Install orifice fitting (5) with O-ring and tighten to a torque of $25 \text{ N}\cdot\text{m}$ (18 lb ft). Install O-ring (7) into the top groove of the hydraulic electronic unit injector.


Position flare seat on center of the hydraulic electronic unit injector (8). Install jumper tube assembly (4) into manifold end first, then onto flare seat on the hydraulic electronic unit injector. Start flare nut into manifold and tighten by hand ensuring the flare is seated on the fitting (5). Install the bolts (3) at the hydraulic electronic unit injector end of jumper tube assembly (4) making sure that seat (6) is correctly positioned under the injector end of the jumper tube assembly (4).

Tighten evenly until hand tight. Install hydraulic electronic unit injector hold-down clamp (1) and tighten to $10 \text{ N}\cdot\text{m}$ (7 lb ft). This should "bottom" the hydraulic electronic unit injector (8) in its bore and position the jumper tube flange parallel to the hydraulic electronic unit injector's top surface.

NOTE: The jumper tube should not "rock" by hand after the bolt is torqued. If it does, increase torque up to $20 \text{ N}\cdot\text{m}$ (15 lb ft).

Torque flare nut at manifold end to $40 \text{ N}\cdot\text{m}$ (30 lb ft). Remove hydraulic electronic unit injector hold-down clamp (1). Torque the hydraulic electronic unit injector's bolts (3) to $2 \text{ N}\cdot\text{m}$ (18 lb in), then re-torque to $5 \text{ N}\cdot\text{m}$ (45 lb in). Install hold-down clamp (1) and torque bolt (2) to $30 \text{ N}\cdot\text{m}$ (22 lb ft).

Hydraulic Pump Group (Fuel Transfer And High Pressure Oil Pumps)

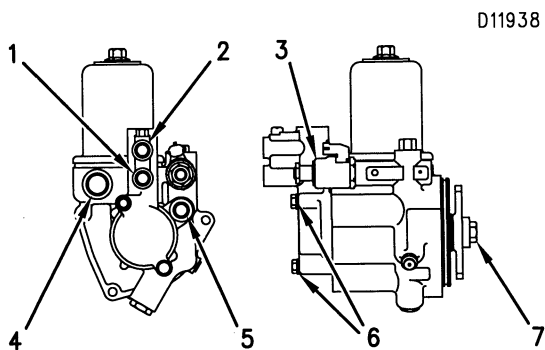


- (1) Fuel pump outlet. Final installation into pump, tighten to a torque of $35 \pm 3 \text{ N}\cdot\text{m}$ ($26 \pm 2 \text{ lb ft}$)
- (2) Fuel pump inlet. Final installation, tighten to a torque of $35 \pm 3 \text{ N}\cdot\text{m}$ ($26 \pm 2 \text{ lb ft}$)
- (3) Injection actuation pressure control valve.

NOTICE

Removal procedure for the injection actuation pressure control valve requires extreme caution. First, disconnect electrical connection. Second, remove injection actuation pressure control valve's solenoid assembly. Third, remove the Injection actuation pressure control valve using the crow's foot with an extension.


- (4) Oil pump inlet fitting. Final installation, tighten to a torque of $26 \pm 3 \text{ N}\cdot\text{m}$ ($19 \pm 2 \text{ lb ft}$)
- (5) Oil pump outlet fitting. Final installation, tighten to a torque of $17 \pm 2 \text{ N}\cdot\text{m}$ ($13 \pm 1 \text{ lb ft}$)
- (6) Bolt. Tighten to a torque of $25 \pm 3 \text{ N}\cdot\text{m}$ ($18 \pm 2 \text{ lb ft}$)
- (7) Bolt. Tighten to a torque of $110 \pm 14 \text{ N}\cdot\text{m}$ ($80 \pm 10 \text{ lb ft}$)

Injection Actuation Pressure Control Valve

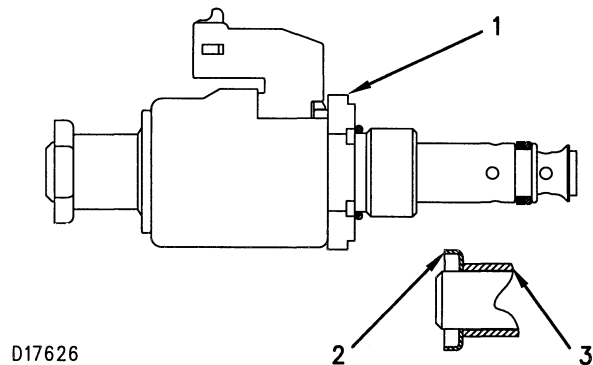

- (1) Injection actuation pressure control valve. Final installation, tighten to a torque of $50 \pm 5 \text{ N}\cdot\text{m}$ ($37 \pm 4 \text{ lb ft}$)
- (2) Spacer.
- (3) Nut. Final installation, tighten to a torque of $5.5 \pm 1.5 \text{ N}\cdot\text{m}$ ($49 \pm 13 \text{ lb in}$)


Valve Rocker Arms And Lifters

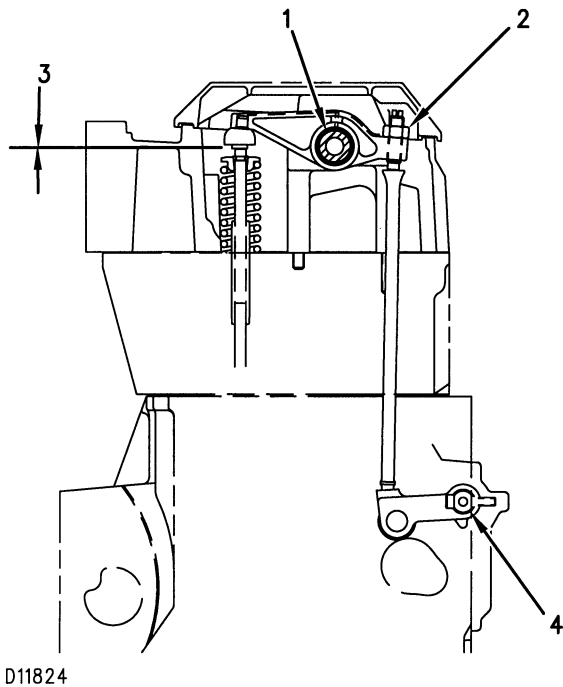

D11824

- (1) Bore in rocker arm for shaft (new) 24.808 ± 0.020 mm
(0.9767 ± 0.0008 in)
Diameter of shaft (new) 24.755 ± 0.010 mm
(0.9746 ± 0.0004 in)
- (2) Torque for locknut 25 ± 7 N•m (18 ± 5 lb ft)
- (3) Valve lash:
Intake valves 0.38 mm (0.015 in)
Exhaust valves 0.64 mm (0.025 in)
- (4) Bore in lifter arm for shaft (new) 15.670 ± 0.012 mm
(0.6169 ± 0.0005 in)
Diameter of shaft (new) 15.620 ± 0.012 mm
(0.6150 ± 0.0005 in)
Tighten bolts to a torque of 13 ± 3 N•m (10 ± 2 lb ft)

Valves

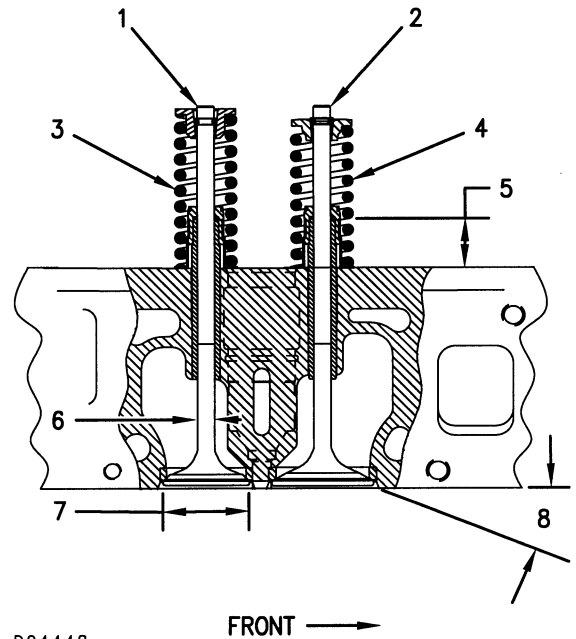

D04448


NOTE: Intake and exhaust valve stems are to be coated with engine oil prior to installation in the cylinder head.

NOTE: Intake and exhaust valve tips are to be coated with 8T2988 Camshaft Break In Lubricant (only after assembly of the retainer).

- (1) Exhaust valve.
- (2) Intake valve.
- (3) 6I2307 Spring for exhaust valve.
Free length 81.0 mm (3.19 in)
Assembled length 70.8 mm (2.79 in)
Load at assembled length 612 ± 31 N (140 ± 7 lb)
Minimum operating length 59 mm (2.3 in)
Load at minimum operating length 1325 ± 66 N
(300 ± 15 lb)
- (4) 7C4273 Spring for intake valve.
Free length 71.0 mm (2.80 in)
Assembled length 65.86 mm (2.593 in)
Load at assembled length 217 ± 22 N (49 ± 5 lb)
Minimum operating length 50.7 mm (2.00 in)
Load at minimum operating length 858 ± 43 N
(190 ± 10 lb)
- (5) Height to top of valve guides 23.00 ± 0.50 mm
(0.906 ± 0.020 in)
Install valve guide with 12.065 mm (0.4750 in) diameter on spring side of the head.

Assemble with seal seated against top of valve guide.

- (6) Diameter of valve stems (new) 8.000 ± 0.008 mm
(0.3150 ± 0.0003 in)
"Use again" minimum diameter of valve stems 7.965 mm (0.3136 in)
Bore in valve guides with guides installed in head 8.072 ± .013 mm (0.3178 ± 0.0005 in)
"Use again" maximum bore in valve guides with guides installed in head 8.080 mm (0.3181 in)
- (7) Diameter of valve head:
Intake valve 47.00 ± 0.13 mm (1.850 ± 0.005 in)
Exhaust valve 40.00 ± 0.13 mm (1.575 ± 0.005 in)
- (8) Angle of valve faces:
Intake valve 29 ¾ ± ¼ degrees
Exhaust valve 45 ± ¼ degrees

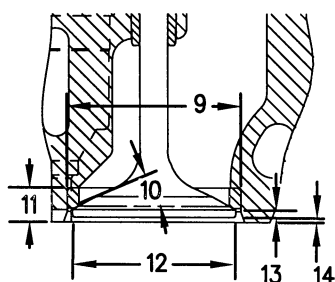

D04449

- (9) Diameter of valve seat inserts:
Intake valve 50.000 ± 0.013 mm (1.9685 ± 0.0005 in)
Exhaust valve .. 43.000 ± 0.013 mm (1.6929 ± 0.0005 in)
Bore in head for valve seat insert:
Intake valve 49.931 ± 0.013 mm (1.9658 ± 0.0005 in)
Exhaust valve .. 42.931 ± 0.013 mm (1.6902 ± 0.0005 in)
Valve seat insert must be shrunk by reduced temperature before installing in head.
- (10) Angle of valve seat inserts:
Intake valve 30 ¼ ± 1 degrees
Exhaust valve 45 ½ ± 1 degrees
- (11) Depth of bore in head for valve seat insert 10.00 ± 0.13 mm (0.394 ± 0.005 in)
- (12) Outside diameter of the seating face of the valve seat insert:
Intake valve 44.029 ± 0.085 mm (1.733 ± 0.0033 in)
Exhaust valve 38.077 ± 0.046 mm (1.500 ± 0.0018 in)


NOTE: Do not reuse or recondition valve seat inserts if the outside diameter is greater than specified.

- (13) "Use again" thickness of valve lip:
Intake valve 1.80 mm (0.071 in)
Exhaust valve 1.50 mm (0.059 in)

- (14) Distance from head of valve to the cylinder head face (valve closed):
Exhaust valve
Maximum permissible 2.85 mm (0.112 in)
Minimum permissible 2.67 mm (0.105 in)
Intake valve
Maximum permissible 2.05 mm (0.081 in)
Minimum permissible 1.13 mm (0.044 in)

NOTE: For further information refer to: Guidelines for Reusable Parts and Salvage Operations, SEBF8218.


Valve Cover

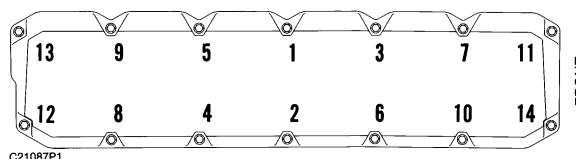

Valve Cover Bolts Tightening Sequence

Tighten valve cover bolts in sequence shown to a torque of 12 ± 3 N•m (9 ± 2 lb ft)

Cylinder Head

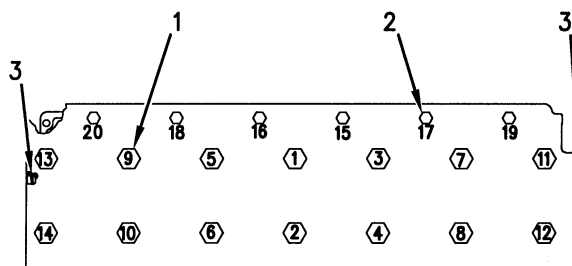


D04463

- (1) Large bolts (M20).
(2) Small bolts (M10).

Instructions for installing bolts (1) and (2): Put engine oil on the threads of the bolts and tighten them as follows:

- a. Tighten large bolts in number sequence shown to a torque of $150 \pm 15 \text{ N}\cdot\text{m}$ ($110 \pm 11 \text{ lb ft}$)
- b. Tighten large bolts in number sequence shown to a torque of $435 \pm 20 \text{ N}\cdot\text{m}$ ($320 \pm 15 \text{ lb ft}$)
- c. Retighten large bolts in number sequence shown to $435 \pm 20 \text{ N}\cdot\text{m}$ ($320 \pm 15 \text{ lb ft}$)
- d. Tighten small bolts in number sequence shown to a torque of $55 \pm 7 \text{ N}\cdot\text{m}$ ($41 \pm 5 \text{ lb ft}$)

- (3) Depth that all cup plugs are installed (measured from head face to top edge of plug) $1.25 \pm 0.25 \text{ mm}$ ($0.049 \pm 0.010 \text{ in}$)

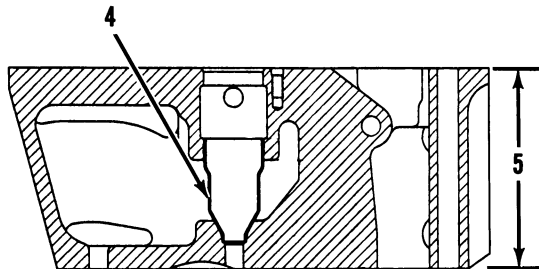


C21084P4

Cylinder Head Cross Section


- (4) Sleeve. For replacement of a hydraulic unit injector sleeve, refer to Using The 122-7093 Sleeve Replacement Tool Group, Special Instruction SEHS9120.
- (5) Height of cylinder head (new) $103.00 \pm 0.20 \text{ mm}$ ($4.055 \pm 0.008 \text{ in}$)

Camshaft

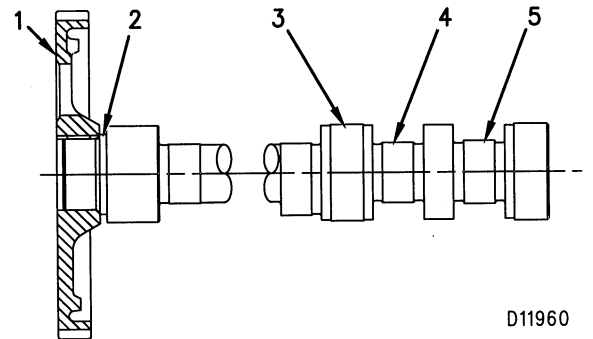

D11960

- (1) Gear. Heat to install (do not use a torch). Do not heat above 316°C (600°F)
- (2) Distance between shoulder of camshaft and gear for thrust washer (new) ... $4.83 \pm 0.05 \text{ mm}$ ($0.190 \pm 0.002 \text{ in}$)
Thickness of thrust washer (new) $4.70 \pm 0.03 \text{ mm}$ ($0.185 \pm 0.0012 \text{ in}$)
End play of the camshaft (new) $0.13 \pm 0.08 \text{ mm}$ ($0.005 \pm 0.0032 \text{ in}$)
Maximum permissible end play (worn) 0.46 mm (0.018 in)
- (3) Diameter of camshaft journals (new) $65.126 \pm 0.013 \text{ mm}$ ($2.5640 \pm 0.0005 \text{ in}$)
- (4) Intake lobe.
- (5) Exhaust lobe.

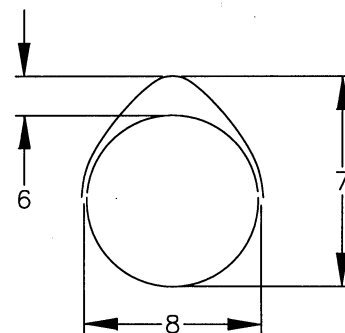

D11840


Typical Example

- (6) Height of camshaft lobes.

To find lobe height, use the procedure that follows:

- A. Measure camshaft lobe height (7).
- B. Measure base circle (8).
- C. Subtract base circle (STEP B) from lobe height (STEP A). The difference is actual lobe lift.
- D. Specified camshaft lobe lift (6) is:
 - Exhaust lobe 7.497 mm (0.2952 in)
 - Intake lobe 9.299 mm (0.3661 in)

Turbocharger

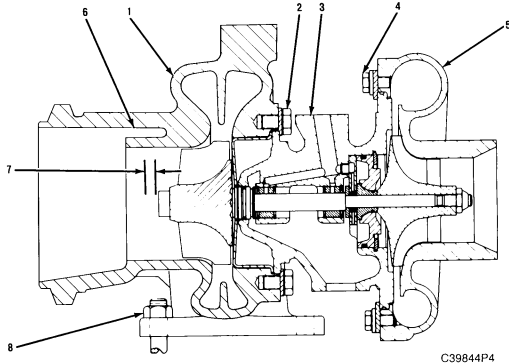


C39844P4

Typical Example

- (1) Turbine housing.
- (2) Apply 5P3931 Anti-Seize Compound to threads of bolts that hold turbine housing to turbocharger. Tighten to a torque of $15.8 \pm 0.5 \text{ N}\cdot\text{m}$ ($140 \pm 4 \text{ lb in}$)
- (3) Cartridge.
- (4) Tighten bolts that hold compressor housing to turbocharger cartridge to a torque of $7.3 \pm 0.5 \text{ N}\cdot\text{m}$ ($65 \pm 4 \text{ lb in}$)
- (5) Compressor housing.
- (6) Wastegate passage (internal passage in turbine housing).
- (7) End play for shaft 0.051 to 0.083 mm (0.0020 to 0.0033 in)
- (8) Apply 5P3931 Anti-Seize Compound. Tighten to a torque of $54 \pm 5 \text{ N}\cdot\text{m}$ ($40 \pm 4 \text{ lb ft}$)

Exhaust Manifold

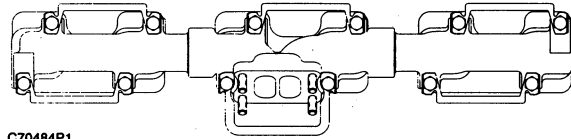


C70484P1

Typical Example Of A Three Piece Exhaust Manifold

NOTICE

The followed procedure should be used during assembly of the three piece exhaust manifold to the cylinder block. If 2P2333 Sealer is left on the inside of the exhaust manifold after assembly, it may cause damage to the turbocharger.

- 1. Coat inside diameter of female ends of manifold with engine oil.
- 2. Apply a thin coat of 2P2333 Sealer to outside diameter of the male ends of manifold before assembly. Do not apply sealer at tip of the male ends. Remove excess sealer from assembled joint.
- 3. Continue with procedure given for one piece exhaust manifold

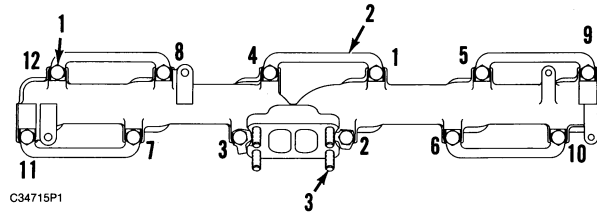


C34715P1

Typical Example Of A One Piece Exhaust Manifold

- (1) Apply 5P3931 Anti-Seize Compound to the threads of bolts and tighten as follows:
 - a. Tighten bolts 1 thru 12 in numerical sequence to $4 \pm 1 \text{ N}\cdot\text{m}$ ($35 \pm 9 \text{ lb in}$)
 - b. Retighten bolts 1 thru 12 in numerical sequence to $45 \pm 5 \text{ N}\cdot\text{m}$ ($33 \pm 4 \text{ lb ft}$)
- (2) Lock. Bend lock tabs over the flat of bolt heads.
- (3) Tighten studs to a torque of $35 \pm 5 \text{ N}\cdot\text{m}$ ($26 \pm 4 \text{ lb ft}$)


Air Inlet Elbow

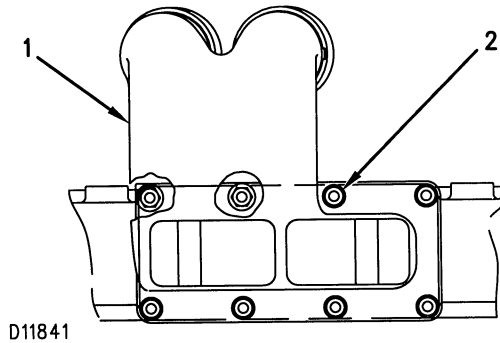


Typical Example.

- (1) Air Inlet Elbow. On elbow joint-face, clean face with solvent and apply 6V1541 Quick Cure Primer. Allow primer to air dry (three to five minutes minimum). Apply 1U8846 Gasket Maker to elbow joint-face and spread uniformly. Elbow must be assembled and tightened within ten minutes.
- (2) Bolt. Tighten bolts to a torque of $30 \pm 7 \text{ N}\cdot\text{m}$
($22 \pm 5 \text{ lb ft}$)

Oil Pump

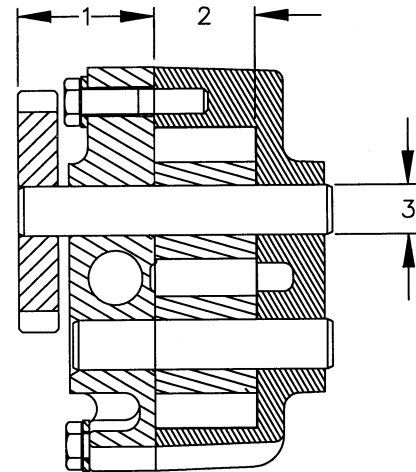


Section View Through Pump Gears
(Typical Example)

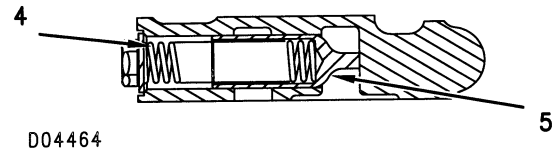

Section View Through Bypass Valve


- (1) Distance between outside face of gear and joint face of body $43.00 \pm 0.25 \text{ mm}$ ($1.693 \pm 0.010 \text{ in}$)
- (2) Length of gears ... $33.000 \pm 0.025 \text{ mm}$ ($1.300 \pm 0.001 \text{ in}$)
Depth of bores for gears $33.13 \pm .016 \text{ mm}$
($1.304 \pm 0.0006 \text{ in}$)
- (3) Diameter of gear shafts $15.600 \pm 0.005 \text{ mm}$
($0.6142 \pm 0.0002 \text{ in}$)
Bores in pump bodies for gear shafts $15.641 \pm 0.008 \text{ mm}$ ($0.6158 \pm 0.0003 \text{ in}$)
- (4) 105-1805 Spring for relief valve:
Outside diameter 13 mm (0.51 in)
Free length 64.98 mm (2.558 in)
Assembled length 54.5 mm (2.15 in)
Load at assembled length $51.99 \pm 1.9 \text{ N}$ ($12 \pm 0.4 \text{ lb}$)
- (5) Relief valve plunger:
Diameter of plunger $17.000 \pm 0.013 \text{ mm}$
($0.6693 \pm 0.0005 \text{ in}$)
Bore in pump body for plunger $17.100 \pm 0.025 \text{ mm}$
($0.6732 \pm 0.0010 \text{ in}$)

Breather (Crankcase)

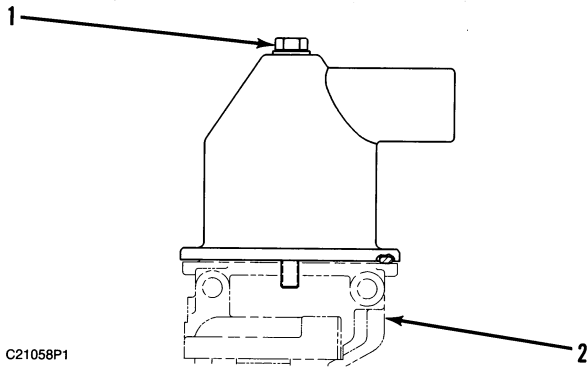

- (1) Bolt. Tighten to a torque of $7 \pm 2 \text{ N}\cdot\text{m}$ ($62 \pm 18 \text{ lb in}$)
- (2) Fuel filter base.

Oil Filter Base

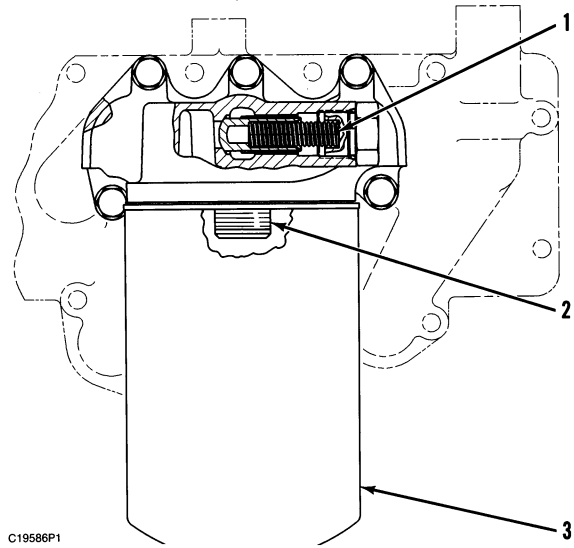


Typical Example

- (1) Oil filter bypass valve to open at $125 \pm 30 \text{ kPa}$
($18 \pm 4.5 \text{ psi}$)

9L9188 Spring for bypass valve:
 Outside diameter 11.2 mm (0.44 in)
 Free length 57.9 mm (2.28 in)
 Assembled length 43.2 mm (1.70 in)
 Load at assembled length $15.6 \pm 1.3 \text{ N}$ ($3.50 \pm .30 \text{ lb}$)

- (2) Put 9S3263 Thread Lock on the last $7.5 \pm 1.5 \text{ mm}$ ($0.30 \pm 0.06 \text{ in}$) of the threads at base end of stud and tighten filter element stud to $68 \pm 7 \text{ N}\cdot\text{m}$ ($50 \pm 5 \text{ lb ft}$)
- (3) Put clean engine oil on the filter seal. Tighten filter until seal makes contact with filter base. Turn the filter 270 degrees ($\frac{3}{4}$ of one turn) more.

Oil Cooler Bypass Valve

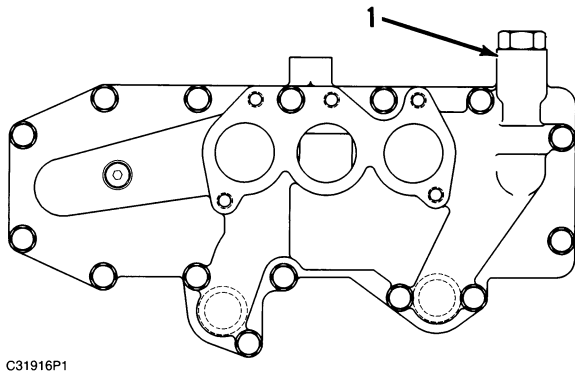

Typical Example

- (1) Oil cooler bypass valve to open at $125 \pm 30 \text{ kPa}$
($18 \pm 4.5 \text{ psi}$)

9L9188 Spring for oil cooler bypass valve:
 Outside diameter 11.2 mm (0.44 in)
 Free length 57.9 mm (2.28 in)
 Assembled length 43.2 mm (1.70 in)
 Load at assembled length ... $15.6 \pm 1.3 \text{ N}$ ($3.50 \pm 0.30 \text{ lb}$)

Engine Oil Pressure


All steps of this procedure must be followed for the pressure findings to be usable.

1. Be sure that the engine is filled to the correct level with SAE 10W-30 oil. If any other viscosity of oil is used, the information in the Engine Oil Pressure Graph does not necessarily apply.
2. Remove the oil pressure switch and connect the 1U5470 Engine Pressure Group to the main oil manifold at the location from which the oil pressure switch was removed.
3. Run the engine to get the engine oil temperature at 99°C (210°F).

NOTE: A 3°C (5°F) increase in temperature gives approximately 7 kPa (1 psi) decrease in engine oil pressure.

NOTE: Make sure engine oil temperature does not go above 115°C (239°F).

4. Keep the engine oil temperature constant with the engine at its rated rpm and read the pressure gauge.
5. On the Engine Oil Pressure Graph, find the point that the lines for engine rpm and oil pressure intersect (connect).

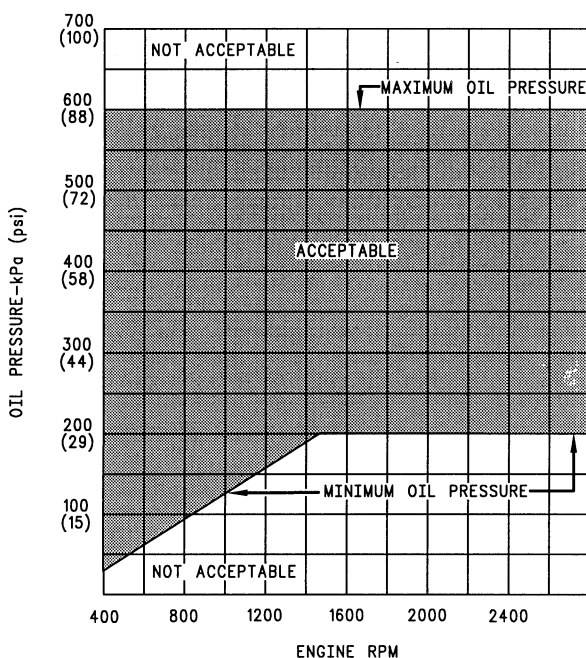


D17880

6. If the results do not fall within the "ACCEPTABLE" pressure range given in the graph, find the cause and correct it. Engine failure or a reduction in engine life can be the result if engine operation is continued with oil manifold pressure outside this range.

NOTE: A record of engine oil pressure, kept at regular intervals, can be used as an indication of possible engine problems or damage. If there is a sudden increase or decrease of 70 kPa (10 psi) in oil pressure, even though the pressure is in the "ACCEPTABLE" range on the graph, the engine should be inspected and the problem corrected.

Water Pump

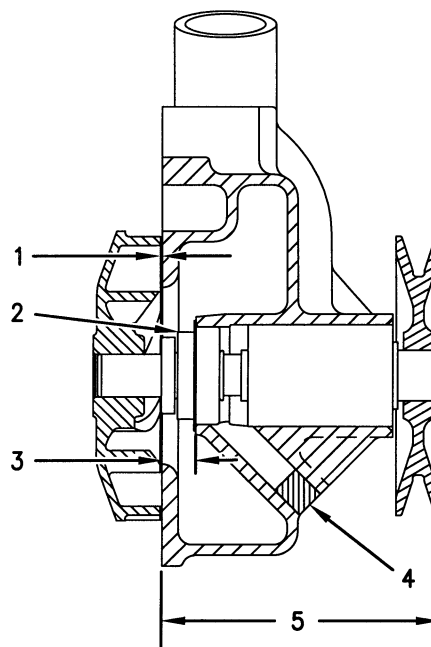


D17663

Shown With Impeller Cover Removed

- (1) Clearance between impeller and housing 0.75 ± 0.25 mm (0.030 ± 0.010 in)
- (2) Seal.
- (3) Working height of seal 12.83 ± 0.13 mm ($.505 \pm 0.005$ in)
- (4) Filter. Filter should not extend beyond the surface of the housing.
- (5) Dimension from front face of pulley to face of housing 103.8 ± 0.3 mm (4.09 ± 0.01 in)

Water Pump Belt Tightener

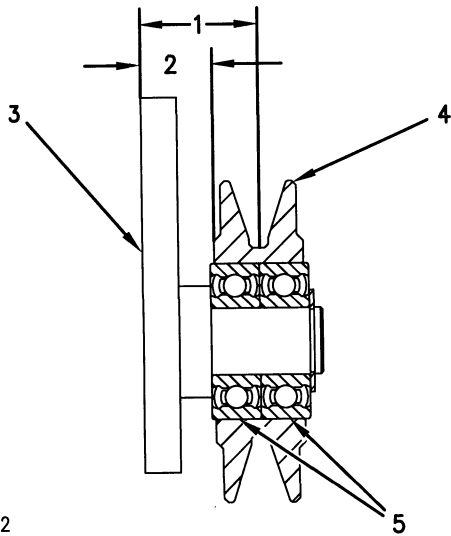

D17172

Idler Pulley Assembly

- (1) Distance from back of plate assembly (3) to middle of pulley (4) 26.0 ± 0.3 mm (1.02 ± 0.012 in)
- (2) Distance from back of plate assembly (3) to back of pulley (4) 16.0 ± 0.3 mm (0.63 ± 0.01 in)
- (3) Plate Assembly.
- (4) Pulley.
- (5) Apply 9S3263 Thread Lock to the pulley bore before assembly.


BELT TENSION CHART								
BELT SIZE	WIDTH BELT TOP		GAUGE READING				BORROUGHS GAUGE NUMBERS	
			BELT TENSION "INITIAL"*		BELT TENSION "USED"**		OLD GAUGE NUMBER	NEW GAUGE NUMBER
	MM	IN	N	LB	N	LB		
3/8	10.72	0.422	445 ± 22	100 ± 5	400 ± 22	90 ± 10	BT-33-95	BT-33-97
1/2	13.89	0.547	534 ± 22	120 ± 5	400 ± 44	90 ± 10	BT-33-95	BT-33-97
5V	15.88	0.626	534 ± 22	120 ± 5	400 ± 44	90 ± 10	BT-33-72	BT-33-72C
11/16	17.48	0.688	534 ± 22	120 ± 5	400 ± 44	90 ± 10	BT-33-72	BT-33-72C
3/4	19.05	0.750	534 ± 22	120 ± 5	400 ± 44	90 ± 10	BT-33-72	BT-33-72C
15/16	23.83	0.983	534 ± 22	120 ± 5	400 ± 44	90 ± 10	BT-33-72	BT-33-77
8K	27.92	1.099	800 ± 22	180 ± 5	489 ± 44	110 ± 10	-----	BT-33-109
6PK	20.94	0.824	667 ± 22	150 ± 5	467 ± 44	105 ± 10	-----	BT-33-109

MEASURE TENSION OF BELT FARTHEST FROM ENGINE

* BELT TENSION "INITIAL" is for a new belt.
 ** BELT TENSION "USED" is for a belt with over 30 minutes of operation at rated speed.

D01599

Water Temperature Regulator

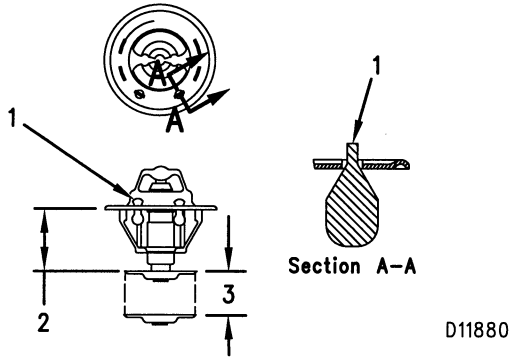


Full open temperature 93°C (199°F)

- (1) Air vent valve
- (2) Closed dimension 29.5 ± 0.5 mm (1.16 ± 0.02 in)
- (3) Minimum stroke at full open temperature 8.0 mm (.32 in)


NOTE: Regulator is rated as 82.2°C (180°F).

Fan Drive

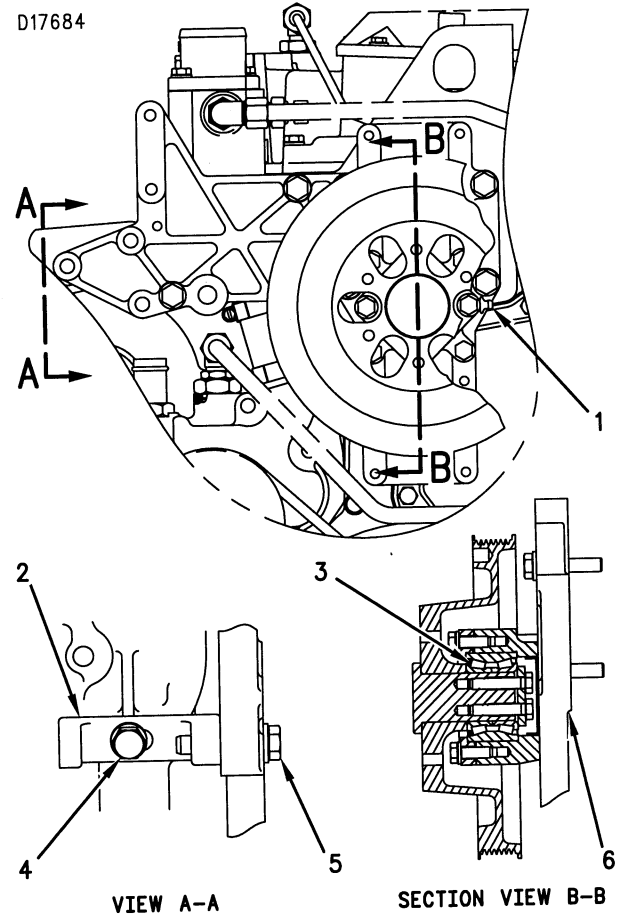


- (1) Grease fitting. Fill bearing cavity with 20 grams (0.7 ounces) of 2S3230 Bearing Lubricant.
- (2) Bracket. Assembly procedure for bracket.
 - a. Tighten bolt (4) finger tight (into water temperature housing).
 - b. Tighten bolt (5) finger tight into bracket (3).
 - c. Tighten bolts (4) and (5) to 55 ± 10 N•m (40 ± 7 lb ft).
- (3) Bearing assembly. Install lip seal forward.
- (4) Bolt.
- (5) Bolt.
- (6) Support.

Cylinder Block

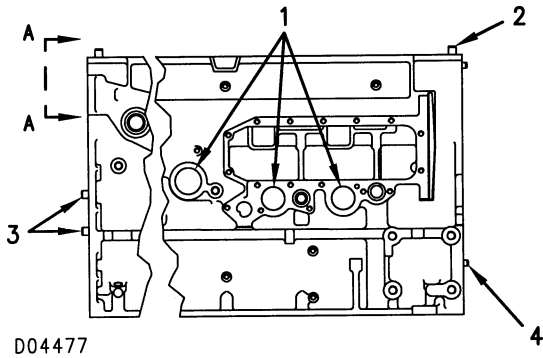


Right Side

- (1) Depth that cup plugs are installed (measured from block face to top edge of plug) 1.25 ± 0.25 mm (0.049 ± 0.010 in)
- (2) Distance all dowels extend from top face 14 ± 2 mm (0.55 ± 0.08 in)
- (3) Distance two large dowels extend from rear face 12.0 ± 0.5 mm (0.47 ± 0.02 in)
- (4) Distance all dowels extend from front face 8.0 ± 0.5 mm (0.31 ± 0.02 in)

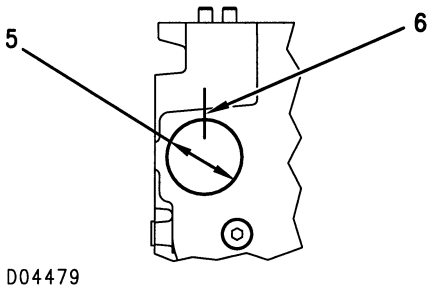

View A-A (Rear Face)

- (5) Bores in block for all camshaft bearings except front bearing 69.000 ± 0.038 mm (2.7165 ± 0.0015 in)
- (6) Locate bearing oil hole for all camshaft bearings (except front bearing) at top of bore.

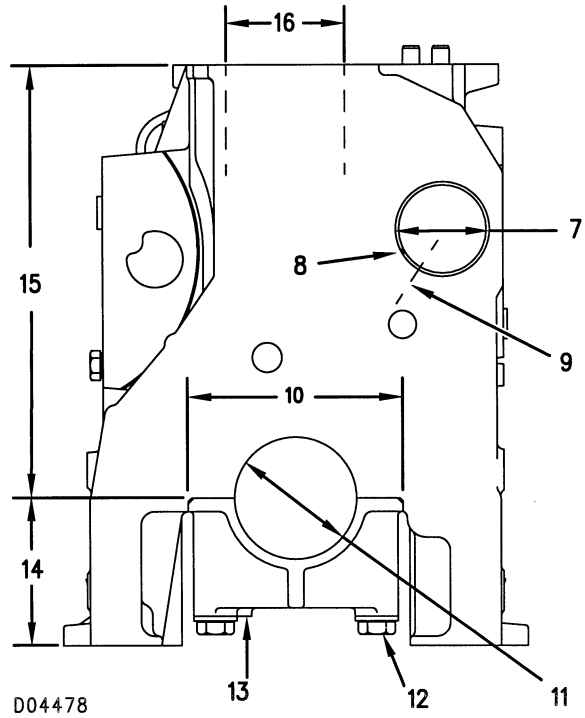

Front Face


- (7) Bore in block for front camshaft bearing 70.000 ± 0.025 mm (2.7559 ± 0.0010 in)
 - (8) Front camshaft bearing joint location.
 - (9) Front camshaft bearing oil hole.
- NOTE:** Install front camshaft bearing with bearing oil hole (9) aligned with oil hole in block and bearing joint (8) positioned as shown.
- (10) Width of main bearing cap 159.995 ± 0.020 mm (6.2990 ± 0.0008 in)
 Width of cylinder block for main bearing cap 160.000 ± 0.018 mm (6.2992 ± 0.0007 in)
 - (11) Bore in block for main bearings 95.000 ± 0.013 mm (3.7402 ± 0.0005 in)
 - (12) Main bearing cap bolts. Install as follows:
 Install bearing caps with sequence number to the right, 1 through 7 (front to rear).
 - a. Before assembly, put 2P2506 Thread Lubricant on the bolt threads and washer face.
 - b. Tighten both bolts of each bearing cap to a torque of 54 ± 7 N•m (40 ± 5 lb ft)
 - c. Then tighten bolts an additional 90 ± 5 degrees ($1/4$ turn)
 - (13) Location of bearing cap sequence number.
 - (14) Dimension from centerline of crankshaft bore to pan rail 110.00 mm (4.331 in)

(15) Dimension from centerline of crankshaft bore to top of block 322.00 mm (12.677 in)

(16) Cylinder bore size (8WL1-UP) 105 mm (4.134 in)
 Cylinder bore size (1WM1-UP) 110 mm (4.331 in)

NOTE: Bore size must be checked with a 4C4377 Cylinder Head Stress Plate and gasket installed. Refer to Installation Of 7C6208 Cylinder Sleeve, Special Instruction SEHS9047.

Piston Cooling Jet

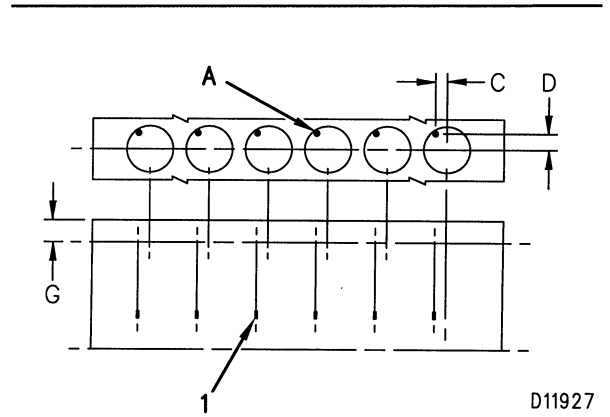


D11927

(1) Piston Cooling Jet (1WM1-UP)

Check piston cooling jets by inserting a 1.90 mm (0.075in) diameter drill rod into jet. Rods must pass through a 12.7 mm (0.50 in) diameter circle in location (A). The circle is located at depth (G) 50.0 mm (1.97 in) below the top of the cylinder block.

- Dimension (C) 25.9 mm (1.02 in)
- Dimension (D) 33.4 mm (1.31 in)
- Dimension (G) 50.0 mm (1.97 in)

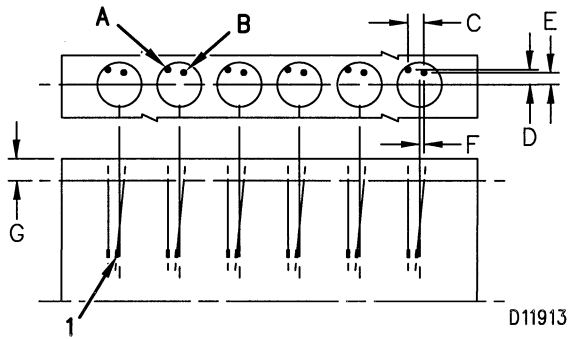


D11913

(1) Piston Cooling Jet (8WL1-UP)

Check piston cooling jets by inserting a 1.3 mm (0.05 in) diameter drill rod into jet. Rods must pass through a 5.0 mm (0.20 in) diameter circle in location (A) and a 13.0 mm (0.51 in) diameter circle in location (B). Both circles are located at depth (G) 50.0 mm (1.97 in) below the top of the cylinder block.

- Dimension (C) 25.9 mm (1.02 in)
- Dimension (D) 33.4 mm (1.31 in)
- Dimension (E) 26.9 mm (1.06 in)
- Dimension (F) 9.8 mm (0.39 in)
- Dimension (G) 50.0 mm (1.97 in)


Cylinder Block Cover Group

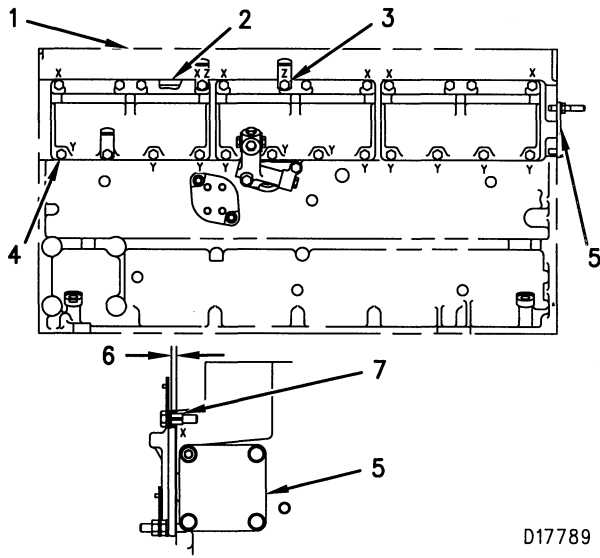


D17789

- (1) Cylinder block.
- (2) Gasket.
- (3) Bolt (location marked "Z"). Length of bolt 30.0 mm (1.18 in)
- (4) Bolt (location marked "Y"). Length of bolt 20.0 mm (0.79 in)
- (5) Cover. Clean cover face with solvent. Apply 1U8846 Gasket Maker to cover. Spread uniformly on face and around the bolt holes. Cover must be installed and tightened within ten minutes.
- (6) Length that sleeve (7) extends from face of cylinder block 5.0 ± 0.5 mm (0.20 ± 0.02 in)
- (7) Sleeve (location marked "X").

Crankshaft Seals

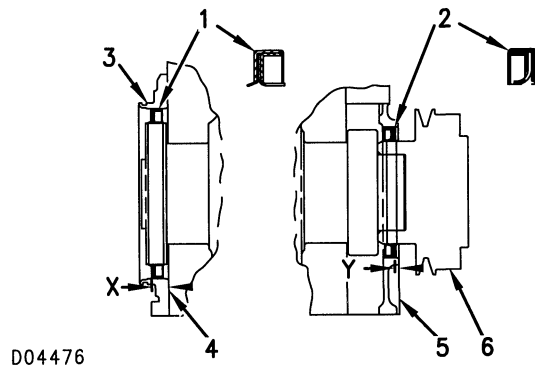


D04476

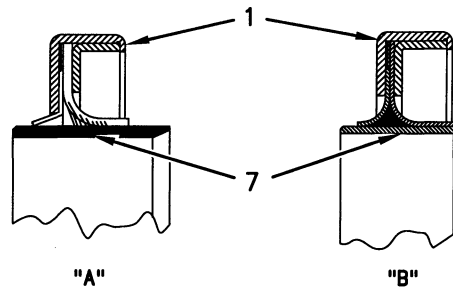

D04475

Rear Crankshaft Seal Groups:
 "A"-Single Lip, "Dry" Applications
 "B"-Double Lip, "Wet" Applications

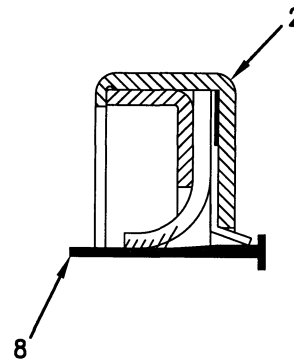

D11667

Front Crankshaft Seal

Refer to Disassembly And Assembly for the complete procedure for removing and installing the crankshaft seal groups.