




(4021389-titlepage) Titlepage

# Operation and Maintenance Manual Industrial B3.9, B4.5, and B5.9 Series Engines

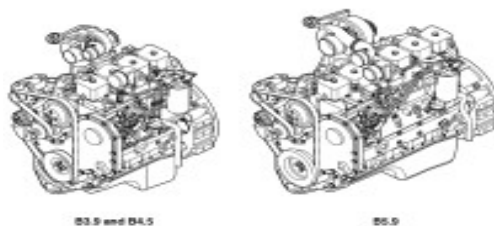

Bulletin Number 4021389-01  
8/03

O&M B Series International  
(4021389) B3.9, B4.5, B5.9 Industrial Operation and Maintenance Manual



## INDICE POR SECCION.

### Front

- (4021389-titlepage) Titlepage
- (om-frwd) Foreword
- (refno) Important Reference Numbers

### Section i – Introduction

- (99-204-001) To the Owner and Operator
- (99-204-002-om) About the Manual
- (99-204-003-om) How to Use the Manual
- (99-204-004) Symbols
- (99-204-005) Illustrations
- (99-204-006) General Safety Instructions
- (99-204-007) General Repair Instructions
- (99-204-008) General Cleaning Instructions
- (99-204-009) Acronyms and Abbreviations

### Section E - Engine and System Identification

- (40-100-001-om-ind) Engine Identification
- (40-100-002-om-ind) Engine Diagrams

### Section 1 - Operating Instructions

- (99-101-999-om-ind) Operating Instructions - Overview
- (40-101-014) Normal Starting Procedure
- (40-101-004) Cold Weather Starting
- (40-101-018) Starting Procedure After Extended Shutdown or Oil Change
- (99-101-015-om-ind) Operating the Engine
- (99-101-008) Engine Operating Range
- (99-101-009-om-ind) Engine Shutdown
- (99-101-002) Electromagnetic Interference (EMI)

### Section 2 - Maintenance Guidelines

- (99-102-999) Maintenance Guidelines — Overview
- (40-102-002-om-ind) Maintenance Schedule
- (99-102-001) Maintenance Record Form

### Section 3 - Maintenance Procedures at Daily Interval

- (99-103-999) Daily Maintenance Procedures
- (99-010-058) Air Intake Piping
- (99-012-021) Air Tanks and Reservoirs
- (99-008-040) Fan, Cooling
- (99-003-018) Crankcase Breather Tube



- (99-008-066) Coolant Level
- (99-103-002) Drive Belts
- (99-006-043) Fuel-Water Separator
- (99-007-043-om) Lubricating Oil Level

#### **Section 4 - Maintenance Procedures at 250 Hours or 3 Months**

- (99-999-999) Maintenance Procedures
- (99-010-059) Air Cleaner Restriction
- (00-012-014-om) Air Compressor
- (99-010-027-om) Charge-Air Cooler
- (99-010-028) Charge-Air Piping
- (100-005-016) Fuel Pump
- (99-008-045-om) Radiator Hoses
- (40-003-024) Closed Crankcase Ventilation Hoses

#### **Section 5 - Maintenance Procedures at 500 Hours or 6 Months**

- (99-999-999) Maintenance Procedures - Overview
- (99-008-115) Engine Coolant Antifreeze
- (40-006-014) Fuel Filter (Canister Type)
- (40-006-015-om-ind) Fuel Filter (Spin-On Type)
- (40-007-002) Lubricating Oil and Filters

#### **Section 6 - Maintenance Procedures at 1000 Hours or 1 Year**

- (99-999-999) Maintenance Procedures - Overview
- (100-008-087-om) Cooling Fan Belt Tensioner
- (100-008-036) Fan Hub, Belt Driven
- (40-003-004-om) Overhead Set

#### **Section 7 - Maintenance Procedures at 2000 Hours or 2 Years**

- (99-999-999) Maintenance Procedure
- (99-012-015) Air Compressor Discharge Lines
- (40-008-018-om-ind) Cooling System
- (99-001-051) Vibration Damper, Rubber
- (99-001-052) Vibration Damper, Viscous

#### **Section A - Adjustment, Repair, and Replacement**

- (40-006-003-om-rep) Air in Fuel
- (40-013-001-om-rep) Alternator
- (100-010-027) Charge-Air Cooler
- (100-008-087-om-rep) Cooling Fan Belt Tensioner
- (100-008-002) Drive Belt, Cooling Fan
- (100-008-039) Fan Spacer and Pulley
- (100-013-020) Starting Motor

#### **Section D - System Diagrams**

- (00-200-999) System Diagrams - Overview
- (40-200-001-om-ind) Flow Diagram, Fuel System



- (100-200-002) Flow Diagram, Lubricating Oil System
- (100-200-003) Flow Diagram, Cooling System
- (40-200-004) Flow Diagram, Air Intake System
- (40-200-005) Flow Diagram, Exhaust System
- (100-200-006) Flow Diagram, Compressed Air System

#### **Section L - Service Literature**

- (40-205-001-om-ind) Additional Service Literature
- (99-205-002) Service Literature Ordering Location

#### **Section M - Component Manufacturers**

- (99-203-001) Component Manufacturers Addresses

#### **Section S - Service Assistance**

- (99-202-002) Routine Service and Parts
- (99-202-003) Emergency and Technical Service
- (99-202-004) Problem Solving
- (99-202-005) Division and Regional Offices

#### **Section TS - Troubleshooting Symptoms**

- (99-t00-001-om) Troubleshooting Procedures and Techniques
- (99-t00-002) Troubleshooting Symptom Charts
- (4021389-t004-om) Air Compressor Air Pressure Rises Slowly
- (4021389-t005-om) Air Compressor Cycles Frequently
- (4021389-t006-om) Air Compressor Noise is Excessive
- (4021389-t007-om) Air Compressor Pumping Excess Lubricating Oil into the Air System
- (4021389-t008-om) Air Compressor Will Not Maintain Adequate Air Pressure (Not Pumping Continuously)
- (4021389-t010-om) Air Compressor Will Not Stop Pumping
- (4021389-t013-om) Alternator Not Charging or Insufficient Charging
- (4021389-t014-om) Alternator Overcharging
- (4021389-t018-om) Coolant Contamination
- (4021389-t020-om) Coolant Loss - External
- (4021389-t022-om) Coolant Temperature Above Normal - Gradual Overheat
- (4021389-t023-om) Coolant Temperature is Above Normal - Sudden Overheat
- (4021389-t024-om) Coolant Temperature is Below Normal
- (4021389-t033-om) Engine Acceleration or Response Poor
- (4021389-t043-om) Engine Difficult to Start or Will Not Start (Exhaust Smoke)
- (4021389-t044-om) Engine Difficult to Start or Will Not Start (No Exhaust Smoke)
- (4021389-t047-om) Engine Noise Excessive
- (4021389-t048-om) Engine Noise Excessive — Combustion Knocks
- (4021389-t057-om) Engine Power Output Low
- (4021389-t061-om) Engine Runs Rough at Idle
- (4021389-t062-om) Engine Runs Rough or Misfires
- (4021389-t064-om) Engine Shuts Off Unexpectedly or Dies During Deceleration
- (4021389-t066-om) Engine Speed Surges at Low or High Idle



- (4021389-t067-om) Engine Speed Surges Under Load or in Operating Range
- (4021389-t072-om) Engine Starts But Will Not Keep Running
- (4021389-t075-om) Engine Vibration Excessive
- (4021389-t077-om) Engine Will Not Crank or Cranks Slowly (Air Starter)
- (4021389-t078-om) Engine Will Not Crank or Cranks Slowly (Electric Starter)
- (4021389-t080-om) Engine Will Not Reach Rated Speed (RPM)
- (4021389-t081-om) Engine Will Not Shut Off
- (4021389-t081-006-om) Exhaust Smoke Excessive Under Load
- (4021389-t087-om) Fuel Consumption Excessive
- (4021389-t091-om) Fuel in Coolant
- (4021389-t092-om) Fuel in the Lubricating Oil
- (4021389-t093-om) Fuel or Lubricating Oil Leaking From Exhaust Manifold
- (4021389-t096-om) Intake Manifold Air Temperature Above Specification
- (4021389-t097-om) Intake Manifold Pressure (Boost) is Below Normal
- (4021389-t102-om) Lubricating Oil Consumption Excessive
- (4021389-t103-om) Lubricating Oil Contaminated
- (4021389-t103-75-om) Lubricating Oil Loss
- (4021389-t104-om) Lubricating Oil Pressure High
- (4021389-t105-om) Lubricating Oil Pressure Low
- (4021389-t106-om) Lubricating Oil Sludge in the Crankcase Excessive
- (4021389-t116-om) Smoke, Black — Excessive
- (4021389-t118-om) Smoke, White — Excessive
- (4021389-t122-om) Turbocharger Leaks Engine Oil or Fuel

#### **Section V - Maintenance Specifications**

- (40-018-015-om-ind) General Engine
- (40-018-016-om-ind) Fuel System
- (40-018-017-om-ind) Lubricating Oil System
- (40-018-018-om-ind) Cooling System
- (40-018-019-om-ind) Air Intake System
- (40-018-020-om-ind) Exhaust System
- (40-018-021-om-ind) Electrical System
- (40-018-024) Cummins/Fleetguard® Filter Specifications
- (100-018-002) Fuel Recommendations and Specifications
- (100-018-003) Lubricating Oil Recommendations and Specifications
- (00-018-004) Coolant Recommendations and Specifications
- (99-018-005) Drive Belt Tension
- (40-018-006) Engine Component Torque Values
- (100-018-008) Sealants
- (99-018-009) Capscrew Markings and Torque Values

#### **Section W – Warranty**

- (3381321) Off-Highway Engines United States and Canada
- (3381322) Off-Highway Engines International
- (ind-frm) California Emission Control System Warranty, Off-Highway
- (ind-qsb-qsc-qs9-b-c-a) Coverage
- (ind-bck) California Emission Control System Warranty, Off-Highway



**Back**

(4021389-backcover) Backcover

© 2005 Cummins Inc.

**Front**

(om-frwd) Foreword

**Foreword**

This manual contains information for the correct operation and maintenance of your Cummins engine. It also includes important safety information, engine and systems specifications, troubleshooting guidelines, and listings of Cummins Authorized Repair Locations and component manufacturers.

**Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.**

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Inc. reserves the right to make changes at any time without obligation. If you find differences between your engine and the information in this manual, contact your local Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357) toll free in the U.S. and Canada.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts. These parts can be identified by the following trademarks:



**NOTE: Note: Warranty information is located in Section W. Make sure you are familiar with the warranty or warranties applicable to your engine.**



**(refno) Important Reference Numbers**

**Important Reference Numbers**

Fill in the part name and number in the blank spaces provided below. This will give you a reference whenever service or maintenance is required.

Part Name	Part Number	Part Number
Engine Model		
Engine Serial Number (ESN)		
Control Parts List (CPL)		
Fuel Pump Part Number		
Electronic Control Module (ECM)		
Electronic Control Module Serial Numbers (ECM)		
Filter Part Numbers:		
Air Cleaner Element		
Lubricating Oil Filter		
Fuel		
Fuel-Water Separator		
Coolant		
Remote Gas		
Governor Control Module (GCM) (if applicable)		
Belt Part Numbers:		
Clutch or Marine Gear (if applicable):		
Model		
Serial Number		
Part Number		
Oil Type		
Sea Water Pump		
Model		
Part Number		



**Section i – Introduction**  
**(99-204-001) To the Owner and Operator**



Disconnect both the positive (+) and negative (-) battery cables from the battery before welding on the vehicle. Attach the welder ground cable no more than 0.61 meters [2 feet] from the part being welded. Do not connect the ground cable of the welder to the ECM cooling plate or ECM. Welding on the engine or engine mounted components is not recommended.

**To the Owner and Operator**  
**(204-001)**

**Table of Contents**

General Information

Preventive maintenance is the easiest and least expensive type of maintenance. Follow the maintenance schedule recommendations outlined in Maintenance Guidelines (Section 2).

Keep records of regularly scheduled maintenance.

Use the correct fuel, lubricating oil, and coolant in your engine as specified in Maintenance Specifications (Section V).

Cummins Inc. uses the latest technology and the highest quality components to produce its engines. Cummins Inc. recommends using genuine Cummins new parts and ReCon® exchange parts.

Personnel at Cummins Authorized Repair Locations have been trained to provide expert service and parts support. If you have a problem that can **not** be resolved by a Cummins Authorized Repair Location, follow the steps outlined in the Service Assistance (Section S).

Product coverage, warranty limitations and owner responsibilities are available in Warranty (Section W).





## **(99-204-002-om) About the Manual**

### **About the Manual (204-002)**

#### **General Information**

This manual contains information needed to correctly operate and maintain your engine as recommended by Cummins Inc. For additional service literature and ordering locations, refer to Service Literature (Section L).

This manual does not cover vehicle, vessel, or equipment maintenance procedures. Consult the original vehicle, vessel, or equipment manufacturer for specific maintenance recommendations.

Both metric and U.S. customary values are listed in this manual. The metric value is listed first, followed by the U.S. customary in brackets.

Numerous illustrations and symbols are used to aid in understanding the meaning of the text. Refer to Symbols in this section for a complete listing of symbols and their definitions.

Each section of the manual is preceded by a Section Contents to aid in locating information.

## **(99-204-003-om) How to Use the Manual**

### **How to Use the Manual (204-003)**

#### **General Information**

This manual is organized according to intervals at which maintenance on your engine is to be performed. A maintenance schedule, that states the required intervals and maintenance checks, is located in Maintenance Guidelines (Section 2). Locate the interval at which you are performing maintenance; then follow the steps given in that section for all the procedures to be performed.

Keep a record of all the checks and inspections made. A maintenance record form is located in Maintenance Guidelines (Section 2).

Engine troubleshooting procedures for your engine are located in Troubleshooting Symptoms (Section TS).

Specifications for your engine are located in Maintenance Specifications (Section V).









## (99-204-004) Symbols

### Symbols (204-004)

#### General Information

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below:


	<b>WARNING</b> - Serious personal injury or extensive property damage can result if the warning instructions are not followed.		<b>PERFORM</b> a mechanical or time <b>MEASUREMENT</b> .
	<b>CAUTION</b> - Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are not followed.		<b>LUBRICATE</b> the part or assembly.
	Indicates a <b>REMOVAL</b> or <b>DISASSEMBLY</b> step.		Indicates that a <b>WRENCH</b> or <b>TOOL SIZE</b> will be given.
	Indicates an <b>INSTALLATION</b> or <b>ASSEMBLY</b> step.		<b>TIGHTEN</b> to a specific torque.
	<b>INSPECTION</b> is required.		<b>PERFORM</b> an electrical <b>MEASUREMENT</b> .
	<b>CLEAN</b> the part or assembly.		Refer to another location in this manual or another publication for additional information.
			The component weighs 23 kg [50 lbs] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component. 17800009

## (99-204-005) Illustrations


### Illustrations (204-005)

#### General Information

Some of the illustrations throughout this manual are generic and will **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required and an acceptable or **not** acceptable condition.

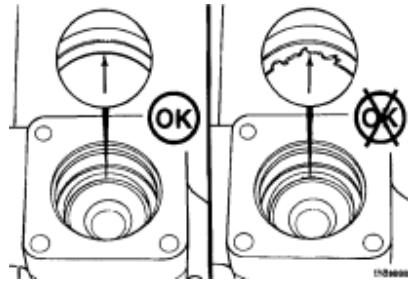

The illustrations are intended to show repair or replacement procedures. The procedure will be the same for all applications, although the illustration can differ.

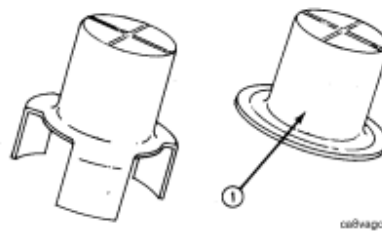

### (99-204-006) General Safety Instructions

### General Safety Instructions (204-006)

#### Important Safety Notice



Improper practices, carelessness, or ignoring the warnings can cause burns, cuts, mutilation, asphyxiation or other personal injury or death.

Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that **must** be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.

- Work in an area surrounding the product that is dry, well lit, ventilated, free from clutter, loose tools, parts, ignition sources and hazardous substances. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Rotating parts can cause cuts, mutilation or strangulation.
- Do **not** wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery (negative [-] cable first) and discharge any capacitors before beginning any repair work. Disconnect the air starting motor if equipped to prevent

## Cummins API

accidental engine starting. Put a "Do **Not** Operate" tag in the operator's compartment or on the controls.

- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do **not** attempt to rotate the crankshaft by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before slowly loosening the filler cap to relieve the pressure from the cooling system.
- **Always** use blocks or proper stands to support the product before performing any service work. Do **not** work on anything that is supported **ONLY** by lifting jacks or a hoist.
- Relieve all pressure in the air, oil, fuel, and cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do **not** check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and **ONLY** disconnect liquid refrigerant (Freon) lines in a well ventilated area. To protect the environment, liquid refrigerant systems **must** be properly emptied and filled using equipment that prevents the release of refrigerant gas (fluorocarbons) into the atmosphere. Federal law requires capturing and recycling refrigerant.
- To reduce the possibility of personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. **Always** use a spreader bar when necessary. The lifting hooks **must not** be side-loaded.
- Corrosion inhibitor, a component of SCA and lubricating oil, contains alkali. Do **not** get the substance in eyes. Avoid prolonged or repeated contact with skin. Do **not** swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. **IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.**
- Naptha and Methyl Ethyl Ketone (MEK) are flammable materials and **must** be used with caution. Follow the manufacturer's instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To reduce the possibility of burns, be alert for hot parts on products that have just been turned off, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use the tools before performing any service work. Use **ONLY** genuine Cummins or Cummins ReCon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do **not** use a fastener of lesser quality if replacements are necessary.
- Do **not** perform any repair when fatigued or after consuming alcohol or drugs that can impair your functioning.
- Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.
- Liquified petroleum gas is heavier than air and can accumulate near the floor, in sumps, and low-lying areas.

## Cummins API

- Natural gas is lighter than air and can accumulate under hood and awnings.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and ONLY disconnect natural gas and liquified petroleum gas lines in a well ventilated area.
- Coolant is toxic. If **not** reused, dispose of in accordance with local environmental regulations.
- The catalyst reagent contains urea. Do not get the substance in your eyes. In Case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. Avoid prolonged contact with skin. In case of contact, immediately wash skin with soap and water. Do not swallow internally. In the event the catalyst reagent is ingested, contact a physician immediately.
- The catalyst substrate contains Vanadium Pentoxide. Vanadium Pentoxide has been determined by the State of California to cause cancer. Always wear protective gloves and eye protection when handling the catalyst assembly. Do not get the catalyst material in your eyes. In Case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. Avoid prolonged contact with skin. In case of contact, immediately wash skin with soap and water.
- The Catalyst substrate contains Vanadium Pentoxide. Vanadium Pentoxide has been determined by the State of California to cause cancer. In the event the catalyst is being replaced, dispose of in accordance with local regulations.

### (99-204-007) General Repair Instructions

#### General Repair Instructions (204-007)

##### Table of Contents

- **General Information**
- **Welding on a Vehicle with an Electronic Controlled Fuel System**
  
- **General Information**

This engine incorporates the latest technology at the time it was manufactured; yet, it is designed to be repaired using normal repair practices performed to quality standards.

- **Cummins Inc. does not recommend or authorize any modifications or repairs to engines or components except for those detailed in Cummins Service Information. In particular, unauthorized repair to safety-related components can cause personal injury or death. Below is a partial listing of components classified as safety-related:**
1. **Air Compressor**
  2. **Air Controls**
  3. **Air Shutoff Assemblies**
  4. **Balance Weights**
  5. **Cooling Fan**
  6. **Fan Hub Assembly**

## Cummins API

7. Fan Mounting Bracket(s)
8. Fan Mounting Capscrews
9. Fan Hub Spindle
10. Flywheel
11. Flywheel Crankshaft Adapter
12. Flywheel Mounting Capscrews
13. Fuel Shutoff Assemblies
14. Fuel Supply Tubes
15. Lifting Brackets
16. Throttle Controls
17. Turbocharger Compressor Casing
18. Turbocharger Oil Drain Line(s)
19. Turbocharger Oil Supply Line(s)
20. Turbocharger Turbine Casing
21. Vibration Damper Mounting Capscrews

- **Follow all safety instructions noted in the procedures**
- Follow the manufacturer's recommendations for cleaning solvents and other substances used during the repair of the engine. Some solvents and used engine oil have been identified by government agencies as toxic or carcinogenic. Avoid excessive breathing, ingestion and contact with such substances. **Always** use good safety practices with tools and equipment.
- **Provide a clean environment and follow the cleaning instructions specified in the procedures**
- The engine and its components **must** be kept clean during any repair. Contamination of the engine or components will cause premature wear.
- **Perform the inspections specified in the procedures**
- **Replace all components or assemblies which are damaged or worn beyond the specifications**
- **Use genuine Cummins new or ReCon® service parts and assemblies**
- The assembly instructions have been written to use again as many components and assemblies as possible. When it is necessary to replace a component or assembly, the procedure is based on the use of new Cummins or Cummins ReCon® components. All of the repair services described in this manual are available from all Cummins Distributors and most Dealer locations.
- **Follow the specified disassembly and assembly procedures to reduce the possibility of damage to the components**

Complete rebuild instructions are available in the shop manual which can be ordered or purchased from a Cummins Authorized Repair Location. Refer to Section L — Service Literature for ordering instructions.



➤ **Welding on a Vehicle with an Electronic Controlled Fuel System**



Disconnect both the positive (+) and negative (-) battery cables from the battery before welding on the vehicle. Attach the welder ground cable no more than 0.61 meters [2 feet] from the part being welded. Do not connect the ground cable of the welder to the ECM cooling plate or ECM. Welding on the engine or engine mounted components is not recommended or damage to the engine or components can result.

**(99-204-008) General Cleaning Instructions**

**General Cleaning Instructions  
(204-008)**

**Table of Contents**

- Definition of Clean
- Abrasive Pads and Abrasive Paper
- Gasket Surfaces
- Solvent and Acid Cleaning
- Steam Cleaning
- Plastic Bead Cleaning

➤ **Definition of Clean**

Parts **must** be free of debris that can contaminate any engine system. This does **not** necessarily mean they have to appear as new.

Sanding gasket surfaces until the factory machining marks are disturbed adds no value and is often harmful to forming a seal. It is important to maintain surface finish and flatness tolerances to form a quality sealing surface. Gaskets are designed to fill small voids in the specified surface finish.

Sanding gasket surfaces where edge-molded gaskets are used is most often unnecessary. Edge-molded gaskets are those metal carriers with sealing material bonded to the edges of the gasket to seal while the metal portion forms a metal to metal joint for stability. Any of the small amounts of sealing material that can stick to the parts are better removed with a blunt-edged scraper on the spots rather than spending time polishing the whole surface with an air sander or disc.

## Cummins API

For those gaskets that do **not** have the edge molding, nearly all have a material that contains release agents to prevent sticking. Certainly this is **not** to say that some gaskets are **not** difficult to remove because the gasket has been in place a long time, has been overheated or the purpose of the release agent has been defeated by the application of some sealant. The object however is just to remove the gasket without damaging the surfaces of the mating parts without contaminating the engine (don't let the little bits fall where they can not be removed).

Bead blasting piston crowns until the dark stain is removed is unnecessary. All that is required is to remove the carbon build-up above the top ring and in the ring grooves. There is more information on bead blasting and piston cleaning later in this document.

Cummins Inc. does **not** recommend sanding or grinding the carbon ring at the top of cylinder liners until clean metal is visible. The liner will be ruined and any signs of a problem at the top ring reversal point (like a dust-out) will be destroyed. It is necessary to remove the carbon ring to provide for easier removal of the piston assembly. A medium bristle, high quality, steel wire wheel that is rated above the rpm of the power tool being used will be just as quick and there will be less damage. Yes, one **must** look carefully for broken wires after the piston is removed but the wires are more visible and can be attracted by a magnet.

Oil on parts that have been removed from the engine will attract dirt in the air. The dirt will adhere to the oil. If possible, leave the old oil on the part until it is ready to be cleaned, inspected and installed, and then clean it off along with any attracted dirt. If the part is cleaned then left exposed it can have to be cleaned again before installation. Make sure parts are lubricated with clean oil before installation. They do **not** need to be oiled all over but do need oil between moving parts (or a good lube system priming process conducted before cranking the engine).

Bead blasting parts to remove exterior paint is also usually unnecessary. The part will most likely be painted again so all that needs happen is remove any loose paint.

### ➤ Abrasive Pads and Abrasive Paper

The keyword here is "abrasive". There is no part of an engine designed to withstand abrasion. That is they are all supposed to lock together or slide across each other. Abrasives and dirt particles will degrade both functions.



**Abrasive material must be kept out of or removed from oil passages and parts wear points. Abrasive material in oil passages can cause bearing and bushing failures that can progress to major component damage beyond reuse. This is particularly true of main and rod bearings.**



## Cummins API

Cummins Inc. does **not** recommend the use of emery cloth or sand paper on any part of an **assembled** engine or component including but **not** limited to removing the carbon ridge from cylinder liners or to clean block decks or counterbores.

Great care **must** be taken when using abrasive products to clean engine parts, particularly on partially assembled engines. Abrasive cleaning products come in many forms and sizes. All of them contain aluminum oxide particles, silicon carbide, or sand or some other similar hard material. These particles are harder than most of the parts in the engine. Since they are harder, if they are pressed against softer material they will either damage the material or become embedded in it. These materials fall off the holding media as the product is used. If the products are used with power equipment the particles are thrown about the engine. If the particles fall between two moving parts, damage to the moving parts is likely.

If particles that are smaller than the clearance between the parts while they are at rest (engine stopped), but larger than the running clearance then damage will occur when the parts move relative to each other (engine started). While the engine is running and there is oil pressure, particles that are smaller than the bearing clearance are likely to pass between the parts without damage and be trapped in the oil filter. However, particles larger than the bearing clearance will remove material from one part and can become embedded in one of the parts. Once embedded in one part it will abrade the other part until contact is no longer being made between the two parts. If the damage sufficiently degrades the oil film, the two parts will come into contact resulting in early wear-out or failure from lack of effective lubrication.

Abrasive particles can fly about during cleaning it is **very** important to block these particles from entering the engine as much as possible. This is particularly true of lubricating oil ports and oil drilling holes, especially those located downstream of the lubricating oil filters. Plug the holes instead of trying to blow the abrasive particles and debris with compressed air because the debris is often simply blown further into the oil drilling.

All old gasket material **must** be removed from the parts gasket surfaces. However, it is **not** necessary to clean and polish the gasket surface until the machining marks are erased. Excessive sanding or buffing can damage the gasket surface. Many newer gaskets are of the edge molded type (a steel carrier with a sealing member bonded to the steel). What little sealing material that can adhere is best removed with a blunt-edged scraper or putty knife. Cleaning gasket surfaces where an edge-molded gasket is used with abrasive pads or paper is usually a waste of time.



Excessive sanding or grinding the carbon ring from the top of the cylinder liners can damage the liner beyond reuse. The surface finish will be damaged and abrasive particles can be forced into the liner material which can cause early cylinder wear-out or piston ring failures.

Tape off or plug all openings to any component interior before using abrasive pads or wire brushes. If really necessary because of time to use a power tool with abrasive pads, tape the oil drillings closed or use plug and clean as much of the surface as possible with the tool but clean

## Cummins API

around the oil hole/opening by hand so as to prevent contamination of the drilling. Then remove the tape or plug and clean the remaining area carefully and without the tool. DO NOT use compressed air to blow the debris out of oil drilling on an assembled engine! More likely than **not**, the debris can be blown further into the drilling. Using compressed air is fine if both ends of the drilling are open but that is rarely the case when dealing with an assembled engine.

### ➤ Gasket Surfaces

The object of cleaning gasket surfaces is to remove any gasket material, not refinish the gasket surface of the part.

Cummins Inc. does **not** recommend any specific brand of liquid gasket remover. If a liquid gasket remover is used, check the directions to make sure the material being cleaned will **not** be harmed.

Air powered gasket scrapers can save time but care must be taken to **not** damage the surface. The angled part of the scraper must be against the gasket surface to prevent the blade from digging into the surface. Using air powered gasket scrapers on parts made of soft materials takes skill and care to prevent damage.

Do **not** scrape or brush across the gasket surface if at all possible.

### ➤ Solvent and Acid Cleaning

Several solvent and acid-type cleaners can be used to clean the disassembled engine parts (other than pistons. See Below). Experience has shown that the best results can be obtained using a cleaner that can be heated to 90° to 95°Celsius (180° to 200° Fahrenheit). Kerosene emulsion based cleaners have different temperature specifications, see below. A cleaning tank that provides a constant mixing and filtering of the cleaning solution will give the best results. Cummins Inc. does not recommend any specific cleaners. Always follow the cleaner manufacturer's instructions. Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful not to damage any gasket surfaces. When possible, steam clean the parts before putting them in the cleaning tank.



When using solvents, acids, or alkaline materials for cleaning, follow the manufacturers recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

## Cummins API

Experience has shown that kerosene emulsion based cleaners perform the best to clean pistons. These cleaners should **not** be heated to temperature in excess of 77°C (170°F). The solution begins to break down at temperatures in excess of 82°C (180°F) and will be less effective.

Do **not** use solutions composed mainly of chlorinated hydrocarbons with cresols, phenols and/or cresylic components. They often do **not** do a good job of removing deposits from the ring groove and are costly to dispose of properly.

Solutions with a pH above approximately 9.5 will cause aluminum to turn black; therefore do **not** use high alkaline solutions.

Chemicals with a pH above 7.0 are considered alkaline and those below 7.0 are acidic. As you move further away from the neutral 7.0, the chemicals become highly alkaline or highly acidic.

Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful to **not** damage any gasket surfaces. When possible use hot high pressure water or steam clean the parts before putting them in the cleaning tank. Removing the heaviest dirt before placing in the tank will allow the cleaner to work more effectively and the cleaning agent will last longer.

Rinse all the parts in hot water after cleaning. Dry completely with compressed air. Blow the rinse water from all the capscrew holes and the oil drillings.

If the parts are **not** to be used immediately after cleaning, dip them in a suitable rust proofing compound. The rust proofing compound **must** be removed from the parts before assembly or installation on the engine.

### ➤ Steam Cleaning

Steam cleaning can be used to remove all types of dirt that can contaminate the cleaning tank. It is a good method for cleaning the oil drillings and coolant passages



When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Do **not** steam clean the following components:

- Electrical Components
- Wiring Harnesses
- Injectors
- Fuel Pump



- Belts and Hoses
- Bearings (ball or taper roller)
- Electronic Control Module (ECM)
- ECM Connectors
- Dosing Control Unit

➤ **Plastic Bead Cleaning**

Cummins Inc. does **not** recommend the use of glass bead blast or walnut shell media on **any** engine part. Cummins Inc. recommends using **only** plastic bead media, Part Number 3822735 or equivalent on any engine part. **Never** use sand as a blast media to clean engine parts. Glass and walnut shell media when **not** used to the media manufacturer's recommendations can cause excess dust and can embed in engine parts that can result in premature failure of components through abrasive wear.

Plastic bead cleaning can be used on many engine components to remove carbon deposits. The cleaning process is controlled by the use of plastic beads, the operating pressure and cleaning time.



Do not use bead blasting cleaning methods on aluminum pistons skirts or the pin bores in any piston, piston skirt or piston crown. Small particles of the media will embed in the aluminum or other soft metal and result in premature wear of the cylinder liner, piston rings, pins and pin bores. Valves, turbocharger shafts, etc., can also be damaged. Follow the cleaning directions listed in the procedures.



Do not contaminate wash tanks and tank type solvent cleaners with the foreign material and plastic beads. Remove the foreign material and plastic beads with compressed air, hot high pressure water or steam before placing them in tanks or cleaners. The foreign material and plastic beads can contaminate the tank and any other engine parts cleaned in the tank. Contaminated parts may cause failures from abrasive wear.

Plastic bead blasting media, Part Number 3822735, can be used to clean all piston ring grooves. Do **not** use any bead blasting media on piston pin bores or aluminum skirts.

Follow the equipment manufacturer's cleaning instructions. Make sure to adjust the air pressure in the blasting machine to the bead manufacturer's recommendations. Turning up the pressure can move material on the part and cause the plastic bead media to wear out more quickly. The following guidelines can be used to adapt to manufacturer's instructions: