




# Operation and Maintenance Manual QSK23 Series Engines

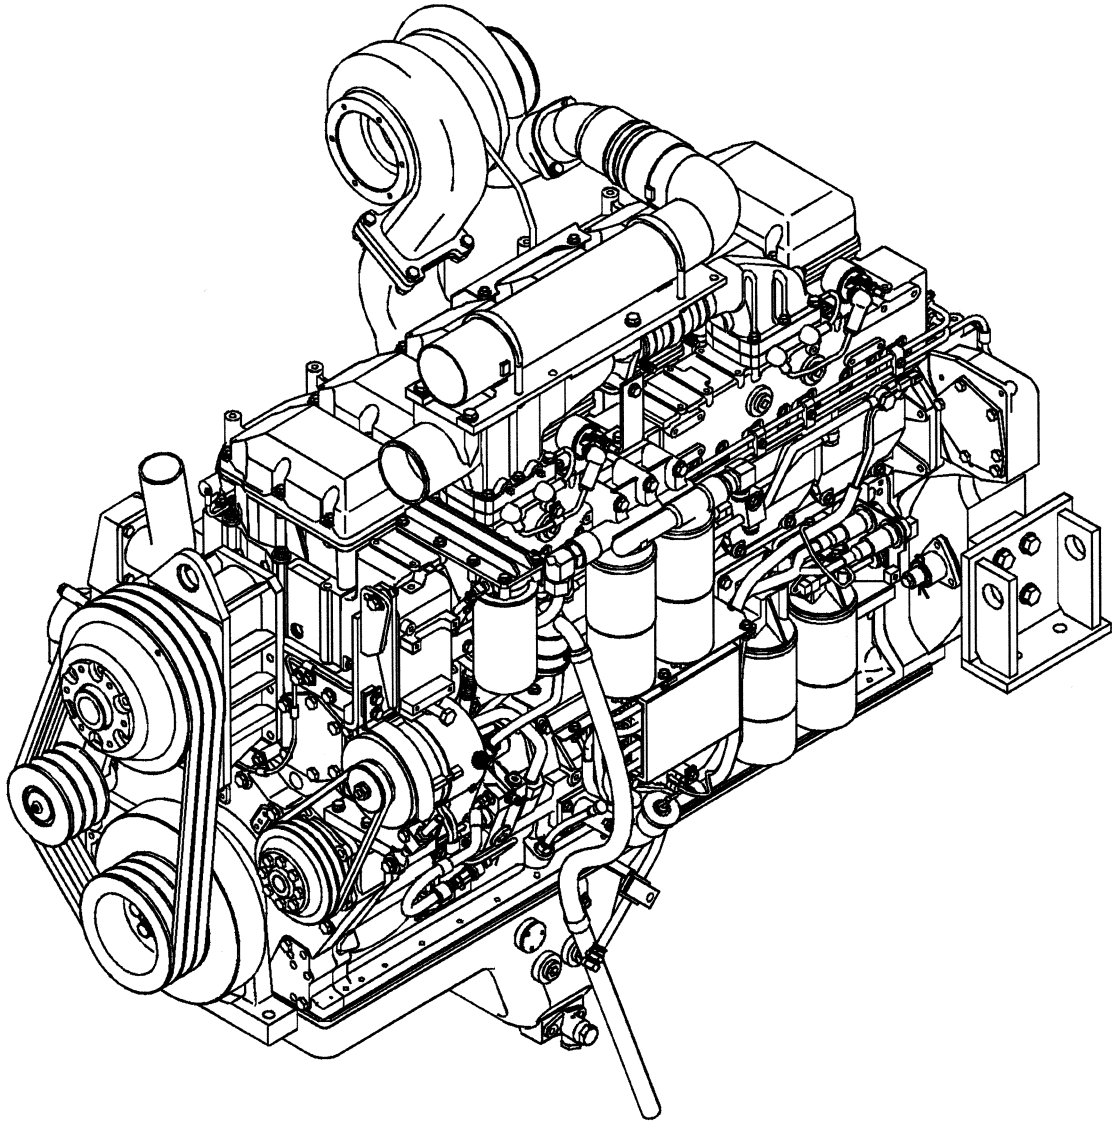

00400160

Copyright© 2003  
Cummins Inc.  
All rights reserved

Bulletin 4021374-01  
Printed 08/03

## Foreword

This manual contains information for the correct operation and maintenance of your Cummins engine. It also includes important safety information, engine and systems specifications, troubleshooting guidelines, and listings of Cummins Authorized Repair Locations and component manufacturers.

**Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.**

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

The information, specifications, and recommended maintenance guidelines in this manual are based on information in effect at the time of printing. Cummins Inc. reserves the right to make changes at any time without obligation. If you find differences between your engine and the information in this manual, contact your local Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357) toll free in the U.S. and Canada.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts. These parts can be identified by the following trademarks:



**NOTE:** Note: Warranty information is located in Section W. Make sure you are familiar with the warranty or warranties applicable to your engine.

# Table of Contents

|  | Section |   |
|--|---------|---|
| Introduction .....                                       | i       | ■ |
| Engine Identification .....                              | E       | ■ |
| Industrial Features .....                                | FB      | ■ |
| Operating Instructions .....                             | 1       | ■ |
| Maintenance Guidelines .....                             | 2       | ■ |
| Maintenance Procedures at Daily Interval .....           | 3       | ■ |
| Maintenance Procedures Every 250 Hours or 6 Months ..... | 4       | ■ |
| Maintenance Procedures Every 1500 Hours or 1 Year .....  | 5       | ■ |
| Maintenance Procedures Every 6000 or 2 Years .....       | 6       | ■ |
| Other Maintenance Procedures .....                       | 7       | ■ |
| Adjustment, Repair and Replacement .....                 | A       | ■ |
| System Diagrams .....                                    | D       | ■ |
| Service Literature .....                                 | L       | ■ |
| Component Manufacturers .....                            | M       | ■ |
| Service Assistance .....                                 | S       | ■ |
| Troubleshooting Symptoms .....                           | TS      | ■ |
| Specifications .....                                     | V       | ■ |
| Warranty .....   | W       | ■ |
| Index .....  | X       | ■ |

## Important Reference Numbers

Fill in the part name and number in the blank spaces provided below. This will give you a reference whenever service or maintenance is required.

| Name   | Number | Number |
|--|--------|--------|
| Engine Model                                   |        |        |
| Engine Serial Number (ESN)                     |        |        |
| Control Parts List (CPL)                       |        |        |
| Fuel Pump Part Number                          |        |        |
| Electronic Control Module (ECM)                |        |        |
| Electronic Control Module Serial Numbers (ECM) |        |        |
| Filter Part Numbers:                           |        |        |
| • Air Cleaner Element                          |        |        |
| • Lubricating Oil                              |        |        |
| • Fuel   |        |        |
| • Fuel-Water Separator                         |        |        |
| • Coolant                                      |        |        |
| • Crankcase Ventilation                        |        |        |
| Governor Control Module (GCM) (if applicable)  |        |        |
| Belt Part Numbers:                             |        |        |
| •  |        |        |
| •  |        |        |
| •  |        |        |
| Clutch or Marine Gear (if applicable):         |        |        |
| • Model  |        |        |
| • Serial Number                                |        |        |
| • Part Number                                  |        |        |
| • Oil Type                                     |        |        |
| • Sea Water Pump                               |        |        |
| – Model  |        |        |
| – Part Number                                  |        |        |

# Section i - Introduction

## Section Contents

|  | Page |
|--|------|
| <b>About the Manual</b> .....  | i-1  |
| General Information .....  | i-1  |
| <b>Acronyms and Abbreviations</b> .....                              | i-7  |
| General Information .....  | i-7  |
| <b>General Cleaning Instructions</b> .....                           | i-5  |
| Glass or Plastic Bead Cleaning .....                                 | i-6  |
| Solvent and Acid Cleaning .....                                      | i-5  |
| Steam Cleaning .....   | i-6  |
| <b>General Repair Instructions</b> .....                             | i-5  |
| General Information .....  | i-5  |
| Welding on a Vehicle with an Electronic Controlled Fuel System ..... | i-5  |
| <b>General Safety Instructions</b> .....                             | i-4  |
| Important Safety Notice .....  | i-4  |
| <b>How to Use the Manual</b> .....                                   | i-1  |
| General Information .....  | i-1  |
| <b>Illustrations</b> .....   | i-3  |
| General Information .....  | i-3  |
| <b>Symbols</b> .....   | i-2  |
| General Information .....  | i-2  |
| <b>To the Owner and Operator</b> .....                               | i-1  |
| General Information .....  | i-1  |

**THIS PAGE LEFT INTENTIONALLY BLANK**

## To the Owner and Operator

### General Information

Preventive maintenance is the easiest and least expensive type of maintenance. Follow the maintenance schedule recommendations outlined in Maintenance Guidelines (Section 2).

Keep records of regularly scheduled maintenance.

Use the correct fuel, lubricating oil, and coolant in your engine as specified in Maintenance Specifications (Section V).

Cummins Inc. uses the latest technology and the highest quality components to produce its engines. Cummins Inc. recommends using genuine Cummins new parts and ReCon® exchange parts.

Personnel at Cummins Authorized Repair Locations have been trained to provide expert service and parts support. If you have a problem that can **not** be resolved by a Cummins Authorized Repair Location, follow the steps outlined in the Service Assistance (Section S).

Product coverage, warranty limitations and owner responsibilities are available in Warranty (Section W).

### △ CAUTION △

**Disconnect both the positive (+) and negative (-) battery cables from the battery before welding on the vehicle. Attach the welder ground cable no more than 0.61 meters [2 feet] from the part being welded. Do not connect the ground cable of the welder to the ECM cooling plate or ECM. Welding on the engine or engine mounted components is not recommended.**

## About the Manual

### General Information

This manual contains information needed to correctly operate and maintain your engine as recommended by Cummins Inc. For additional service literature and ordering locations, refer to Service Literature (Section L).

This manual does not cover vehicle, vessel, or equipment maintenance procedures. Consult the original vehicle, vessel, or equipment manufacturer for specific maintenance recommendations.

Both metric and U.S. customary values are listed in this manual. The metric value is listed first, followed by the U.S. customary in brackets.

Numerous illustrations and symbols are used to aid in understanding the meaning of the text. Refer to Symbols in this section for a complete listing of symbols and their definitions.

Each section of the manual is preceded by a Section Contents to aid in locating information.

## How to Use the Manual

### General Information

This manual is organized according to intervals at which maintenance on your engine is to be performed. A maintenance schedule, that states the required intervals and maintenance checks, is located in Maintenance Guidelines (Section 2). Locate the interval at which you are performing maintenance; then follow the steps given in that section for all the procedures to be performed.

Keep a record of all the checks and inspections made. A maintenance record form is located in Maintenance Guidelines (Section 2).

Engine troubleshooting procedures for your engine are located in Troubleshooting Symptoms (Section TS).

Specifications for your engine are located in Maintenance Specifications (Section V).

## Symbols

### General Information

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below:



**WARNING** - Serious personal injury or extensive property damage can result if the warning instructions are not followed.



**CAUTION** - Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are not followed.



Indicates a **REMOVAL** or **DISASSEMBLY** step.



Indicates an **INSTALLATION** or **ASSEMBLY** step.



**INSPECTION** is required.



**CLEAN** the part or assembly.



**PERFORM** a mechanical or time **MEASUREMENT**.



**LUBRICATE** the part or assembly.



Indicates that a **WRENCH** or **TOOL SIZE** will be given.



**TIGHTEN** to a specific torque.



**PERFORM** an electrical **MEASUREMENT**.



Refer to another location in this manual or another publication for additional information.



The component weighs 23 kg [50 lbs] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.


17800009




## Illustrations

### General Information

Some of the illustrations throughout this manual are generic and will **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required and an acceptable or **not** acceptable condition.

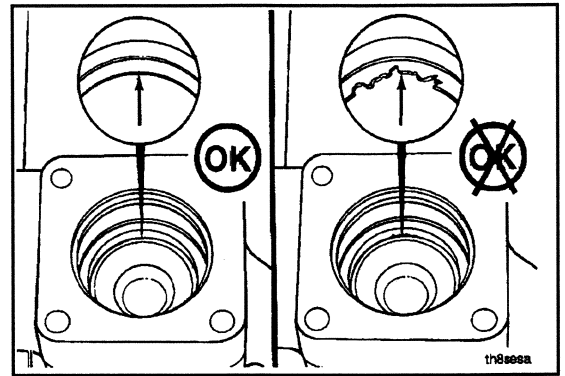

The illustrations are intended to show repair or replacement procedures. The procedure will be the same for all applications, although the illustration can differ.

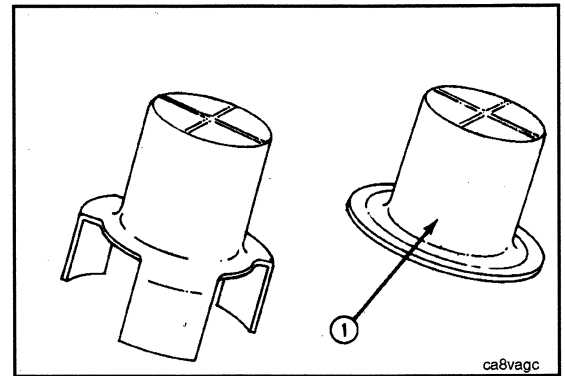

## General Safety Instructions

### Important Safety Notice



**Improper practices, carelessness, or ignoring the warnings can cause burns, cuts, mutilation, asphyxiation or other personal injury or death.**

Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that **must** be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.

- Work in an area surrounding the product that is dry, well lit, ventilated, free from clutter, loose tools, parts, ignition sources and hazardous substances. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Rotating parts can cause cuts, mutilation or strangulation.
- Do **not** wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery (negative [-] cable first) and discharge any capacitors before beginning any repair work. Disconnect the air starting motor if equipped to prevent accidental engine starting. Put a "Do **Not** Operate" tag in the operator's compartment or on the controls.
- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do **not** attempt to rotate the crankshaft by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before slowly loosening the filler cap to relieve the pressure from the cooling system.
- **Always** use blocks or proper stands to support the product before performing any service work. Do **not** work on anything that is supported **ONLY** by lifting jacks or a hoist.
- Relieve all pressure in the air, oil, fuel, and cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do **not** check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and **ONLY** disconnect liquid refrigerant (Freon) lines in a well ventilated area. To protect the environment, liquid refrigerant systems **must** be properly emptied and filled using equipment that prevents the release of refrigerant gas (fluorocarbons) into the atmosphere. Federal law requires capturing and recycling refrigerant.
- To reduce the possibility of personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. **Always** use a spreader bar when necessary. The lifting hooks **must not** be side-loaded.
- Corrosion inhibitor, a component of SCA and lubricating oil, contains alkali. Do **not** get the substance in eyes. Avoid prolonged or repeated contact with skin. Do **not** swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. **IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.**
- Naptha and Methyl Ethyl Ketone (MEK) are flammable materials and **must** be used with caution. Follow the manufacturer's instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To reduce the possibility of burns, be alert for hot parts on products that have just been turned off, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use the tools before performing any service work. Use **ONLY** genuine Cummins or Cummins ReCon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do **not** use a fastener of lesser quality if replacements are necessary.
- Do **not** perform any repair when fatigued or after consuming alcohol or drugs that can impair your functioning.
- Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.
- Liquefied petroleum gas is heavier than air and can accumulate near the floor, in sumps, and low-lying areas.
- Natural gas is lighter than air and can accumulate under hood and awnings.
- To reduce the possibility of suffocation and frostbite, wear protective clothing and **ONLY** disconnect natural gas and liquefied petroleum gas lines in a well ventilated area.
- Coolant is toxic. If **not** reused, dispose of in accordance with local environmental regulations.

## General Repair Instructions

### General Information

This engine incorporates the latest technology at the time it was manufactured; yet, it is designed to be repaired using normal repair practices performed to quality standards.

- **Cummins Inc. does not recommend or authorize any modifications or repairs to engines or components except for those detailed in Cummins Service Information. In particular, unauthorized repair to safety-related components can cause personal injury or death. Below is a partial listing of components classified as safety-related:**

Air Compressor  
Air Controls  
Air Shutoff Assemblies  
Balance Weights  
Cooling Fan  
Fan Hub Assembly  
Fan Mounting Bracket(s)  
Fan Mounting Capscrews  
Fan Hub Spindle  
Flywheel  
Flywheel Crankshaft Adapter

Flywheel Mounting Capscrews  
Fuel Shutoff Assemblies  
Fuel Supply Tubes  
Lifting Brackets  
Throttle Controls  
Turbocharger Compressor Casing  
Turbocharger Oil Drain Line(s)  
Turbocharger Oil Supply Line(s)  
Turbocharger Turbine Casing  
Vibration Damper Mounting Capscrews

- **Follow all safety instructions noted in the procedures**
  - Follow the manufacturer's recommendations for cleaning solvents and other substances used during the repair of the engine. Some solvents and used engine oil have been identified by government agencies as toxic or carcinogenic. Avoid excessive breathing, ingestion and contact with such substances. **Always** use good safety practices with tools and equipment.
- **Provide a clean environment and follow the cleaning instructions specified in the procedures**
  - The engine and its components **must** be kept clean during any repair. Contamination of the engine or components will cause premature wear.
- **Perform the inspections specified in the procedures**
- **Replace all components or assemblies which are damaged or worn beyond the specifications**
- **Use genuine Cummins new or ReCon® service parts and assemblies**
  - The assembly instructions have been written to use again as many components and assemblies as possible. When it is necessary to replace a component or assembly, the procedure is based on the use of new Cummins or Cummins ReCon® components. All of the repair services described in this manual are available from all Cummins Distributors and most Dealer locations.
- **Follow the specified disassembly and assembly procedures to reduce the possibility of damage to the components**

Complete rebuild instructions are available in the shop manual which can be ordered or purchased from a Cummins Authorized Repair Location. Refer to Section L — Service Literature for ordering instructions.

### Welding on a Vehicle with an Electronic Controlled Fuel System



**Disconnect both the positive (+) and negative (-) battery cables from the battery before welding on the vehicle. Attach the welder ground cable no more than 0.61 meters [2 feet] from the part being welded. Do not connect the ground cable of the welder to the ECM cooling plate or ECM. Welding on the engine or engine mounted components is not recommended or damage to the engine or components can result.**

## General Cleaning Instructions

### Solvent and Acid Cleaning

Several solvent and acid-type cleaners can be used to clean the engine parts. Experience has shown that the best results can be obtained using a cleaner that can be heated to 90 to 95 degrees Celsius [180 to 200 degrees Fahrenheit]. A cleaning tank that provides a constant mixing and filtering of the cleaning solution will give the best results. **Cummins Inc. does not recommend any specific cleaners. Always follow the cleaner manufacturer's instructions.**

Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful **not** to damage any gasket surfaces. When possible, steam clean the parts before putting them in the cleaning tank.

**▲ WARNING ▲**

**Acid is extremely dangerous and can cause personal injury and damage the machinery. Always provide a tank of strong soda water as a neutralizing agent. Wear goggles and protective clothing to reduce the possibility of serious personal injury.**

Rinse all of the parts in hot water after cleaning. Dry completely with compressed air. Blow the rinse water from all of the capscrew holes and the oil drillings.

If the parts are **not** to be used immediately after cleaning, dip them in a suitable rustproofing compound. The rustproofing compound **must** be removed from the parts before installation on the engine.

### Steam Cleaning

Steam cleaning can be used to remove all types of dirt that can contaminate the cleaning tank. It is a good way to clean the oil drillings.

**▲ WARNING ▲**

**When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.**

Do **not** steam clean the following parts:

- |                          |                                    |
|--------------------------|------------------------------------|
| 1. Electrical Components | 5. Belts and Hoses                 |
| 2. Wiring                | 6. Bearings                        |
| 3. Injectors             | 7. Electronic Control Module (ECM) |
| 4. Fuel Pump             | 8. ECM Connectors                  |

### Glass or Plastic Bead Cleaning

Glass or plastic bead cleaning can be used on many engine components to remove carbon deposits. The cleaning process is controlled by the size of the glass or plastic beads, the operating pressure, and the cleaning time.

**▲ CAUTION ▲**

**Do not use glass or plastic bead cleaning on aluminum piston skirts. Do not use glass bead cleaning on aluminum ring grooves. Small particles of glass or plastic will embed in the aluminum and result in premature wear. Valves, turbocharger shafts, etc., can also be damaged. Follow the cleaning directions listed in the procedures.**

**NOTE:** Plastic bead blasting media, Part No. 3822735, can be used to clean aluminum ring grooves. Do **not** use any bead blasting media on pin bores or aluminum skirts.

Follow the equipment manufacturer's cleaning instructions. The following guidelines can be used to adapt to manufacturer's instructions:

1. Bead size:
  - a. Use U.S. size No. 16-20 for piston cleaning with plastic bead media, Part No. 3822735.
  - b. Use U.S. size No. 70 for piston domes with glass media.
  - c. Use U.S. size No. 60 for general purpose cleaning with glass media.
2. Operating Pressure:
  - a. Glass: Use 620 kPa [90 psi] for general purpose cleaning.
  - b. Plastic: Use 270 kPa [40 psi] for piston cleaning.
3. Steam clean or wash the parts with solvent to remove all of the foreign material and glass or plastic beads after cleaning. Rinse with hot water. Dry with compressed air.
4. Do **not** contaminate the wash tanks with glass or plastic beads.

## Acronyms and Abbreviations

### General Information

The following list contains some of the acronyms and abbreviations used in this manual.

|                       |   |
|-----------------------|---|
| <b>API</b>            | American Petroleum Institute              |
| <b>ASTM</b>           | American Society of Testing and Materials |
| <b>°C</b>             | Celsius                                   |
| <b>CARB</b>           | California Air Resources Board            |
| <b>C.I.D.</b>         | Cubic Inch Displacement                   |
| <b>CNG</b>            | Compressed Natural Gas                    |
| <b>CPL</b>            | Control Parts List                        |
| <b>cSt</b>            | Centistokes                               |
| <b>ECM</b>            | Electronic Control Module                 |
| <b>EGR</b>            | Exhaust Gas Recirculation                 |
| <b>EPA</b>            | Environmental Protection Agency           |
| <b>°F</b>             | Fahrenheit                                |
| <b>FMI</b>            | Failure Mode Identifier                   |
| <b>GVW</b>            | Gross Vehicle Weight                      |
| <b>LPG</b>            | Liquefied Petroleum Gas                   |
| <b>Hg</b>             | Mercury                                   |
| <b>hp</b>             | Horsepower                                |
| <b>H<sub>2</sub>O</b> | Water                                     |
| <b>ICM</b>            | Ignition Control Module                   |
| <b>km/l</b>           | Kilometers per Liter                      |
| <b>kPa</b>            | Kilopascal                                |
| <b>LNG</b>            | Liquid Natural Gas                        |
| <b>LTA</b>            | Low Temperature Aftercooling              |
| <b>MPa</b>            | Megapascal                                |
| <b>mph</b>            | Miles Per Hour                            |
| <b>mpq</b>            | Miles Per Quart                           |
| <b>N•m</b>            | Newton-meter                              |
| <b>NG</b>             | Natural Gas                               |
| <b>OEM</b>            | Original Equipment Manufacturer           |
| <b>PID</b>            | Parameter Identification Descriptions     |
| <b>ppm</b>            | Parts Per Million                         |
| <b>psi</b>            | Pounds Per Square Inch                    |
| <b>PTO</b>            | Power Takeoff                             |
| <b>rpm</b>            | Revolutions Per Minute                    |
| <b>SAE</b>            | Society of Automotive Engineers           |
| <b>SCA</b>            | Supplemental Coolant Additive             |
| <b>STC</b>            | Step Timing Control                       |
| <b>SID</b>            | Subsystem Identification Descriptions     |
| <b>VS</b>             | Variable Speed                            |
| <b>VSS</b>            | Vehicle Speed Sensor                      |



# Section E - Engine and System Identification

## Section Contents

|                                    | Page |
|------------------------------------|------|
| <b>Engine Diagrams</b> .....       | E-3  |
| Engine Views .....                 | E-3  |
| <b>Engine Identification</b> ..... | E-1  |
| Cummins Engine Nomenclature .....  | E-1  |
| ECM Dataplate .....                | E-2  |
| Engine Dataplate .....             | E-1  |
| Fuel Pump Dataplate .....          | E-1  |

**THIS PAGE LEFT INTENTIONALLY BLANK**




## Engine Identification

### Cummins Engine Nomenclature

The model name provides identification data for the engine. Refer to the illustration for the model name identification.

The applications codes are:


- A = Agricultural
- C = Construction
- D = Generator drive
- F = Fire pump
- G = Generator set
- L = Locomotive
- M = Marine
- P = Power unit
- R = Railcar
- T = Tactical military.

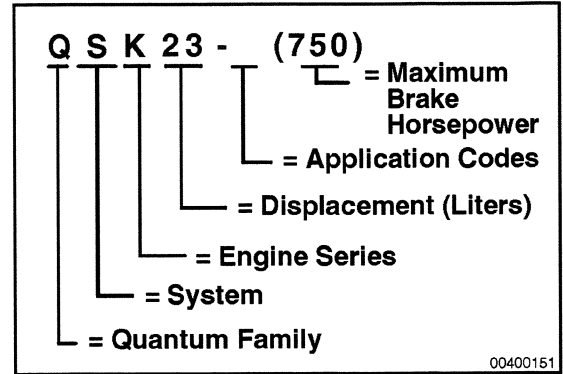

### Engine Dataplate


The engine dataplate shows specific information about the engine. The engine serial number (ESN), Control Parts List (CPL), model, horsepower and rpm ratings, and Environmental Protection Agency (EPA) information provide information for ordering parts and service needs.


The engine dataplate **must not** be changed unless approved by Cummins Inc.

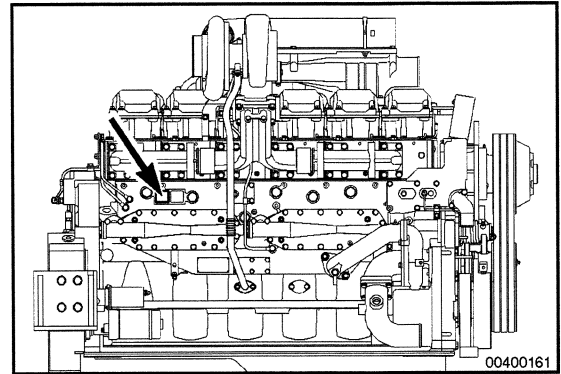

### Fuel Pump Dataplate

The fuel pump dataplate is located on the top of the fuel pump. It provides information for fuel pump calibration.

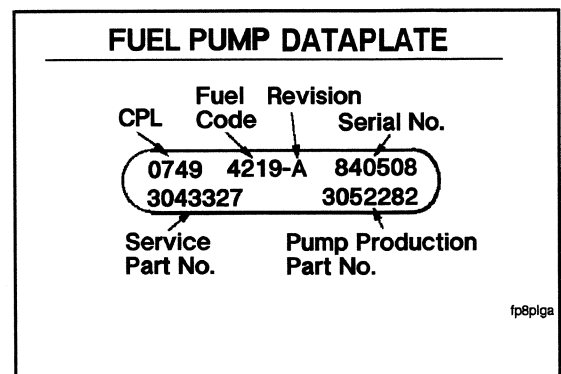

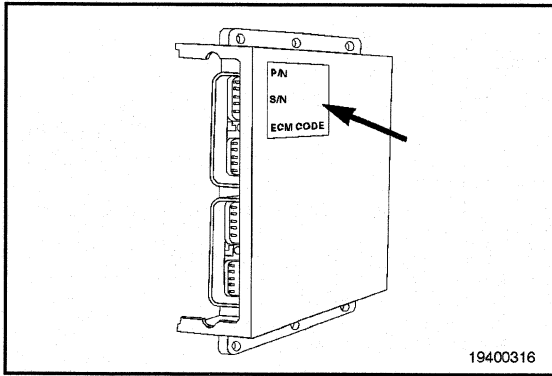

### ECM Daplate

The external ECM dataplate is located on top of the ECM.

The dataplate contains the following:


- ECM part number (P/N)
- ECM serial number (S/N)
- Manufacturer date code (D/C)
- Supplier identifier (S/I)
- Input voltage rating of the ECM (V/R).

The dataplate on the right contains engine and calibration information. This includes the engine serial number (ESN), ECM calibration date (Date), and ECM calibration code.

## Engine Diagrams

### Engine Views


The illustrations show the locations of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

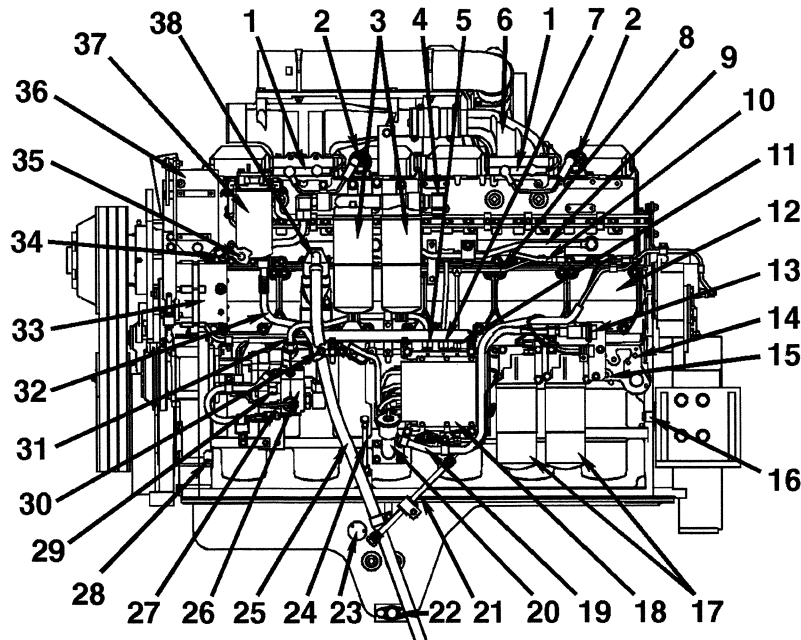

00400154

Left Side - Industrial

- |  |  |
|--|--|
| 1. Grid heaters (Industrial <b>only</b> )                | 21. Fuel rail dampening hose                                     |
| 2. Grid heater relays (Industrial <b>only</b> )          | 22. Engine oil drain valve                                       |
| 3. Fuel filters  | 23. Oil level sensor (optional)                                  |
| 4. Fuel inlet (to filters)                               | 24. Dipstick   |
| 5. Fuel inlet (to ECVA)                                  | 25. Blowby tube  |
| 6. Air intake connection (Industrial <b>only</b> )       | 26. Fuel pump  |
| 7. Fuel timing supply                                    | 27. Fuel pump pressure sensor                                    |
| 8. Fuel pipe (to fuel rail)                              | 28. Oil pressure check point (to front idler gears)              |
| 9. Fuel pipe (return)                                    | 29. Fuel pump actuator   |
| 10. Fuel pipe (for injection timing)                     | 30. Oil pressure sensor  |
| 11. Fuel rail supply                                     | 31. Fuel pipe (pump to ECVA)                                     |
| 12. Cam follower cover                                   | 32. Fuel pipe (filters to pump)                                  |
| 13. OEM electrical connections (Industrial <b>only</b> ) | 33. Alternator   |
| 14. Oil pressure checkpoint (after filters)              | 34. Intake manifold pressure sensor (Industrial <b>only</b> )    |
| 15. Oil pressure checkpoint (before filters)             | 35. Intake manifold temperature sensor (Industrial <b>only</b> ) |
| 16. Engine barring device                                | 36. Refrigerant compressor mounting location                     |
| 17. Oil filters  | 37. Coolant filter (Industrial <b>only</b> )                     |
| 18. ECVA/ECM   | 38. Crankcase breather assembly.                                 |
| 19. Wiring harness                                       |  |
| 20. Oil fill port  |  |

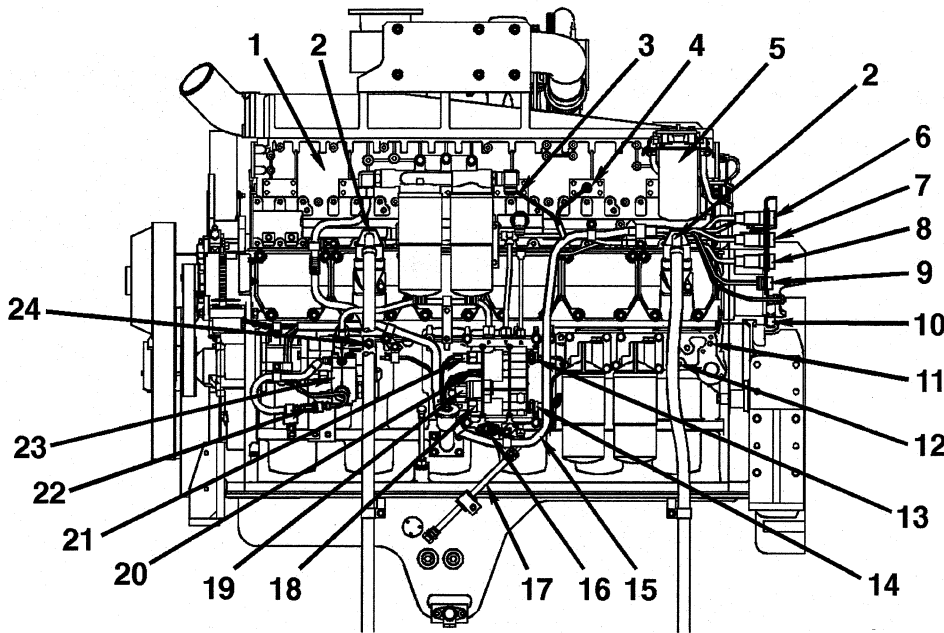

Left Side - Power Generation

00400163

- |   |                                 |
|---|---------------------------------|
| 1. Intake manifold (Power Generation <b>only</b> )                    | 13. Fuel timing pressure sensor |
| 2. Crankcase breathers  | 14. Fuel rail pressure sensor   |
| 3. Intake manifold pressure sensor (Power Generation <b>only</b> )    | 15. Wiring harness              |
| 4. Intake manifold temperature sensor (Power Generation <b>only</b> ) | 16. Barometric pressure sensor  |
| 5. Coolant filter (Power Generation <b>only</b> )                     | 17. Fuel rail dampening hose    |
| 6. Inline B connector (Power Generation <b>only</b> )                 | 18. Fuel rail actuator          |
| 7. Inline A connector (Power Generation <b>only</b> )                 | 19. Fuel shutoff valve          |
| 8. Inline C connector (Power Generation <b>only</b> )                 | 20. Fuel temperature sensor     |
| 9. Datalink connector (Power Generation <b>only</b> )                 | 21. Fuel timing actuator        |
| 10. Engine speed sensor (Power Generation <b>only</b> )               | 22. Fuel pump pressure sensor   |
| 11. Oil pressure checkpoint (after filters)                           | 23. Fuel pump actuator          |
| 12. Oil pressure checkpoint (before filters)                          | 24. Oil pressure sensor.        |