

Shop Manual

BULLDOZER

D155A-6

SERIAL NUMBERS 85001 and up

KOMATSU

BULLDOZER

D155A-6

Machine model Serial number

D155A-6 85001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02854-06
00 Index and foreword	SEN02855-06
Index	SEN02856-06 ●
Foreword and general information	SEN02857-03
01 Specification	SEN02858-02
Specification and technical data	SEN02859-02
10 Structure, function and maintenance standard	SEN02860-03
Engine and cooling system	SEN02861-01
Power train, Part 1	SEN02862-01
Power train, Part 2	SEN02863-00
Undercarriage and frame	SEN02864-00
Hydraulic system	SEN02865-02
Work equipment	SEN02866-00
Cab and its attachments	SEN02867-00
Electrical system	SEN02868-02
20 Standard value table	SEN02869-00
Standard service value table	SEN03199-00
30 Testing and adjusting	SEN02870-03
Testing and adjusting, Part 1	SEN03200-02 ●
Testing and adjusting, Part 2	SEN03201-01 ●
Testing and adjusting, Part 3	SEN03202-03 ●
Testing and adjusting, Part 4	SEN03203-00
40 Troubleshooting	SEN02871-02
Failure code table and fuse locations	SEN03204-02 ●
General information on troubleshooting	SEN03205-02 ●
Troubleshooting by failure and error codes, Part 1	SEN03206-00
Troubleshooting by failure and error codes, Part 2	SEN03207-01
Troubleshooting by failure and error codes, Part 3	SEN03208-01 ●
Troubleshooting by failure and error codes, Part 4	SEN03209-00
Troubleshooting of electrical system (E-mode)	SEN03210-01

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03211-00
Troubleshooting of engine (S-mode)	SEN03212-01
50 Disassembly and assembly	SEN02872-02
General information on disassembly and assembly	SEN03366-02 ●
Engine and cooling system	SEN03367-02 ●
Power train, Part 1	SEN03368-01
Power train, Part 2	SEN03369-01 ●
Power train, Part 3	SEN03370-00
Undercarriage and frame	SEN03371-00
Hydraulic system	SEN03372-00
Work equipment	SEN03373-00
Cab and its attachments	SEN03375-00
Electrical system	SEN03376-01 ●
60 Air conditioner	SEN04441-00
Structure, function, testing, adjusting, and troubleshooting	SEN04442-00
90 Diagrams and drawings	SEN02873-02
Hydraulic diagrams and drawings	SEN02875-01
Electrical diagrams and drawings	SEN02874-01

Table of contents

00 Index and foreword	
Index	SEN02856-06
Composition of shop manual.....	2
Table of contents	4
Foreword and general information	SEN02857-03
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN02859-02
Specification dimension drawings	2
Specifications	3
Weight table	9
Table of fuel, coolant and lubricants	12
10 Structure, function and maintenance standard	
Engine and cooling system	SEN02861-01
Radiator, oil cooler.....	2
Engine mount	9
Cooling fan pump	10
Cooling fan motor.....	18
Power train, Part 1	SEN02862-01
Power train skeleton.....	2
Overall drawing of power train unit.....	4
Power train hydraulic piping drawing.....	6
Damper, universal joint.....	8
Torque converter, PTO	10
Transmission	18
Transmission ECMV.....	34
Main relief valve and torque converter relief valve.....	40
Lubricating oil relief valve	42
Scavenging pump.....	44
Power train and steering lubrication pump	46
Power train, Part 2	SEN02863-00
Work equipment pump	2
Work equipment cooler bypass valve.....	15
Steering, brake control	16
Steering unit	18
Steering control valve.....	32
Steering clutch ECMV, steering brake ECMV	34
Parking brake solenoid valve	40
Sudden stop prevention valve	42
Final drive.....	45
Sprocket	50

Undercarriage and frame	SEN02864-00	
Track frame		2
Recoil spring		4
Idler		6
Track roller		8
Carrier roller		10
Track shoe.....		12
Main frame		18
Suspension		20
Hydraulic system	SEN02865-02	
Work equipment hydraulic piping diagram		2
Work equipment control piping diagram.....		6
Work equipment control		8
Hydraulic tank and filter.....		10
Accumulator		12
PPC valve		13
Work equipment lock valve		26
Control valve		28
Work equipment cylinder.....		50
Piston valve.....		52
Quick drop valve		54
Self pressure reducing valve.....		55
Work equipment	SEN02866-00	
Cylinder stay		2
Blade		4
Cutting edge, end bit.....		6
Ripper.....		8
Cab and its attachments	SEN02867-00	
Cab mount + ROPS pin.....		2
ROPS cab		3
ROPS floor		4
Air conditioner		5
Electrical system	SEN02868-02	
Engine control		2
Engine control system.....		3
Deceleration potentiometer		4
Monitor system.....		6
Sensors		25
Palm command control system		28
KOMTRAX system		31
20 Standard value table		
Standard service value table	SEN03199-00	
Standard value table for engine		2
Standard value table for machine.....		3
30 Testing and adjusting		
Testing and adjusting, Part 1	SEN03200-02	
Tools for testing, adjusting, and troubleshooting		3
Sketches of special tools.....		7
Measuring engine speed.....		8
Measuring intake air pressure (boost pressure).....		10
Measuring exhaust temperature		12
Measuring exhaust gas color		14
Adjusting valve clearance		15
Measuring compression pressure		16

Measuring blow-by pressure	18
Measuring engine oil pressure	19
Handling fuel system parts	20
Releasing residual pressure from fuel system	20
Measuring fuel pressure	21
Measuring fuel return rate and fuel leakage	22
Bleeding air from fuel circuit	26
Measuring fuel circuit for leakage	28
Testing and adjusting alternator belt tension	29
Testing and adjusting air conditioner compressor belt tension	30
Measuring fan speed	31
Measuring fan circuit oil pressure	32
Bleeding air from fan pump	33
Bleeding air from work equipment pump	34
Adjusting fuel control dial and decelerator pedal	35
Testing and adjusting, Part 2	SEN03201-01
Measuring power train oil pressure	3
Adjusting transmission output shaft speed sensor	11
Simple test procedure for brake performance	12
Adjusting brake pedal	13
Adjusting parking brake lever	15
Emergency escape method when power train has trouble	17
Adjusting idler clearance	20
Testing and adjusting track shoe tension	22
Measuring and adjusting work equipment oil pressure	23
Measuring control circuit basic pressure	26
Measuring work equipment lock solenoid valve output pressure (PPC valve basic pressure) ...	27
Measuring PPC valve output pressure	28
Adjusting play of work equipment PPC valve	30
Measuring ripper pin puller solenoid valve output pressure	31
Testing parts which cause hydraulic drift of blade and ripper	32
Measuring internal leakage of work equipment cylinder	33
Releasing residual pressure from work equipment cylinder	34
Bleeding air from work equipment cylinder	34
Adjusting work equipment lock lever	35
Adjusting blade	36
Adjusting operator's cab	38
Testing and adjusting, Part 3	SEN03202-03
Special functions of machine monitor (EMMS)	2
Testing and adjusting, Part 4	SEN03203-00
Handling of power supply circuit of engine controller	2
Preparation work for troubleshooting of electrical system	3
Pm Clinic	5
40 Troubleshooting	
Failure code table and fuse locations	SEN03204-02
Failure codes table	2
Fuse locations	8
General information on troubleshooting	SEN03205-02
Points to remember when troubleshooting	2
Sequence of events in troubleshooting	3
Check before troubleshooting	4
Classification and procedures for troubleshooting	5
Information in troubleshooting table	8
Connection table for connector pin numbers	10
T-branch box and T-branch adapter table	46

Troubleshooting by failure and error codes, Part 1	SEN03206-00
Failure code [1500L0] Transmission clutch: Abnormal	3
Failure code [15SAL1] Forward clutch: Fill high.....	4
Failure code [15SALH] Forward clutch: Fill low	5
Failure code [15SBL1] Reverse clutch: Fill high	6
Failure code [15SBLH] Reverse clutch: Fill low	7
Failure code [15SEL1] Speed 1st clutch: Fill high.....	8
Failure code [15SELH] Speed 1st clutch: Fill low.....	9
Failure code [15SFL1] Speed 2nd clutch: Fill high.....	10
Failure code [15SFLH] Speed 2nd clutch: Fill low.....	11
Failure code [15SGL1] Speed 3rd clutch: Fill high.....	12
Failure code [15SGLH] Speed 3rd clutch: Fill low.....	13
Failure code [2201L1] When right steering clutch oil pressure command current is OFF, fill signal is ON	14
Failure code [2201LH] When right steering clutch oil pressure command current is ON, fill signal is OFF	16
Failure code [2202L1] When left steering clutch oil pressure command current is OFF, fill signal is ON	18
Failure code [2202LH] When left steering clutch oil pressure command current is ON, fill signal is OFF	20
Failure code [2300KM] Stall in 1st gear speed.....	22
Failure code [2301L1] Right brake: Fill high.....	23
Failure code [2301LH] Right brake: Fill low	24
Failure code [2302L1] Left brake: Fill high	25
Failure code [2302LH] Left brake: Fill low.....	26
Failure code [7RFAKA] ECM HOLD RELAY: Disconnection.....	28
Failure code [AA10NX] Air Cleaner Clogging	30
Failure code [AB00MA] Battery Charge Abnormal.....	32
Failure code [B@BAZG] Eng Oil Press Low	34
Failure code [B@BCNS] Eng Water Overheat.....	34
Failure code [B@BCZK] Eng Water Level Low.....	35
Failure code [B@CENS] T/C Oil Overheat	35
Failure code [B@HANS] Hyd Oil Overheat.....	36
Failure code [CA111] EMC Critical Internal Failure.....	38
Failure code [CA115] Eng Ne and Bkup Speed Sens Error.....	40
Failure code [CA122] Chg (boost) Air Press Sensor High Error	42
Failure code [CA123] Chg (boost) Air Press Sensor Low Error	44
Failure code [CA131] Throttle Sensor High Error	46
Failure code [CA132] Throttle Sensor Low Error	48
Failure code [CA135] Eng Oil Press Sensor High Error.....	50
Failure code [CA141] Eng Oil Press Sensor Low Error	52
Failure code [CA144] Coolant Temp Sens High Error.....	54
Failure code [CA145] Coolant Temp Sens Low Error	56
Failure code [CA153] Chg (boost) Air Temp Sensor High Error.....	58
Failure code [CA154] Chg (boost) Air Temp Sensor Low Error	60
Failure code [CA187] Sens Supply 2 Volt Low Error.....	60
Failure code [CA221] Ambient Press Sens High Error	62
Failure code [CA222] Ambient Press Sens Low Error	64
Failure code [CA227] Sens Supply 2 Volt High Error.....	66
Troubleshooting by failure and error codes, Part 2	SEN03207-01
Failure code [CA234] Eng Overspeed	3
Failure code [CA238] Ne Speed Sens Supply Volt Error	4
Failure code [CA263] Fuel Temp Sensor High Error.....	6
Failure code [CA265] Fuel Temp Sensor Low Error.....	8
Failure code [CA271] PCV1 Short Error	9
Failure code [CA272] PCV1 Open Error	10
Failure code [CA273] PCV2 Short Error	11
Failure code [CA274] PCV2 Open Error	12

Failure code [CA322] Inj #1 Open/Short Error	14
Failure code [CA323] Inj #5 Open/Short Error	16
Failure code [CA324] Inj #3 Open/Short Error	18
Failure code [CA325] Inj #6 Open/Short Error	20
Failure code [CA331] Inj #2 Open/Short Error	22
Failure code [CA332] Inj #4 Open/Short Error	24
Failure code [CA342] Calibration Code Incompatibility	26
Failure code [CA351] Injectors Drive Circuit Error	28
Failure code [CA352] Sens Supply 1 Volt Low Error	30
Failure code [CA386] Sens Supply 1 Volt High Error	32
Failure code [CA441] Battery Voltage Low Error.....	34
Failure code [CA442] Battery Voltage High Error.....	34
Failure code [CA449] Rail Press Very High Error.....	35
Failure code [CA451] Rail Press Sensor High Error	36
Failure code [CA452] Rail Press Sensor Low Error	38
Failure code [CA553] Rail Press High Error.....	38
Failure code [CA554] Rail Press Sensor In Range Error	39
Failure code [CA559] Rail Press Low Error.....	40
Failure code [CA689] Eng Ne Speed Sensor Error	44
Failure code [CA731] Eng Bkup Speed Sens Phase Error	46
Failure code [CA757] All Continuous Data Lost Error	46
Failure code [CA778] Eng Bkup Speed Sensor Error	48
Failure code [CA1633] KOMNET Datalink Timeout Error	50
Failure code [CA2185] Throt Sens Sup Volt High Error	52
Failure code [CA2186] Throt Sens Sup Volt Low Error	54
Failure code [CA2249] Rail Press Very Low Error	54
Failure code [CA2555] Grid Htr Relay Volt Low Error	55
Failure code [CA2556] Grid Htr Relay Volt High Error	56
Failure code [D110KA] Battery relay: Disconnection.....	58
Failure code [D110KB] Battery Relay: Drive Short Circuit.....	60
Failure code [D130KA] Neutral relay: Disconnection	62
Failure code [D130KB] Neutral relay: Short circuit.....	64
Failure code [D161KA] Back-up alarm relay: Disconnection.....	66
Failure code [D161KB] Back-up alarm relay: Short circuit	68
Failure code [D190KA] ACC signal relay: Disconnection.....	70
Failure code [D190KB] ACC signal relay: Short circuit	72
Troubleshooting by failure and error codes, Part 3	SEN03208-01
Failure code [D5ZKKX] Throttle Dial: Out of normal range	4
Failure code [DAFRKR] CAN Disconnection (Monitor)	6
Failure code [DB2RKR] CAN Disconnection (Engine controller)	8
Failure code [DB90KR] PT controller: Can communication lost.....	10
Failure code [DBE0KK] PT controller: Source voltage reduction	12
Failure code [DBE0KT] PT controller: Abnormality in controller.....	14
Failure code [DBE6KK] PT controller: Source voltage reduction	16
Failure code [DBE7KK] PT controller: Source voltage reduction	18
Failure code [DBE9KQ] PT controller: Type select signal	20
Failure code [DD12KA] Shift up Sw: Disconnection	22
Failure code [DD12KB] Shift up Sw: Short circuit	24
Failure code [DD13KA] Shift down Sw: Disconnection	26
Failure code [DD13KB] Shift down Sw: Short circuit.....	28
Failure code [DD14KA] Parking lever Sw: Disconnection	30
Failure code [DD14KB] Parking lever Sw: Short circuit.....	32
Failure code [DDDDKA] Back up brake Sw: Disconnection.....	34
Failure code [DDDDKB] Back up brake Sw: Short circuit	36
Failure code [DDDDKX] Back up brake Sw: Signal mismatch	38
Failure code [DGT1KA] T/C oil temp sensor: Abnormal.....	40
Failure code [DGT1KX] T/C oil temp sensor: Abnormal.....	42
Failure code [DH21KA] Weq pressure sensor: Disconnection	44

Failure code [DH21KB] Weq pressure sensor: Short circuit	46
Failure code [DK10KX] Fuel control Dial: Out of normal range.....	48
Failure code [DK30KA] ST lever 1: Disconnection.....	50
Failure code [DK30KB] ST lever 1: Short circuit	52
Failure code [DK30KX] ST lever 1: Out of normal range	54
Failure code [DK30KZ] RL lever: Disconnection or short circuit	54
Failure code [DK30L8] ST lever: Signal mismatch.....	55
Failure code [DK31KA] ST lever 2: Disconnection.....	56
Failure code [DK31KB] ST lever 2: Short circuit	58
Failure code [DK40KA] Brake potentiometer: Disconnection.....	60
Failure code [DK40KB] Brake potentiometer: Short circuit	62
Failure code [DK55KX] FR lever: Out of normal range	64
Failure code [DK55KZ] FR lever: Disconnection or short circuit	64
Failure code [DK55L8] FR lever: Signal mismatch	65
Failure code [DK56KA] FR lever 1: Disconnection	66
Failure code [DK56KB] FR lever 1: Short circuit	68
Troubleshooting by failure and error codes, Part 4	SEN03209-00
Failure code [DK57KA] FR lever 2: Disconnection	4
Failure code [DK57KB] FR lever 2: Short circuit	6
Failure code [DKH1KA] Pitch angle sensor: Disconnection	8
Failure code [DKH1KB] Pitch angle sensor: Short circuit	10
Failure code [DLT3KA] T/M out-speed sensor: Disconnection.....	12
Failure code [DLT3KB] T/M out-speed sensor: Abnormal.....	13
Failure code [DW7BKA] Fan rev EPC: Disconnection	14
Failure code [DW7BKB] Fan rev EPC: Short circuit.....	15
Failure code [DWN3KA] Ssp solenoid: Disconnection	16
Failure code [DWN3KB] Ssp solenoid: Short circuit	18
Failure code [DWN3KY] Ssp solenoid: Short circuit	20
Failure code [DWN5KA] Fan pump solenoid: Disconnection.....	22
Failure code [DWN5KB] Fan pump solenoid: Short circuit	23
Failure code [DXH4KA] 1st clutch ECMV: Disconnection	24
Failure code [DXH4KB] 1st clutch ECMV: Short circuit.....	25
Failure code [DXH4KY] 1st clutch ECMV: Short circuit.....	26
Failure code [DXH5KA] 2nd clutch ECMV: Disconnection	27
Failure code [DXH5KB] 2nd clutch ECMV: Short circuit	28
Failure code [DXH5KY] 2nd clutch ECMV: Short circuit	29
Failure code [DXH6KA] 3rd clutch ECMV: Disconnection.....	30
Failure code [DXH6KB] 3rd clutch ECMV: Short circuit	31
Failure code [DXH6KY] 3rd clutch ECMV: Short circuit	32
Failure code [DXH7KA] R clutch ECMV: Disconnection	33
Failure code [DXH7KB] R clutch ECMV: Short circuit.....	34
Failure code [DXH7KY] R clutch ECMV: Short circuit.....	35
Failure code [DXH8KA] F clutch ECMV: Disconnection.....	36
Failure code [DXH8KB] F clutch ECMV: Short circuit	37
Failure code [DXH8KY] F clutch ECMV: Short circuit	38
Failure code [DXH9KA] Right steering clutch ECMV disconnection	40
Failure code [DXH9KB] Right steering clutch ECMV short circuit.....	42
Failure code [DXH9KY] Right steering clutch ECMV hot short	44
Failure code [DXHAKA] Left steering clutch ECMV disconnection	46
Failure code [DXHAKB] Left steering clutch ECMV short circuit.....	48
Failure code [DXHAKY] Left steering clutch ECMV hot short	50
Failure code [DXHBKA] Right brake ECMV: Disconnection	52
Failure code [DXHBKB] Right brake ECMV: Short circuit	54
Failure code [DXHBKY] Right brake ECMV: Short circuit	56
Failure code [DXHCKA] Left brake ECMV: Disconnection.....	58
Failure code [DXHCKB] Left brake ECMV: Short circuit	60
Failure code [DXHCKY] Left brake ECMV: Short circuit	62
Failure code [DXJ4KA] Weq lock Sol.: Disconnection	64
Failure code [DXJ4KB] Weq lock Sol.: Short circuit.....	65

Troubleshooting of electrical system (E-mode)	SEN03210-01
Before carrying out troubleshooting for electrical system.....	3
Information in troubleshooting table	7
E-1 When starting switch turned ON, machine monitor displays nothing.....	8
E-2 When starting switch turned ON (before starting engine), basic check item lights up.....	10
E-3 Engine does not start (Engine does not turn)	12
E-4 Preheater does not operate	15
E-5 Precaution item lights up while engine is running	18
E-6 Emergency stop item lights up while engine is running	20
E-7 Engine coolant temperature gauge does not indicate normally.....	22
E-8 Fuel level gauge does not indicate normally.....	23
E-9 Power train oil temperature gauge (multi-gauge) does not indicate normally.....	25
E-10 Hydraulic temperature gauge (multi-gauge) does not indicate normally	26
E-11 Contents of display by machine monitor are different from applicable machine	28
E-12 Machine monitor does not display some items	28
E-13 Function switch does not work.....	28
E-14 Operation mode does not change	29
E-15 Gearshift mode does not change.....	29
E-16 Customize function does not operate normally.....	30
E-17 Customize memory function does not normally	30
E-18 Alarm buzzer cannot be stopped	31
E-19 Air conditioner does not operate normally (including air conditioner fault history).....	32
E-20 When starting switch is turned OFF, service meter is not displayed.....	46
E-21 Machine monitor cannot be set in service mode	46
E-22 Ripper pin puller cylinder does not operate	48
E-23 Backup alarm does not sound or does not stop	50
E-24 Headlamp, rear lamp, and ripper point lamp do not light up.....	52
E-25 Windshield wiper and window washer do not operate.....	57
E-26 KOMTRAX terminal does not operate normally.....	73
E-27 Fan does not reverse.....	74
E-28 Gear cannot be shifted	76
E-29 Electric priming pump does not operate or does not stop automatically	78
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03211-00
Information in troubleshooting table	3
H-1 Power is low (Drawbar pull is low).....	4
H-2 Machine does not travel (at 2nd or 3rd gear speed).....	5
H-3 Machine does not start at any gear speed	6
H-4 Machine can travel only forward or in reverse.....	7
H-5 When gear speed or travel direction is changed, time lag is large	8
H-6 Steering is not possible.....	9
H-7 Steering is possible only on one side	10
H-8 Steering overrun occurs.....	11
H-9 Brake does not work.....	12
H-10 Power train oil is overheated	13
H-11 Speed of all work equipment is low.....	14
H-12 No work equipment moves	15
H-13 Blade lift speed or power is low	16
H-14 Blade tilt speed or power is low	17
H-15 Ripper lift speed or power is low.....	18
H-16 Ripper tilt speed or power is low.....	19
H-17 Hydraulic drift of blade lift is large.....	19
H-18 Hydraulic drift of blade tilt is large.....	20
H-19 Hydraulic drift of ripper lift is large	20
H-20 Ripper pin puller cylinder does not operate	21
H-21 Abnormal sound comes out from around work equipment pump	22
H-22 Fan speed is abnormal (Sound and/or vibration are abnormally large or engine over heats)	23

Troubleshooting of engine (S-mode)	SEN03212-01
Method of using troubleshooting chart	3
S-1 Starting performance of engine is poor	6
S-2 Engine does not start	7
S-3 Engine does not pick up smoothly	10
S-4 Engine stops during operation	11
S-5 Engine does not rotate smoothly	12
S-6 Engine lack output (or lacks power)	13
S-7 Exhaust gas is black (incomplete combustion)	14
S-8 Oil consumption is excessive (or exhaust gas is blue)	15
S-9 Oil becomes dirty quickly	16
S-10 Fuel consumption is excessive	17
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down)	18
S-12 Oil pressure drops	19
S-13 Oil level rises (Entry of coolant or fuel)	20
S-14 Coolant temperature becomes too high (Overheating)	21
S-15 Abnormal noise is made	22
S-16 Vibration is excessive	23
S-17 Air cannot be bled from fuel circuit	24
50 Disassembly and assembly	
General information on disassembly and assembly	SEN03366-02
How to read this manual	2
Coating materials list	4
Special tool list	7
Sketches of special tools	13
Engine and cooling system	SEN03367-02
Removal and installation of fuel supply pump assembly	2
Removal and installation of fuel injector assembly	7
Removal and installation of cylinder head assembly	13
Removal and installation of radiator assembly	24
Removal and installation of aftercooler assembly	27
Removal and installation of engine assembly	30
Removal and installation of engine hood assembly	35
Removal and installation of engine front seal	37
Removal and installation of engine rear seal	41
Removal and installation of fuel tank assembly	46
Removal and installation of fan drive assembly	48
Removal and installation of fan motor assembly	49
Power train, Part 1	SEN03368-01
Removal and installation of damper assembly	2
Disassembly and assembly of damper assembly	5
Removal and installation of power train unit assembly	11
Disconnection and connection of power train unit assembly	16
Power train, Part 2	SEN03369-01
Disassembly and assembly of PTO assembly	2
Disassembly and assembly of torque converter assembly	9
Disassembly and assembly of transmission assembly	14
Disassembly and assembly of steering case assembly	31
Power train, Part 3	SEN03370-00
Removal and installation of final drive assembly	2
Disassembly and assembly of final drive assembly	4
Undercarriage and frame	SEN03371-00
Removal and installation of track frame assembly	3
Removal and installation of idler assembly	6
Disassembly and assembly of idler assembly	7

Removal and installation of recoil spring assembly.....	11
Disassembly and assembly of recoil spring assembly	12
Removal and installation of track roller assembly	17
Disassembly and assembly of track roller assembly	18
Removal and installation of carrier roller assembly	20
Disassembly and assembly of carrier roller assembly	21
Removal and installation of pivot shaft assembly.....	25
Spreading and installation of track shoe assembly	27
General disassembly and assembly of track shoe	30
Disassembly and assembly of 1 link in field	44
Disassembly and assembly of master link	48
Removal and installation of equalizer bar assembly	51
Disassembly and assembly of equalizer bar assembly	53
Removal and installation of segment teeth	55
Hydraulic system	SEN03372-00
Removal and installation of hydraulic tank assembly	2
Removal and installation of hydraulic pump assembly.....	4
Disassembly and assembly of hydraulic cylinder assembly.....	7
Work equipment	SEN03373-00
Removal and installation of blade assembly	2
Disassembly and assembly of multi-shank ripper	4
Cab and its attachments	SEN03375-00
Removal and installation of operator's cab assembly	2
Removal and installation of operator's cab glass (Stuck glass).....	4
Removal and installation of operator's cab and floor frame assembly	13
Electrical system	SEN03376-01
Removal and installation of air conditioner unit assembly.....	2
Removal and installation of engine controller assembly	4
Removal and installation of power train controller assembly	5
Removal and installation of KOMTRAX assembly	5
60 Air conditioner	
Structure, function, testing, adjusting, and troubleshooting	SEN04442-00
Structure and function	3
Air conditioner component.....	3
Configuration and function of refrigerating cycle	4
Outline of refrigerating cycle	5
Air conditioner unit	7
Functions of major components in the air conditioner unit	9
Control plate	11
Compressor	13
Condenser	14
Receiver drier	15
Testing, adjusting and troubleshooting	17
Caution about refrigerant.....	17
Troubleshooting procedure	18
Block diagram	19
Circuit diagram and arrangement of connector pins.....	20
Detail of air conditioner unit	22
Part and connector locations	24
Testing air leakage (duct).....	31
Testing with self-diagnosis function	33
Testing temperature control	36
Testing vent (mode) changeover	39
Testing Recirc/Fresh changeover	42
Testing inner sensor.....	44

Testing evaporator temperature sensor	45
Testing sunlight sensor	48
Testing (dual) pressure switch for refrigerant	49
Testing relays and diodes	51
Troubleshooting chart 1	53
Troubleshooting chart 2	54
Troubleshooting for electrical system (E mode)	57
E-1 Power supply system (Air conditioner does not operate)	58
E-2 Compressor system (Air is not cooled)	62
E-3 Blower motor system (No air comes out or air flow is abnormal)	65
E-4 Temperature cannot be controlled	70
E-5 Vent (mode) cannot be changed over	72
E-6 Recirc/Fresh air cannot be changed over	74
Troubleshooting with gauge pressure	76
Connection of service tool	78
Precautions for connecting air conditioner piping	79
Handling of compressor oil	80
1. Control of compressor oil	80
2. Adding of compressor oil	80
3. Compressor replacement	81
4. Applying compressor oil for O-ring	81
 90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN02875-01
Power train hydraulic circuit diagram	3
Hydraulic circuit diagram Serial No.: 85001 – 85024	5
Hydraulic circuit diagram Serial No.: 85025 and up	7
Electrical diagrams and drawings	SEN02874-01
Electrical circuit diagram (Cab spec.)	3
Electrical circuit diagram (Cab less spec.)	5
Electrical circuit diagram for inside cab	7
Connectors table and arrangement drawing	9

D155A-6 Bulldozer

Form No. SEN02856-06

© 2009 KOMATSU
All Rights Reserved
Printed in Japan 06-09

BULLDOZER

D155A-6

Machine model	Serial number
D155A-6	85001 and up

00 Index and foreword

Foreword and general information


Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

Safety notice


(Rev. 2008/08)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.

- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

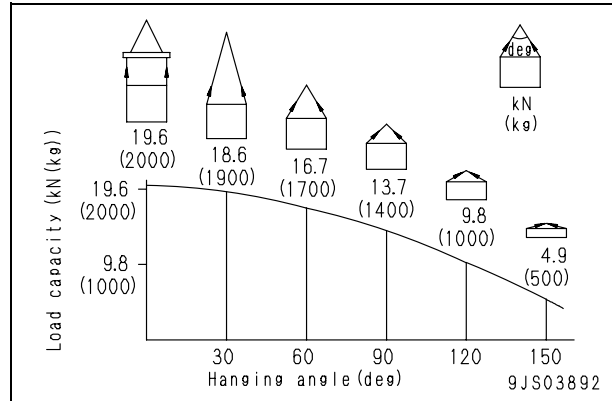

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

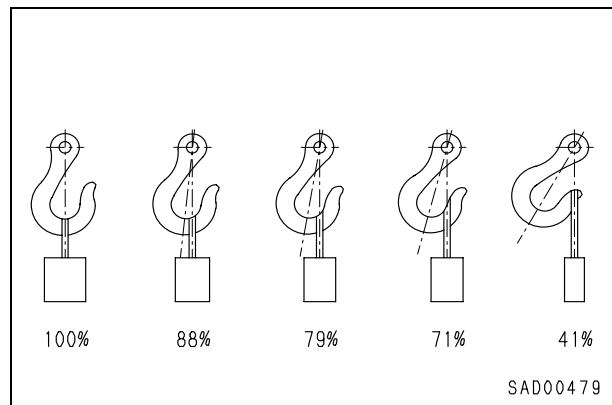


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).