

Shop Manual

ARTICULATED
DUMP TRUCK

GALEO
HM300-2

SERIAL NUMBERS 2001 and up

ecot3

KOMATSU

ARTICULATED DUMP TRUCK

HM300-2

Machine model	Serial number
HM300-2	2001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00237-04
00 Index and foreword	SEN00323-04
Index	SEN00324-04 ●
Foreword and general information	SEN00325-02
01 Specification	SEN00326-01
Specification and technical data	SEN00327-01 ●
10 Structure, function and maintenance standard	SEN00328-01
Engine and cooling system	SEN00329-01 ●
Power train, Part 1	SEN00330-01 ●
Power train, Part 2	SEN00417-01 ●
Steering system	SEN00331-01 ●
Brake system	SEN00332-01 ●
Undercarriage and frame	SEN00333-01 ●
Hydraulic system	SEN00334-01 ●
Cab and its attachments	SEN00335-01 ●
Electrical system, Part 1	SEN00336-01 ●
Electrical system, Part 2	SEN00418-01 ●
Electrical system, Part 3	SEN00419-01 ●
20 Standard value table	SEN00340-01
Standard service value table	SEN00416-01
30 Testing and adjusting	SEN00341-03
Testing and adjusting, Part 1	SEN00667-02
Testing and adjusting, Part 2	SEN00668-03 ●
Testing and adjusting, Part 3	SEN00669-02
40 Troubleshooting	SEN00342-02
Failure code table and fuse locations	SEN03299-00
General information on troubleshooting	SEN00670-02
Troubleshooting by failure code, Part 1	SEN00671-02
Troubleshooting by failure code, Part 2	SEN00672-02
Troubleshooting by failure code, Part 3	SEN00673-02

Troubleshooting by failure code, Part 4	SEN00674-01
Troubleshooting of electrical system (E-mode)	SEN00675-02
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00676-01
Troubleshooting of engine (S-mode)	SEN00677-01
50 Disassembly and assembly	SEN00343-02
General information on disassembly and assembly	SEN00683-02 ●
Engine (SAA6D125E-5)	SEN00684-02 ●
Engine and cooling system (SAA6D125E-5)	SEN00685-02 ●
Power train, Part 1	SEN00686-02 ●
Power train, Part 2	SEN00688-02 ●
Power train, Part 3	SEN00689-02 ●
Power train, Part 4	SEN00690-02 ●
Power train, Part 5	SEN00691-02 ●
Undercarriage and frame	SEN00692-02 ●
Hydraulic system	SEN00693-02 ●
Body	SEN00694-01
Cab and its attachments	SEN00695-02 ●
Electrical system	SEN00696-02 ●
90 Diagrams and drawings	SEN00337-02
Hydraulic diagrams and drawings	SEN00338-01 ●
Electrical diagrams and drawings	SEN00339-02 ●

Table of contents

00 Index and foreword	
Index	SEN00324-04
Composition of shop manual.....	2
Table of contents	4
Foreword and general information	SEN00325-02
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling electric equipment and hydraulic component.....	11
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN00327-01
Specification drawings.....	2
Specifications	3
Weight table	6
Fuel, coolant and lubricants	7
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00329-01
Radiator, oil cooler, aftercooler.....	2
Output shaft.....	3
Power train, Part 1	SEN00330-01
Power train skeleton.....	2
Torque converter and transmission hydraulic piping	4
Brake cooling oil control valve (BCV).....	6
Power train pump	7
Torque converter	10
Transmission	16
Transmission control valve.....	44
ECMV	45
Main relief, torque converter relief valve	52
Power train, Part 2	SEN00417-01
Drive shaft	2
Axle	3
Differential	6
Limited slip differential	12
Final drive.....	16
Steering system	SEN00331-01
Steering column.....	2
Brake system	SEN00332-01
Brake piping	2
Brake valve.....	4
Accumulator charge valve.....	7
Accumulator	11
Slack adjuster.....	12
Brake.....	14
Proportional reducing valve.....	19

Brake system tank.....	20
Parking brake	22
Parking brake solenoid.....	26
Undercarriage and frame	SEN00333-01
Suspension	2
Suspension cylinder	8
Oscillation hitch	10
Hydraulic system	SEN00334-01
Steering, hoist oil pressure piping diagram	2
Dump body control	3
Hydraulic tank and filter.....	4
Flow amp valve	5
Steering valve.....	8
Steering cylinder.....	12
Hoist valve.....	14
EPC valve	20
Hoist cylinder.....	21
Hydraulic pump	22
Cab and its attachments	SEN00335-01
ROPS cab	2
Cab tilt	3
Air conditioner	4
Rear view monitor	12
Controller related.....	15
Electrical system, Part 1	SEN00336-01
Machine monitor system	2
Electrical system, Part 2	SEN00418-01
Automatic shift control system	2
Retarder control system	34
Auto emergency steering system.....	46
Dump control lever	47
Electrical system, Part 3	SEN00419-01
Sensors, switches	2
KOMTRAX terminal system (If equipped).....	10
20 Standard value table	
Standard service value table	SEN00416-01
Standard value table for engine	2
Standard value table for chassis	3
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00667-02
Tools for testing, adjusting, and troubleshooting	3
Measuring engine speed.....	7
Measuring intake air pressure (boost pressure).....	8
Measuring exhaust temperature	9
Measuring exhaust gas color	11
Adjusting valve clearance	12
Measuring compression pressure	14
Measuring blow-by pressure	16
Measuring engine oil pressure	17
Measuring EGR valve and bypass valve drive pressure.....	18
Handling of fuel system devices.....	19
Releasing residual pressure from fuel system	19
Testing fuel pressure	20

Testing fuel return and leak amount	21
Bleeding air from fuel circuit	24
Testing fuel circuit for leakage	25
Testing and adjusting alternator belt tension	26
Testing and adjusting air conditioner compressor belt tension	26
Testing and adjusting, Part 2	SEN00668-03
Measuring torque converter stall speed	3
Measuring power train oil pressure	4
Adjusting transmission speed sensor	12
Testing and adjusting brake oil pressure	14
Testing of accumulator nitrogen gas pressure and procedure for charging accumulator with nitrogen gas	18
Testing brake performance	21
Bleeding air from brake circuit	22
Measuring wear of wheel brake disc	23
Measuring wear of parking brake pad	24
Method for emergency release of parking brake	26
Testing and adjusting steering circuit oil pressure	27
Testing and adjusting suspension cylinder	29
Method of tilting cab up	33
Testing and adjusting dump circuit oil pressure	35
Adjusting body positioner sensor	38
Procedure for adjusting length of spring in body heating spherical joint	39
Handling engine controller high voltage circuit	39
Adjusting transmission controller	40
Method for emergency escape at electrical system failure	41
Testing and adjusting, Part 3	SEN00669-02
Setting and adjusting various equipments	2
Special function of machine monitor (EMMS)	13
How to start operation of KOMTRAX terminal	47
Lamp display of KOMTRAX terminal	50
40 Troubleshooting	
Failure code table and fuse locations	SEN03299-00
Failure code table	2
Before troubleshooting by failure codes	10
General information on troubleshooting	SEN00670-02
Points to remember when troubleshooting	2
Sequence of events in troubleshooting	3
Checks before troubleshooting	4
Classification and procedures for troubleshooting	5
Information in troubleshooting table	6
Connection table for connector pin numbers	8
T-branch box and T-branch adapter table	42
Troubleshooting by failure code, Part 1	SEN00671-02
Failure code [1500L0] (Dual engagement)	3
Failure code [15B0NX] (Transmission oil filter: Clogged)	4
Failure code [15F0KM] (R → F shifting abuse 1: Operational error or incorrect setting)	6
Failure code [15F0MB] (R → F shifting abuse 2: Functional deterioration)	6
Failure code [15F7KM] (forward clutch disc abuse)	7
Failure code [15G0MW] (R clutch: Slipping)	8
Failure code [15G7KM] (reverse clutch disc abuse)	10
Failure code [15H0MW] (Hi clutch: Slipping)	11
Failure code [15J0MW] (Lo clutch: Slipping)	14
Failure code [15K0MW] (1st clutch: Slipping)	16
Failure code [15L0MW] (2nd clutch: Slipping)	18
Failure code [15M0MW] (3rd clutch: Slipping)	20

Failure code [15SBL1] (R clutch solenoid: Fill signal is ON when command current is OFF.)	22
Failure code [15SBMA] (R clutch solenoid: Malfunction)	26
Failure code [15SCL1] (Hi clutch solenoid: Fill signal is ON when command current is OFF.)	28
Failure code [15SCMA] (Hi clutch solenoid: Malfunction)	32
Failure code [15SDL1] (Lo clutch solenoid: Fill signal is ON when command current is OFF.)	34
Failure code [15SDMA] (Lo clutch solenoid: Malfunction)	36
Failure code [15SEL1] (1st clutch solenoid: Fill signal is ON when command current is OFF.)	40
Failure code [15SEMA] (1st clutch solenoid: Malfunction)	44
Failure code [15SFL1] (2nd clutch solenoid: Fill signal is ON when command current is OFF.)	46
Failure code [15SFMA] (2nd clutch solenoid: Malfunction)	50
Failure code [15SGL1] (3rd clutch solenoid: Fill signal is ON when command current is OFF.)	52
Failure code [15SGMA] (3rd clutch solenoid: Malfunction)	56
Failure code [15SJMA] (Lockup clutch solenoid: Malfunction)	58
Failure code [15SKMA] (Inter-axle differential lockup pressure control valve: Malfunction)	60
Failure code [2F00KM] (Parking brake: Error in operation or setting)	62
Failure code [2G42ZG] (Front accumulator: Oil pressure too low)	64
Failure code [2G43ZG] (Rear accumulator: Oil pressure too low)	64
Failure code [989A00] (Engine over run prevention command signal: Operating)	65
Failure code [989D00] (Rear section tipping over alarm: Alarm is activated.)	65
Failure code [AA10NX] (Air cleaner element: Clogged)	66
Failure code [AB00MA] (Alternator: Malfunction)	68
Failure code [B@BAZK] (Engine oil : Level too low)	69
Failure code [B@BCNS] (Engine: Overheat)	70
Failure code [B@BCZK] (Radiator coolant: Level too low)	71
Failure code [B@BFZK] (Fuel level: Level too low)	72
Failure code [B@C6NS] (Front brake oil: Overheat)	73
Failure code [B@C8NS] (Center brake oil: Overheat)	73
Failure code [B@CENS] (Torque converter: Overheat)	74
Failure code [B@HAZK] (Hydraulic tank oil: Level too low)	75
Failure code [B@JANS] (Steering oil: Overheat)	76
Troubleshooting by failure code, Part 2	SEN00672-02
Failure code [CA111] (Abnormality in engine controller)	3
Failure code [CA115] (Abnormal engine Ne and Bkup sensors)	4
Failure code [CA122] (Charge pressure sensor too high)	6
Failure code [CA123] (Charge pressure sensor too low)	8
Failure code [CA131] (Throttle sensor tool high)	10
Failure code [CA132] (Throttle sensor tool low)	12
Failure code [CA135] (Oil pressure sensor too high)	14
Failure code [CA141] (Oil pressure sensor too low)	16
Failure code [CA144] (Coolant temperature sensor too high)	18
Failure code [CA145] (Coolant temperature sensor too low)	20
Failure code [CA153] (Charge temperature sensor too high)	22
Failure code [CA154] (Charge temperature sensor too low)	24
Failure code [CA187] (Sensor power source 2 too low)	24
Failure code [CA221] (Atmospheric sensor too high)	26
Failure code [CA222] (Atmospheric sensor too low)	28
Failure code [CA227] (Sensor power source 2 too high)	30
Failure code [CA234] (Engine over speed)	32
Failure code [CA238] (Abnormal power source for Ne speed sensor)	34
Failure code [CA263] (Fuel temperature sensor too high)	36
Failure code [CA265] (Fuel temperature sensor too low)	38
Failure code [CA271] (PCV1 short circuit)	39

Failure code [CA272] (PCV1 disconnection).....	40
Failure code [CA273] (PCV2 short circuit)	41
Failure code [CA274] (PCV2 disconnection).....	42
Failure code [CA322] (Injector No. 1 system disconnection or short circuit).....	44
Failure code [CA323] (Injector No. 5 system disconnection or short circuit).....	46
Failure code [CA324] (Injector No. 3 system disconnection or short circuit).....	48
Failure code [CA325] (Injector No. 6 system disconnection or short circuit).....	50
Failure code [CA331] (Injector No. 2 system disconnection or short circuit).....	52
Failure code [CA332] (Injector No. 4 system disconnection or short circuit).....	54
Failure code [CA342] (Abnormal engine controller data consistency)	56
Failure code [CA351] (Abnormal injector drive circuit).....	57
Failure code [CA352] (Sensor power source 1 too low).....	58
Failure code [CA386] (Sensor power source 1 too high)	60
Failure code [CA431] (Abnormal idle validation switch).....	62
Failure code [CA432] (Abnormal process with idle validation switch)	64
Failure code [CA441] (Power source voltage too low)	65
Failure code [CA442] (Power source voltage too high).....	65
Failure code [CA449] (Common rail pressure too high 2).....	66
Failure code [CA451] (Common rail pressure sensor too high)	68
Failure code [CA452] (Common rail pressure sensor too low).....	70
Failure code [CA553] (Common rail pressure too high 1).....	70
Failure code [CA554] (In-range error of common rail pressure sensor).....	71
Failure code [CA559] (Loss of pressure feed from supply pump 1).....	72
Failure code [CA689] (Abnormal engine Ne speed sensor).....	76
Failure code [CA697] (Engine controller inside temperature sensor too high).....	78
Failure code [CA698] (Engine controller inside temperature sensor too low)	78
Failure code [CA731] (Abnormal engine Bkup speed sensor phase)	79
Failure code [CA757] (Loss of all engine controller data)	79
Failure code [CA778] (Abnormal engine Bkup speed sensor)	80
Failure code [CA1117] (Loss of partial engine controller data).....	82
Failure code [CA1228] (Abnormal EGR valve servo 1).....	83
Failure code [CA1625] (Abnormal EGR valve servo 2).....	84
Failure code [CA1626] (Short circuit of bypass valve solenoid drive)	86
Failure code [CA1627] (Disconnection in bypass valve solenoid drive).....	88
Failure code [CA1628] (Abnormal bypass valve servo 1)	89
Failure code [CA1629] (Abnormal bypass valve servo 2)	90
Troubleshooting by failure code, Part 3	SEN00673-02
Failure code [CA1631] (Bypass valve lift sensor too high).....	4
Failure code [CA1632] (Bypass valve lift sensor too low)	6
Failure code [CA1633] (Abnormal KOMNET)	8
Failure code [CA1642] (EGR inlet pressure sensor too low).....	10
Failure code [CA1653] (EGR inlet pressure sensor too high)	12
Failure code [CA2185] (Throttle sensor power source too high).....	14
Failure code [CA2186] (Throttle sensor power source too low)	16
Failure code [CA2249] (Loss of pressure feed from supply pump 2).....	16
Failure code [CA2271] (EGR valve lift sensor too high).....	18
Failure code [CA2272] (EGR valve lift sensor too low)	20
Failure code [CA2351] (EGR valve solenoid drive short circuit)	22
Failure code [CA2352] (EGR valve solenoid drive disconnection).....	24
Failure code [CA2555] (Intake air heater relay disconnection)	24
Failure code [CA2556] (Intake air heater relay short circuit).....	26
Failure code [DAF9KM] (Machine monitor connector: Error in operation or setting).....	28
Failure code [DAFRKR] (Abnormal CAN communication (machine monitor): Abnormal communication)	30
Failure code [DAQ0KK] (Transmission controller: Power source voltage too low).....	32
Failure code [DAQ0KT] (Transmission nonvolatile memory: Abnormality in controller).....	34
Failure code [DAQ2KK] (Transmission controller solenoid power source: Voltage too low)	35
Failure code [DAQRKR] (COMMUNICATION LOST: Defective communication).....	36

Failure code [DAQRMA] (Transmission controller option setting: Malfunction)	38
Failure code [DB10KT] (Retarder controller nonvolatile memory: Abnormality in controller)	38
Failure code [DB12KK] (Retarder controller solenoid power source: Power source voltage too low)	39
Failure code [DB13KK] (Retarder controller battery direct power source: too low)	40
Failure code [DB19KQ] (Retarder controller model select signal: Inconsistent model selection signal)	41
Failure code [DB1QMA] (Retarder controller option setting: Malfunction)	41
Failure code [DB1RKR] (CAN communication (retarder controller): Communication disabled)	42
Failure code [DB2RKR] (CAN communication (engine controller): Communication disabled)	44
Failure code [DDTHKA] (Fill switch for Hi clutch: Disconnection)	46
Failure code [DDTJKA] (Fill switch for Lo clutch: Disconnection)	48
Failure code [DDTKKA] (Fill switch for 1st clutch: Disconnection)	50
Failure code [DDTLKA] (Fill switch for 2nd clutch: Disconnection)	51
Failure code [DDTMKA] (Fill switch for 3rd clutch: Disconnection)	52
Failure code [DDTNKA] (Fill switch for R clutch: Disconnection)	53
Failure code [DF10KA] (Gear shift lever: Disconnection)	54
Failure code [DF10KB] (Gear shift lever: Short circuit)	57
Failure code [DGF1KX] (Transmission oil temperature sensor : Input signal out of range)	60
Failure code [DGR3KZ] (Center brake oil temperature sensor : Disconnection or short circuit)	62
Failure code [DGR3L8] (Center brake oil temperature sensor: Inconsistent analog signals)	64
Failure code [DGR4KZ] (Front brake oil temperature sensor: Disconnection or short circuit)	66
Failure code [DGR4L8] (Front brake oil temperature sensor: Inconsistent analog signals)	68
Failure code [DGR6KX] (Steering oil temperature sensor: Input signal out of range)	70
Failure code [DGT1KX] (Torque converter oil temperature sensor: Input signal out of range)	72
Failure code [DHT5KX] (Torque converter oil pressure sensor: Input signal out of range)	74
Failure code [DHT5L6] (Torque converter oil pressure sensor: Inconsistent signals during a travel and stop)	76
Failure code [DHU2KX] (Front accumulator oil pressure sensor : Input signal out of range)	78
Failure code [DHU3KX] (Rear accumulator oil pressure sensor: Input signal out of range)	80
Failure code [DJF1KA] (Fuel level sensor : Disconnection)	82
Failure code [DK51L5] (Retarder lever potentiometer : Potentiometer signal is inconsistent with switch signal)	84
Failure code [DK52KX] (Dump lever potentiometer failure 1: Input signal out of range)	86
Failure code [DK53L8] (Dump lever potentiometer failure 2: Inconsistent analog signal)	88
Failure code [DK54KX] (Body positioner sensor : Input signal out of range)	90
Troubleshooting by failure code, Part 4	SEN00674-01
Failure code [DKH0KX] (Pitch angle sensor: Inclination out of range)	4
Failure code [DLF1KA] (Transmission input shaft speed sensor: Disconnection)	6
Failure code [DLF1LC] (Transmission input shaft speed sensor: Inconsistent rotation speed signal)	7
Failure code [DLF2KA] (Transmission intermediate shaft speed sensor: Disconnection)	8
Failure code [DLF2LC] (Transmission intermediate shaft speed sensor: Inconsistent speed signal)	9
Failure code [DLF4KA] (Differential speed sensor: Disconnection)	10
Failure code [DLT3KA] (Transmission output shaft speed sensor: Disconnection)	11
Failure code [DV00KB] (Alarm buzzer output: Short circuit)	12
Failure code [DW72KZ] (Kick-out solenoid output system: Disconnection or short circuit)	14
Failure code [DW73KZ] (Hoist selector valve output system: Disconnection or short circuit)	16
Failure code [DW78KZ] (Rear brake BCV command output system: Disconnection or short circuit)	18
Failure code [DW79KZ] (Front brake BCV command output system: Disconnection or short circuit)	20

Failure code [DX11K4] (Rear brake proportional pressure reducing solenoid valve: Out of control)	22
Failure code [DX11KA] (Rear brake proportional pressure reducing solenoid valve output circuit: Disconnection)	24
Failure code [DX11KB] (Rear brake proportional pressure reducing solenoid valve: Short circuit)	25
Failure code [DX11KY] (Rear brake proportional pressure reducing solenoid valve: Short circuit to power source line)	26
Failure code [DX11MA] (Rear brake proportional pressure reducing solenoid valve: Malfunction)	28
Failure code [DX12K4] (Front brake proportional pressure reducing solenoid valve: Out of control)	30
Failure code [DX12KA] (Front brake proportional pressure reducing solenoid valve output circuit: Disconnection)	32
Failure code [DX12KB] (Front brake proportional pressure reducing solenoid valve: Short circuit)	33
Failure code [DX12KY] (Front brake proportional pressure reducing solenoid valve: Short circuit to power source line)	34
Failure code [DX12MA] (Front brake proportional pressure reducing solenoid valve: Malfunction)	36
Failure code [DX13KA] (Hoist EPC valve output circuit: Disconnection)	38
Failure code [DX13KB] (Hoist EPC valve output circuit: Short circuit)	39
Failure code [DX13KY] (Hoist EPC valve output circuit: Short circuit in power source line)	40
Failure code [DXH0KA] (Inter-axle differential lock pressure control valve: Disconnection)	41
Failure code [DXH0KB] (Inter-axle differential lock pressure control valve: Short circuit)	42
Failure code [DXH0KY] (Inter-axle differential lockup pressure control valve: Short circuit to power source line)	43
Failure code [DXH1KA] (Lockup clutch solenoid output circuit: Disconnection)	44
Failure code [DXH1KB] (Lockup clutch solenoid output circuit: Short circuit)	45
Failure code [DXH1KY] (Lockup clutch solenoid output circuit: Short circuit to power source line)	46
Failure code [DXH2KA] (Hi clutch solenoid output circuit: Disconnection)	48
Failure code [DXH2KB] (Hi clutch solenoid output circuit: Short circuit)	50
Failure code [DXH2KY] (Hi clutch solenoid output circuit: Short circuit to power source line)	52
Failure code [DXH3KA] (Lo clutch solenoid output circuit: Disconnection)	56
Failure code [DXH3KB] (Lo clutch solenoid output circuit: Short circuit)	58
Failure code [DXH3KY] (Lo clutch solenoid output circuit: Short circuit in power source line)	60
Failure code [DXH4KA] (1st clutch solenoid output circuit: Disconnection)	64
Failure code [DXH4KB] (1st clutch solenoid output circuit: Short circuit)	66
Failure code [DXH4KY] (1st clutch solenoid output circuit: Short circuit to power source line)	68
Failure code [DXH5KA] (2nd clutch solenoid output circuit: Disconnection)	72
Failure code [DXH5KB] (2nd clutch solenoid output circuit: Short circuit)	74
Failure code [DXH5KY] (2nd clutch solenoid output circuit: Short circuit in power source line)	76
Failure code [DXH6KA] (3rd clutch solenoid output circuit: Disconnection)	80
Failure code [DXH6KB] (3rd clutch solenoid output circuit: Short circuit)	82
Failure code [DXH6KY] (3rd clutch solenoid output circuit: Short circuit to power source line)	84
Failure code [DXH7KA] (R clutch solenoid output circuit: Disconnection)	88
Failure code [DXH7KB] (R clutch solenoid output circuit: Short circuit)	90
Failure code [DXH7KY] (R clutch solenoid output circuit: Short circuit to power source line)	92
Troubleshooting of electrical system (E-mode)	SEN00675-02
Before troubleshooting of electrical system	3
Contents of troubleshooting table	6
E-1 Engine does not start	7
E-2 Automatic preheating does not operate	10
E-3 Machine monitor does not display all, when starting switch is turned ON	14
E-4 Machine monitor does not operate when starting switch is OFF	16
E-5 Alarm buzzer does not sound	18

E-6 Gauges of machine monitor, caution lamps or character display section do not display properly.....	19
E-7 Selection of display in character display section cannot be changed.....	20
E-8 Power mode selecting function does not operate properly.....	24
E-9 AISS function does not operate properly.....	25
E-10 Seat belt caution lamp does not display properly.....	26
E-11 Turn signal lamp or turning lamp (hazard lamp) does not work properly.....	27
E-12 Night illumination (lighting) does not work properly.....	30
E-13 Emergency steering does not operate.....	37
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00676-01
Contents of troubleshooting table.....	3
H-1 Machine does not start.....	4
H-2 Machine does not travel smoothly (machine jerks).....	6
H-3 Lockup cannot be cancelled.....	6
H-4 Excessive shock when starting or shifting.....	7
H-5 Transmission does not shift up.....	8
H-6 Machine lacks power or speed when traveling.....	9
H-7 Time lag is excessive when starting or shifting gear.....	11
H-8 Torque converter oil temperature is high.....	12
H-9 Torque converter oil pressure is low.....	13
H-10 Front brake is ineffective.....	14
H-11 Center brake is ineffective.....	15
H-12 Steering wheel is heavy.....	16
H-13 Steering wheel does not work.....	17
H-14 Steering wheel vibrates.....	18
H-15 Dump body lifting speed is slow.....	19
H-16 Dump body does not work.....	20
H-17 Excessive hydraulic drift of dump body.....	21
Troubleshooting of engine (S-mode)	SEN00677-01
How to use a troubleshooting chart.....	3
S-1 Engine is hard to start.....	6
S-2 Engine does not start.....	8
S-3 Engine does not pick up smoothly.....	12
S-4 Engine stops during operations.....	13
S-5 Engine does not rotate smoothly.....	14
S-6 Engine lacks output (or lacks power).....	15
S-7 Exhaust gas color is black (incomplete combustion).....	16
S-8 Oil consumption is excessive (or exhaust gas color is blue).....	18
S-9 Oil gets contaminated prematurely.....	19
S-10 Fuel consumption is excessive.....	20
S-11 Oil is in coolant (or coolant spurts back or coolant level goes down).....	21
S-12 Oil pressure drops.....	22
S-13 Oil level rises (coolant or fuel mixes).....	24
S-14 Coolant temperature rises too high (overheat).....	26
S-15 Abnormal noise comes out.....	27
S-16 Vibration is excessive.....	28
50 Disassembly and assembly	
General information on disassembly and assembly	SEN00683-02
How to read this manual.....	2
Coating materials list.....	4
Special tool list.....	7
Sketches of special tools.....	12
Engine (SAA6D125E-5)	SEN00684-02
Removal and installation of fuel supply pump assembly.....	2
Removal and installation of fuel injector assembly.....	7
Removal and installation of cylinder head assembly.....	12

Removal and installation of engine front seal.....	25
Removal and installation of engine rear seal	27
Engine and cooling system (SAA6D125E-5)	SEN00685-02
Removal and installation of engine assembly	2
Removal and installation of radiator assembly.....	10
Removal and installation of cooling assembly.....	12
Removal and installation of output shaft assembly	15
Disassembly and assembly of output shaft assembly	20
Power train, Part 1	SEN00686-02
Removal and installation of transmission and front differential assembly	2
Disconnection and connection of front differential assembly and transmission assembly	8
Disassembly and assembly of front differential assembly	10
Disassembly and assembly of torque converter assembly	25
Power train, Part 2	SEN00688-02
Disassembly and assembly of transmission assembly	2
Power train, Part 3	SEN00689-02
Removal and installation of center differential assembly.....	2
Disassembly and assembly of center differential assembly	6
Removal and installation of rear differential assembly	23
Disassembly and assembly of rear differential assembly.....	25
Power train, Part 4	SEN00690-02
Removal and installation of front final drive and brake assembly	2
Disassembly and assembly of front final drive and brake assembly	5
Removal and installation of center final drive and brake assembly.....	15
Disassembly and assembly of center final drive and brake assembly	17
Power train, Part 5	SEN00691-02
Disassembly and assembly of rear final drive assembly.....	2
Removal and installation of center axle assembly	9
Removal and installation of rear axle assembly	12
Undercarriage and frame	SEN00692-02
Removal and installation of front suspension cylinder assembly	2
Removal and installation of rear suspension cylinder assembly	4
Removal and installation of equalizer bar	5
Removal and installation of hitch frame assembly	7
Disassembly and assembly of hitch frame assembly.....	17
Hydraulic system	SEN00693-02
Removal and installation of flow amp valve	2
Removal and installation of hoist valve assembly	4
Disassembly and assembly of steering cylinder assembly	7
Disassembly and assembly of hoist cylinder assembly.....	11
Body	SEN00694-01
Removal and installation of body assembly	2
Cab and its attachments	SEN00695-02
Removal and installation of operator's cab.....	2
Removal and installation of operator's cab glass (Stuck glass).....	7
Disassembly and assembly of operator's seat assembly (If equipped).....	14
Electrical system	SEN00696-02
Removal and installation of air conditioner unit assembly.....	2
Removal and installation of engine controller.....	7
Removal and installation of retarder controller	9
Removal and installation of transmission controller assembly	11
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00338-01
Power train hydraulic circuit diagram	3
Steering and hoist hydraulic circuit diagram.....	5

Brake hydraulic circuit diagram	7
Brake cooling hydraulic circuit diagram.....	9
Electrical diagrams and drawings	SEN00339-02
Electrical circuit diagram for inside cab (1/4)	3
Electrical circuit diagram for inside cab (2/4) (Serial No.: 2001 – 2241)	5
Electrical circuit diagram for inside cab (2/4) (Serial No.: 2242 and up)	7
Electrical circuit diagram for inside cab (3/4) (Serial No.: 2001 – 2241)	9
Electrical circuit diagram for inside cab (3/4) (Serial No.: 2242 and up)	11
Electrical circuit diagram for inside cab (4/4)	13
Electrical circuit diagram for outside cab (1/3)	15
Electrical circuit diagram for outside cab (2/3)	17
Electrical circuit diagram for outside cab (3/3)	19
Connectors table and arrangement drawing	21

HM300-2 Articulated dump truck

Form No. SEN00324-04

© 2007 KOMATSU
All Rights Reserved
Printed in Japan 07-07 (02)

ARTICULATED DUMP TRUCK

HM300-2

Machine model	Serial number
HM300-2	2001 and up

00 Index and foreword

Foreword and general information

Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling electric equipment and hydraulic component	11
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

Safety notice

(Rev. 2007/02)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **▲** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

▲ Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine.

- 1) Before carrying out any greasing or repairs, read all the safety plates stuck to the machine. For the locations of the safety plates and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, fork-lift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.

- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (–) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is seen well from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60° , as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120° . If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150° , each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

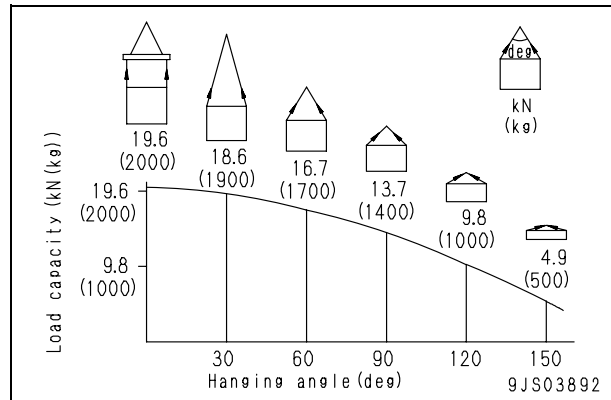

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
- Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

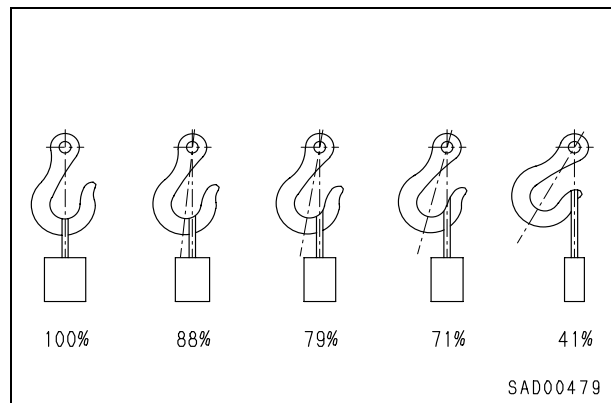


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
- Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ **When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .**

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).