

Toyota Corolla

1984 thru 1992

Front-wheel drive models

92035



Haynes Repair Manual

Based on a complete teardown and rebuild



Includes essential information for today's more complex vehicles

http://manualplace.com/download/toyota-corolla-1984-thru-1992-repair-manual/

Toyota Corolla 1984 Thru 1992 Repair Manual

Toyota Corolla Automotive Repair Manual

by Alan Ahlstrand,
and John H Haynes

Member of the Guild of Motoring Writers

Models covered:

All gasoline engine Toyota Corolla
front wheel drive models

1984 through 1992

Does not include diesel engine or all-wheel drive information



(2D10 - 92035)
(1025)



ABCDE
FGHIJ
KLMNO

2

Haynes Publishing Group
Sparkford Nr Yeovil
Somerset BA22 7JJ England

Haynes North America, Inc
861 Lawrence Drive
Newbury Park
California 91320 USA

About this manual

Its purpose

The purpose of this manual is to help you get the best value from your vehicle. It can do so in several ways. It can help you decide what work must be done, even if you choose to have it done by a dealer service department or a repair shop; it provides information and procedures for routine maintenance and servicing; and it offers diagnostic and repair procedures to follow when trouble occurs.

We hope you use the manual to tackle the work yourself. For many simpler jobs, doing it yourself may be quicker than arranging an appointment to get the vehicle into a shop and making the trips to leave it and pick it up. More importantly, a lot of money can be saved by avoiding the expense the shop

must pass on to you to cover its labor and overhead costs. An added benefit is the sense of satisfaction and accomplishment that you feel after doing the job yourself.

Using the manual

The manual is divided into Chapters. Each Chapter is divided into numbered Sections, which are headed in bold type between horizontal lines. Each Section consists of consecutively numbered paragraphs.

At the beginning of each numbered Section you will be referred to any illustrations which apply to the procedures in that Section. The reference numbers used in illustration captions pinpoint the pertinent Section and the Step within that Section. That is, illustration 3.2 means the illustration refers to Section 3 and Step (or paragraph) 2 within

that Section.

Procedures, once described in the text, are not normally repeated. When it's necessary to refer to another Chapter, the reference will be given as Chapter and Section number. Cross references given without use of the word "Chapter" apply to Sections and/or paragraphs in the same Chapter. For example, "see Section 8" means in the same Chapter.

References to the left or right side of the vehicle assume you are sitting in the driver's seat, facing forward.

Even though we have prepared this manual with extreme care, neither the publisher nor the author can accept responsibility for any errors in, or omissions from, the information given.

NOTE

A **Note** provides information necessary to properly complete a procedure or information which will make the procedure easier to understand.

CAUTION

A **Caution** provides a special procedure or special steps which must be taken while completing the procedure where the Caution is found. Not heeding a Caution can result in damage to the assembly being worked on.

WARNING

A **Warning** provides a special procedure or special steps which must be taken while completing the procedure where the Warning is found. Not heeding a Warning can result in personal injury.

Acknowledgements

We are grateful to Toyota Motor Corporation for assistance with technical information, certain illustrations and vehicle photos.

© Haynes North America, Inc. 1991, 1993, 1999

With permission from J.H. Haynes & Co. Ltd.

A book in the Haynes Automotive Repair Manual Series

Printed in the U.S.A.

All rights reserved. No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage or retrieval system, without permission in writing from the copyright holder.

ISBN 1 56392 064 6

Library of Congress Catalog Card Number 93-77336

While every attempt is made to ensure that the information in this manual is correct, no liability can be accepted by the authors or publishers for loss, damage or injury caused by any errors in, or omissions from, the information given.

Contents

Introductory pages

| | |
|--|------|
| About this manual | 0-2 |
| Introduction to the Toyota Corolla | 0-4 |
| Vehicle identification numbers | 0-5 |
| Buying parts | 0-6 |
| Maintenance techniques, tools and working facilities | 0-6 |
| Booster battery (jump) starting | 0-12 |
| Jacking and towing | 0-13 |
| Automotive chemicals and lubricants | 0-14 |
| Conversion factors | 0-15 |
| Safety first! | 0-16 |
| Troubleshooting | 0-17 |

| | | |
|---|-------|------------|
| Chapter 1 | | 1 |
| Tune-up and routine maintenance | 1-1 | |
| Chapter 2 Part A | | 2A |
| Engines | 2A-1 | |
| Chapter 2 Part B | | 2B |
| General engine overhaul procedures | 2B-1 | |
| Chapter 3 | | 3 |
| Cooling, heating and air conditioning systems | 3-1 | |
| Chapter 4 | | 4 |
| Fuel and exhaust systems | 4-1 | |
| Chapter 5 | | 5 |
| Engine electrical systems | 5-1 | |
| Chapter 6 | | 6 |
| Emissions control systems | 6-1 | |
| Chapter 7 Part A | | 7A |
| Manual transmission | 7A-1 | |
| Chapter 7 Part B | | 7B |
| Automatic transmission | 7B-1 | |
| Chapter 8 | | 8 |
| Clutch and driveaxles | 8-1 | |
| Chapter 9 | | 9 |
| Brakes | 9-1 | |
| Chapter 10 | | 10 |
| Suspension and steering systems | 10-1 | |
| Chapter 11 | | 11 |
| Body | 11-1 | |
| Chapter 12 | | 12 |
| Chassis electrical system | 12-1 | |
| Wiring diagrams | 12-18 | |
| Index | IND-1 | IND |



Haynes author, photographer and mechanic with 1989 Toyota Corolla GT-S

Introduction to the Toyota Corolla

These vehicles are available in two and four-door hatchback and sedan, two-door coupe and four-door station wagon body styles.

The transversely-mounted inline four-cylinder engines used in these models are equipped with either a carburetor or fuel


injection. The engine drives the front wheels through a five-speed manual or a three- or four-speed automatic transaxle via independent driveaxles.

Independent suspension, featuring coil springs and struts, is used at all four wheels. The rack and pinion steering unit is mounted

behind the engine.


The brakes on most models are disc at the front and drums at the rear, with power assist standard. Some models are equipped with front and rear disc brakes.

Vehicle identification numbers

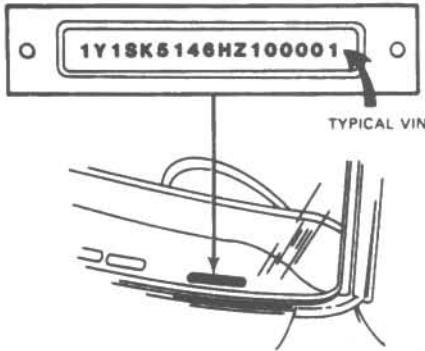

The Vehicle Identification Number is visible from outside the vehicle through the driver's side of the windshield

Modifications are a continuing and unpublicized process in vehicle manufacturing. Since spare parts lists are compiled on a numerical basis, the individual vehicle numbers are essential to correctly identify the component.

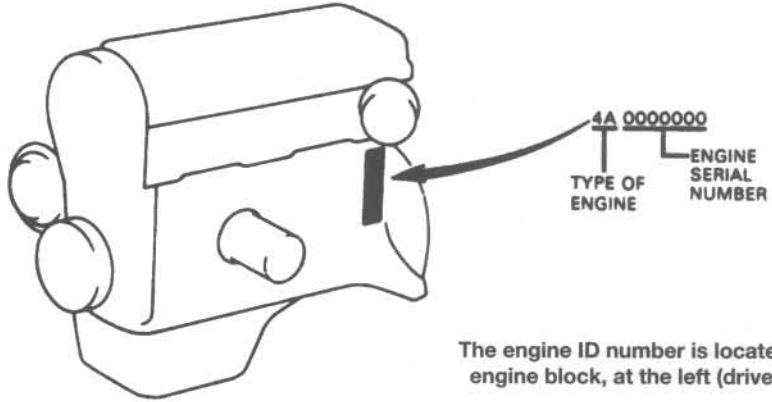

The engine ID number is located on the engine block, at the left (driver's) end

Vehicle identification Number (VIN)

This very important identification number is stamped on a plate attached to the left side of the dashboard, just inside the windshield on the driver's side of the vehicle (see illustration). The VIN also appears on the

Vehicle Certificate of Title and Registration. It contains information such as where and when the vehicle was manufactured, the model year and the body style.

Vehicle Certification Plate


The Vehicle Certification Plate (VC label) is attached to the left front door pillar. The plate contains the name of the manufacturer, the month and year of production, the Gross Vehicle Weight Rating (GVWR) and the certification statement.

Engine serial number


The engine serial number is stamped into the front of the book at the driver's end (see illustration).

Transaxle ID number

The transaxle ID number is located on top of the transaxle housing (see illustration).

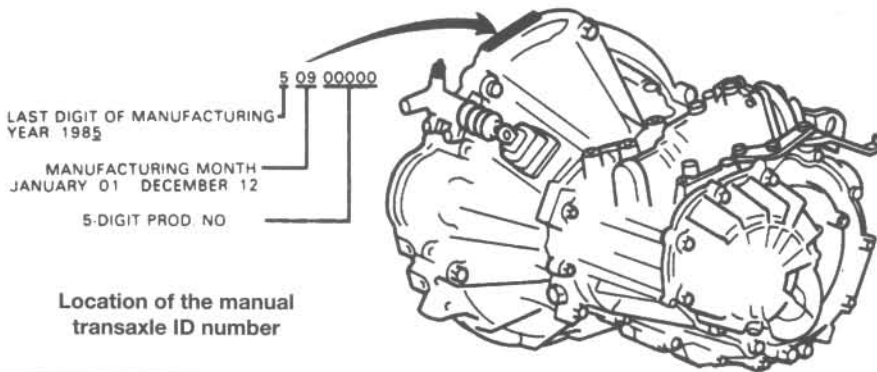

Location of the manual transaxle ID number

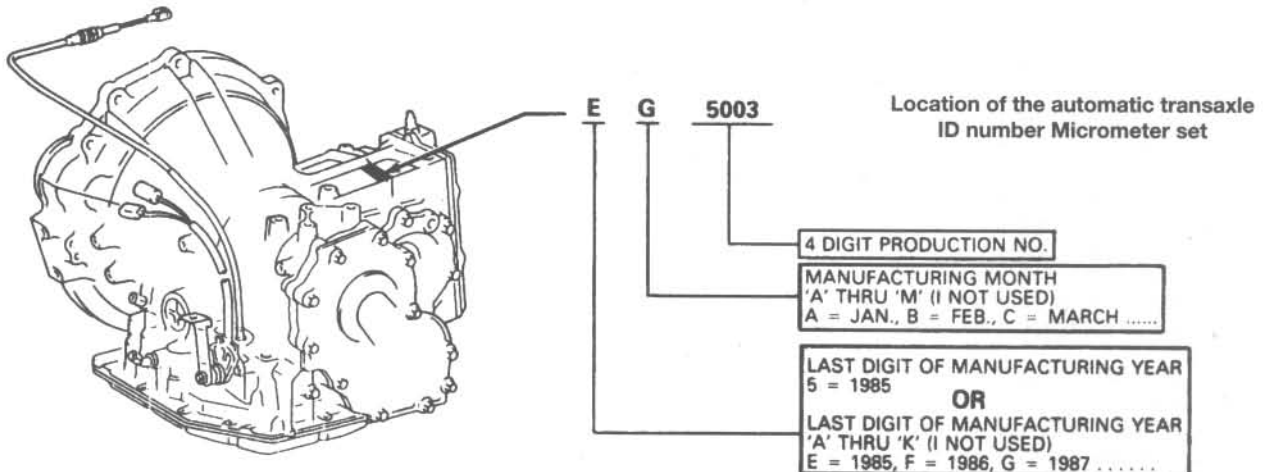

Location of the automatic transaxle ID number Micrometer set

Buying parts

Replacement parts are available from many sources, which generally fall into one of two categories - authorized dealer parts departments and independent retail auto parts stores. Our advice concerning these parts is as follows:

Retail auto parts stores: Good auto parts stores will stock frequently needed components which wear out relatively fast, such as clutch components, exhaust systems, brake parts, tune-up parts, etc. These stores often supply new or reconditioned

parts on an exchange basis, which can save a considerable amount of money. Discount auto parts stores are often very good places to buy materials and parts needed for general vehicle maintenance such as oil, grease, filters, spark plugs, belts, touch-up paint, bulbs, etc. They also usually sell tools and general accessories, have convenient hours, charge lower prices and can often be found not far from home.

Authorized dealer parts department: This is the best source for parts which are

unique to the vehicle and not generally available elsewhere (such as major engine parts, transmission parts, trim pieces, etc.).

Warranty information: If the vehicle is still covered under warranty, be sure that any replacement parts purchased - regardless of the source - do not invalidate the warranty!

To be sure of obtaining the correct parts, have engine and chassis numbers available and, if possible, take the old parts along for positive identification.

Maintenance techniques, tools and working facilities

Maintenance techniques

There are a number of techniques involved in maintenance and repair that will be referred to throughout this manual. Application of these techniques will enable the home mechanic to be more efficient, better organized and capable of performing the various tasks properly, which will ensure that the repair job is thorough and complete.

Fasteners

Fasteners are nuts, bolts, studs and screws used to hold two or more parts together. There are a few things to keep in mind when working with fasteners. Almost all of them use a locking device of some type, either a lockwasher, locknut, locking tab or thread adhesive. All threaded fasteners should be clean and straight, with undamaged threads and undamaged corners on the hex head where the wrench fits. Develop the habit of replacing all damaged nuts and bolts with new ones. Special locknuts with nylon or fiber inserts can only be used once. If they are removed, they lose their locking ability and must be replaced with new ones.


Rusted nuts and bolts should be treated with a penetrating fluid to ease removal and prevent breakage. Some mechanics use turpentine in a spout-type oil can, which works quite well. After applying the rust penetrant, let it work for a few minutes before trying to loosen the nut or bolt. Badly rusted fasteners may have to be chiseled or sawed off or removed with a special nut breaker, available at tool stores.

If a bolt or stud breaks off in an assembly, it can be drilled and removed with a special tool commonly available for this purpose. Most automotive machine shops can perform

this task, as well as other repair procedures, such as the repair of threaded holes that have been stripped out.

Flat washers and lockwashers, when removed from an assembly, should always

be replaced exactly as removed. Replace any damaged washers with new ones. Never use a lockwasher on any soft metal surface (such as aluminum), thin sheet metal or plastic.

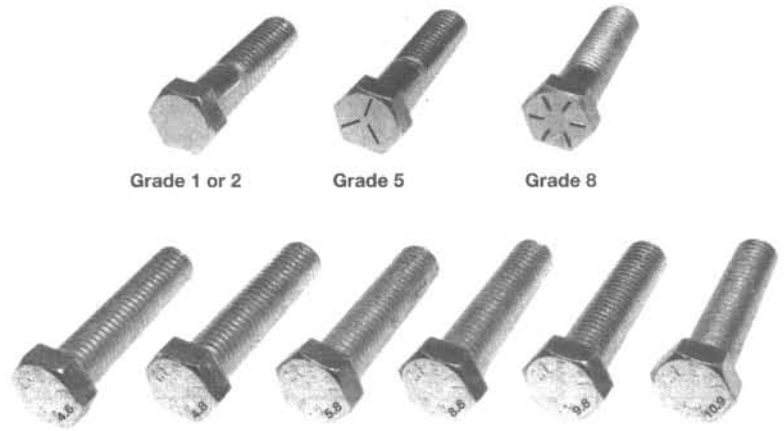

Grade 1 or 2

Grade 5

Grade 8

Bolt strength marking (standard/SAE/USS; bottom - metric)

| Grade | Identification | Grade | Identification |
|-----------------|----------------|---------------------------|----------------|
| Hex Nut Grade 5 | 3 Dots | Hex Nut Property Class 9 | Arabic 9 |
| Hex Nut Grade 8 | 6 Dots | Hex Nut Property Class 10 | Arabic 10 |

Standard hex nut strength markings

Metric hex nut strength markings



Metric stud strength markings

Fastener sizes

For a number of reasons, automobile manufacturers are making wider and wider use of metric fasteners. Therefore, it is important to be able to tell the difference between standard (sometimes called U.S. or SAE) and metric hardware, since they cannot be interchanged.

All bolts, whether standard or metric, are sized according to diameter, thread pitch and length. For example, a standard 1/2 - 13 x 1 bolt is 1/2 inch in diameter, has 13 threads per inch and is 1 inch long. An M12 - 1.75 x 25 metric bolt is 12 mm in diameter, has a thread pitch of 1.75 mm (the distance between threads) and is 25 mm long. The two bolts are nearly identical, and easily confused, but they are not interchangeable.

In addition to the differences in diameter, thread pitch and length, metric and standard bolts can also be distinguished by examining the bolt heads. To begin with, the distance across the flats on a standard bolt head is measured in inches, while the same dimension on a metric bolt is sized in millimeters (the same is true for nuts). As a result, a standard wrench should not be used on a metric bolt and a metric wrench should not be used on a standard bolt. Also, most standard bolts have slashes radiating out from the center of the head to denote the grade or strength of the bolt, which is an indication of the amount of torque that can be applied to it. The greater the number of slashes, the greater the strength of the bolt. Grades 0 through 5 are commonly used on automobiles. Metric bolts have a property class (grade) number, rather than a slash, molded into their heads to indicate bolt strength. In this case, the higher the number, the stronger the bolt. Property class numbers 8.8, 9.8 and 10.9 are commonly used on automobiles.

Strength markings can also be used to distinguish standard hex nuts from metric hex nuts. Many standard nuts have dots stamped into one side, while metric nuts are marked with a number. The greater the number of dots, or the higher the number, the greater the strength of the nut.

Metric studs are also marked on their ends according to property class (grade). Larger studs are numbered (the same as metric bolts), while smaller studs carry a geometric code to denote grade.

It should be noted that many fasteners, especially Grades 0 through 2, have no distinguishing marks on them. When such is the case, the only way to determine whether it is standard or metric is to measure the thread pitch or compare it to a known fastener of the same size.

Standard fasteners are often referred to as SAE, as opposed to metric. However, it should be noted that SAE technically refers to a non-metric fine thread fastener only. Coarse thread non-metric fasteners are referred to as USS sizes.

Since fasteners of the same size (both standard and metric) may have different

Metric thread sizes


| | Ft-lbs | Nm |
|------------|---------------|------------|
| M-6 | 6 to 9 | 9 to 12 |
| M-8 | 14 to 21 | 19 to 28 |
| M-10 | 28 to 40 | 38 to 54 |
| M-12 | 50 to 71 | 68 to 96 |
| M-14 | 80 to 140 | 109 to 154 |

Pipe thread sizes

| | | |
|-----------|----------|----------|
| 1/8 | 5 to 8 | 7 to 10 |
| 1/4 | 12 to 18 | 17 to 24 |
| 3/8 | 22 to 33 | 30 to 44 |
| 1/2 | 25 to 35 | 34 to 47 |


U.S. thread sizes

| | | |
|-----------------|----------|-----------|
| 1/4 - 20 | 6 to 9 | 9 to 12 |
| 5/16 - 18 | 17 to 18 | 17 to 24 |
| 5/16 - 24 | 14 to 20 | 19 to 27 |
| 3/8 - 16 | 22 to 32 | 30 to 43 |
| 3/8 - 24 | 27 to 38 | 37 to 51 |
| 7/16 - 14 | 40 to 55 | 55 to 74 |
| 7/16 - 20 | 40 to 60 | 55 to 81 |
| 1/2 - 13 | 55 to 80 | 75 to 108 |

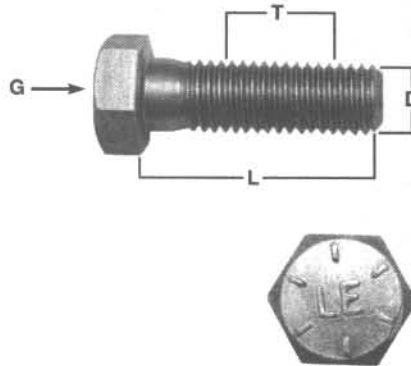

Standard (SAE and USS) bolt dimensions/grade marks

- G Grade marks (bolt strength)
- L Length (in inches)
- T Thread pitch (number of threads per inch)
- D Nominal diameter (in inches)

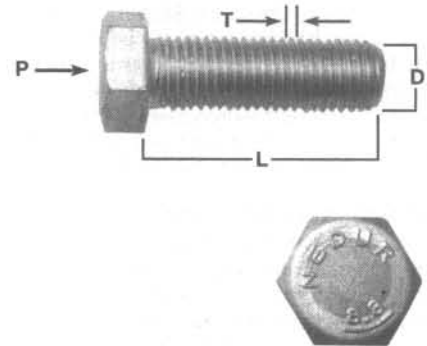

Metric bolt dimensions/grade marks

- P Property class (bolt strength)
- L Length (in millimeters)
- T Thread pitch (distance between threads in millimeters)
- D Diameter


strength ratings, be sure to reinstall any bolts, studs or nuts removed from your vehicle in their original locations. Also, when replacing a fastener with a new one, make sure that the new one has a strength rating equal to or greater than the original.

Tightening sequences and procedures


Most threaded fasteners should be tightened to a specific torque value (torque is the twisting force applied to a threaded component such as a nut or bolt). Overtightening the fastener can weaken it and cause it to break, while undertightening can cause it to eventually come loose. Bolts, screws and studs, depending on the material they are made of and their thread diameters, have

specific torque values, many of which are noted in the Specifications at the beginning of each Chapter. Be sure to follow the torque recommendations closely. For fasteners not assigned a specific torque, a general torque value chart is presented here as a guide. These torque values are for dry (unlubricated) fasteners threaded into steel or cast iron (not aluminum). As was previously mentioned, the size and grade of a fastener determine the amount of torque that can safely be applied to it. The figures listed here are approximate for Grade 2 and Grade 3 fasteners. Higher grades can tolerate higher torque values.

Fasteners laid out in a pattern, such as cylinder head bolts, oil pan bolts, differential cover bolts, etc., must be loosened or tightened in sequence to avoid warping the com-

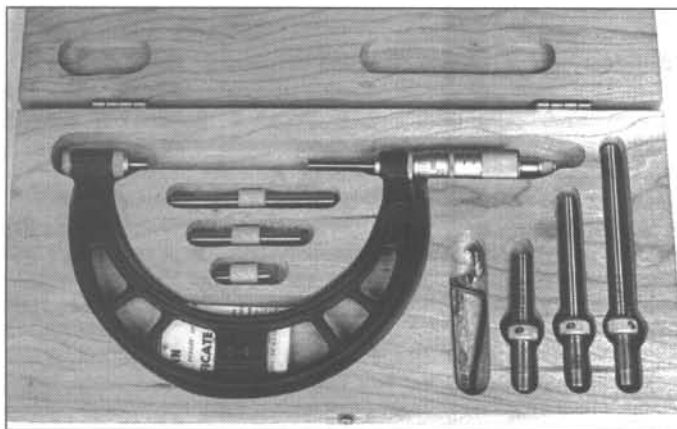

Dial indicator set

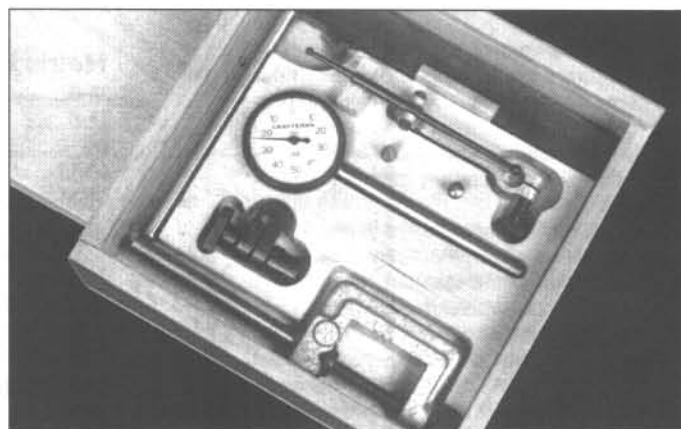

Dial caliper

ponent. This sequence will normally be shown in the appropriate Chapter. If a specific pattern is not given, the following procedures can be used to prevent warping.

Initially, the bolts or nuts should be assembled finger-tight only. Next, they should be tightened one full turn each, in a criss-cross or diagonal pattern. After each one has been tightened one full turn, return to the first one and tighten them all one-half turn, following the same pattern. Finally, tighten each of them one-quarter turn at a time until each fastener has been tightened to the proper torque. To loosen and remove the fasteners, the procedure would be reversed.

Component disassembly

Component disassembly should be done with care and purpose to help ensure that the parts go back together properly. Always keep track of the sequence in which parts are removed. Make note of special characteristics or marks on parts that can be installed more than one way, such as a grooved thrust washer on a shaft. It is a good idea to lay the disassembled parts out on a clean surface in the order that they were removed. It may also be helpful to make sketches or take instant photos of components before removal.

When removing fasteners from a component, keep track of their locations. Sometimes threading a bolt back in a part, or putting the washers and nut back on a stud, can prevent mix-ups later. If nuts and bolts cannot be returned to their original locations, they should be kept in a compartmented box or a series of small boxes. A cupcake or muffin tin is ideal for this purpose, since each cavity can hold the bolts and nuts from a particular area (i.e. oil pan bolts, valve cover bolts, engine mount bolts, etc.). A pan of this type is especially helpful when working on assemblies with very small parts, such as the carburetor, alternator, valve train or interior dash and trim pieces. The cavities can be marked with paint or tape to identify the contents.

Whenever wiring looms, harnesses or connectors are separated, it is a good idea to

identify the two halves with numbered pieces of masking tape so they can be easily reconnected.

Gasket sealing surfaces

Throughout any vehicle, gaskets are used to seal the mating surfaces between two parts and keep lubricants, fluids, vacuum or pressure contained in an assembly.

Many times these gaskets are coated with a liquid or paste-type gasket sealing compound before assembly. Age, heat and pressure can sometimes cause the two parts to stick together so tightly that they are very difficult to separate. Often, the assembly can be loosened by striking it with a soft-face hammer near the mating surfaces. A regular hammer can be used if a block of wood is placed between the hammer and the part. Do not hammer on cast parts or parts that could be easily damaged. With any particularly stubborn part, always recheck to make sure that every fastener has been removed.

Avoid using a screwdriver or bar to pry apart an assembly, as they can easily mar the gasket sealing surfaces of the parts, which must remain smooth. If prying is absolutely necessary, use an old broom handle, but keep in mind that extra clean up will be necessary if the wood splinters.

After the parts are separated, the old gasket must be carefully scraped off and the gasket surfaces cleaned. Stubborn gasket material can be soaked with rust penetrant or treated with a special chemical to soften it so it can be easily scraped off. A scraper can be fashioned from a piece of copper tubing by flattening and sharpening one end. Copper is recommended because it is usually softer than the surfaces to be scraped, which reduces the chance of gouging the part. Some gaskets can be removed with a wire brush, but regardless of the method used, the mating surfaces must be left clean and smooth. If for some reason the gasket surface is gouged, then a gasket sealer thick enough to fill scratches will have to be used during reassembly of the components. For most applications, a non-drying (or semi-drying) gasket sealer should be used.

Hose removal tips

Warning: If the vehicle is equipped with air conditioning, do not disconnect any of the A/C hoses without first having the system depressurized by a dealer service department or a service station.

Hose removal precautions closely parallel gasket removal precautions. Avoid scratching or gouging the surface that the hose mates against or the connection may leak. This is especially true for radiator hoses. Because of various chemical reactions, the rubber in hoses can bond itself to the metal spigot that the hose fits over. To remove a hose, first loosen the hose clamps that secure it to the spigot. Then, with slip-joint pliers, grab the hose at the clamp and rotate it around the spigot. Work it back and forth until it is completely free, then pull it off. Silicone or other lubricants will ease removal if they can be applied between the hose and the outside of the spigot. Apply the same lubricant to the inside of the hose and the outside of the spigot to simplify installation.

As a last resort (and if the hose is to be replaced with a new one anyway), the rubber can be slit with a knife and the hose peeled from the spigot. If this must be done, be careful that the metal connection is not damaged.


If a hose clamp is broken or damaged, do not reuse it. Wire-type clamps usually weaken with age, so it is a good idea to replace them with screw-type clamps whenever a hose is removed.

Tools


A selection of good tools is a basic requirement for anyone who plans to maintain and repair his or her own vehicle. For the owner who has few tools, the initial investment might seem high, but when compared to the spiraling costs of professional auto maintenance and repair, it is a wise one.

To help the owner decide which tools are needed to perform the tasks detailed in this manual, the following tool lists are offered: *Maintenance and minor repair*, *Repair/overhaul* and *Special*.


The newcomer to practical mechanics

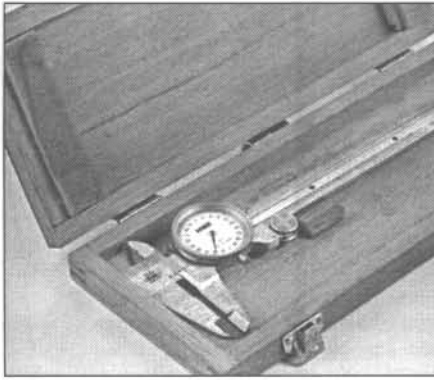


Hand-operated vacuum pump

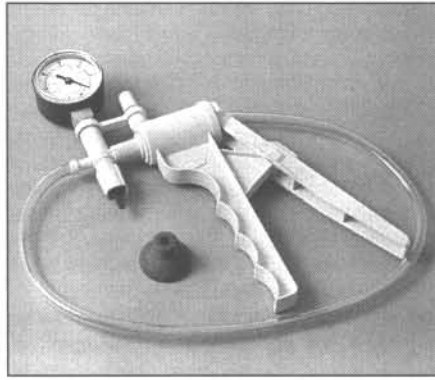


Timing light

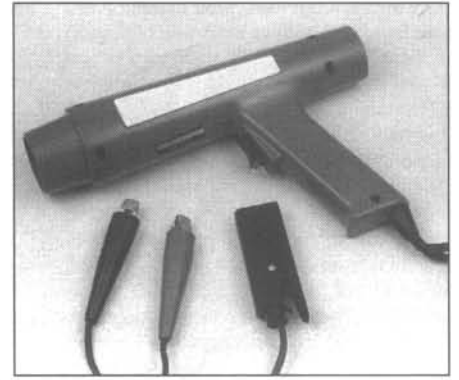


Compression gauge with spark plug

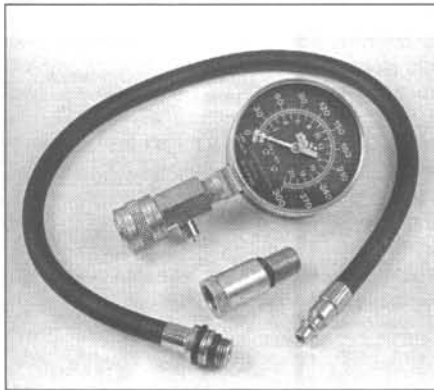

hole adapter

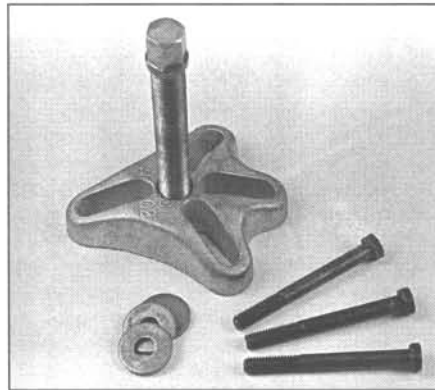


Damper/steering wheel puller

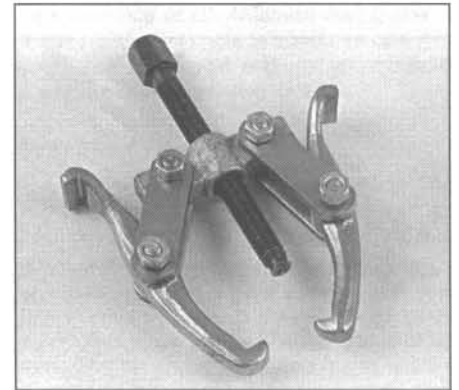


General purpose puller




Hydraulic lifter removal tool

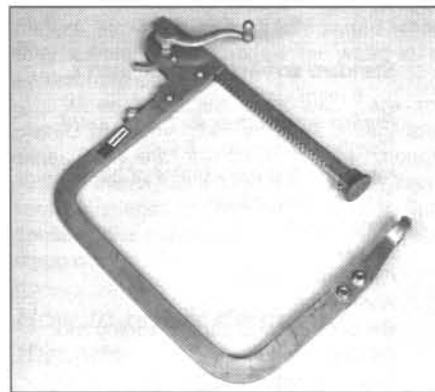


Valve spring compressor

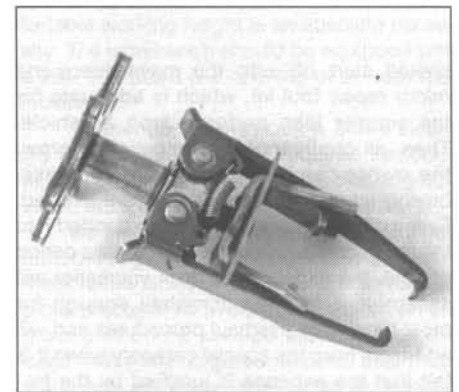


Valve spring compressor

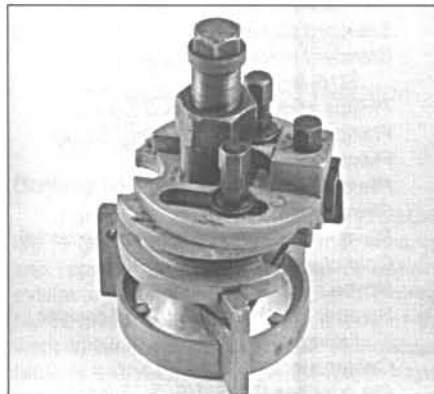


Ridge reamer

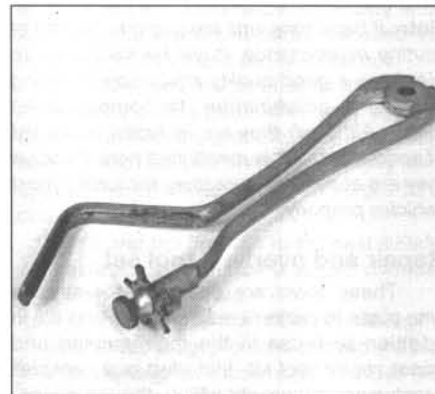


Piston ring groove cleaning tool

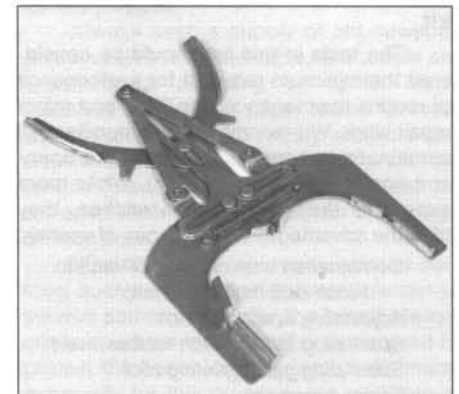


Ring removal/installation tool

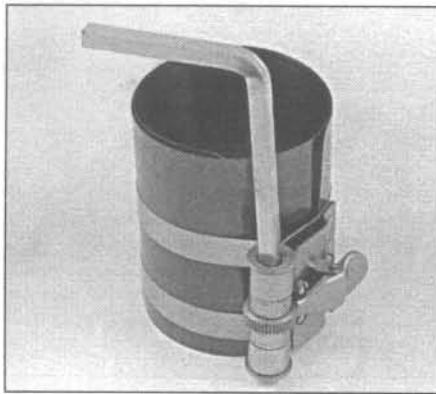


Ring compressor

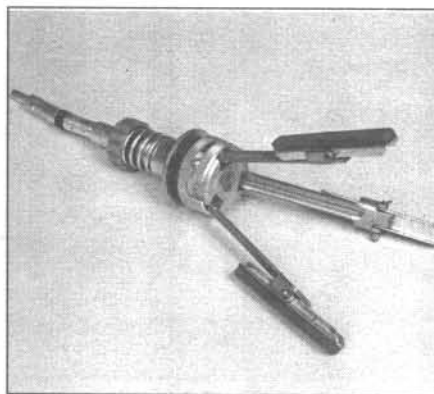


Cylinder hone

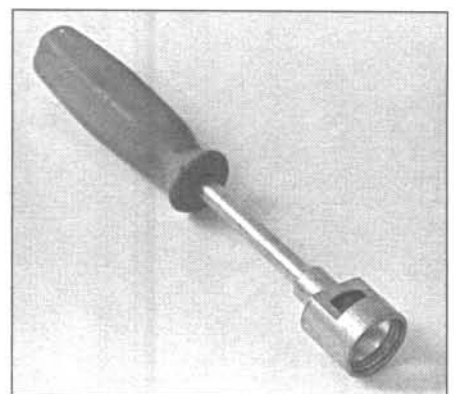


Brake hold-down spring tool

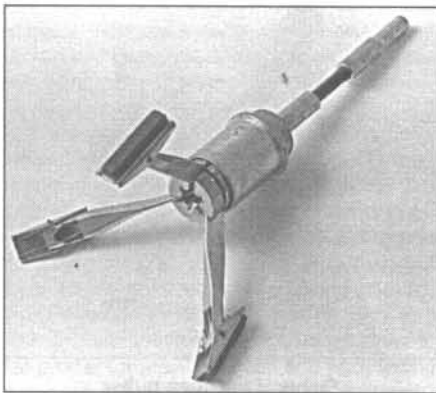

Brake cylinder hone

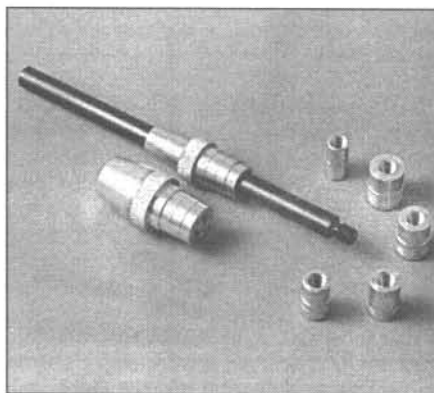

Clutch plate alignment tool

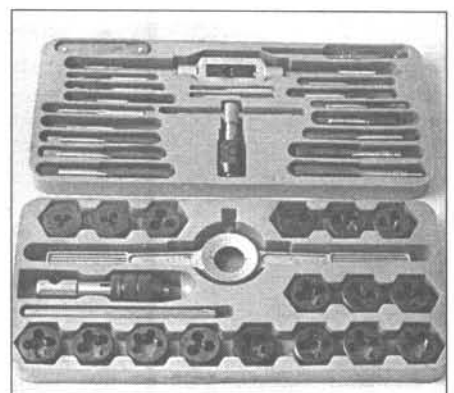

Tap and die set

should start off with the *maintenance and minor repair* tool kit, which is adequate for the simpler jobs performed on a vehicle. Then, as confidence and experience grow, the owner can tackle more difficult tasks, buying additional tools as they are needed. Eventually the basic kit will be expanded into the *repair and overhaul* tool set. Over a period of time, the experienced do-it-yourselfer will assemble a tool set complete enough for most repair and overhaul procedures and will add tools from the special category when it is felt that the expense is justified by the frequency of use.

Maintenance and minor repair tool kit

The tools in this list should be considered the minimum required for performance of routine maintenance, servicing and minor repair work. We recommend the purchase of combination wrenches (box-end and open-end combined in one wrench). While more expensive than open end wrenches, they offer the advantages of both types of wrench.

Combination wrench set (1/4-inch to 1 inch or 6 mm to 19 mm)
Adjustable wrench, 8 inch
Spark plug wrench with rubber insert
Spark plug gap adjusting tool
Feeler gauge set
Brake bleeder wrench

Standard screwdriver (5/16-inch x 6 inch)
Phillips screwdriver (No. 2 x 6 inch)
Combination pliers - 6 inch
Hacksaw and assortment of blades
Tire pressure gauge
Grease gun
Oil can
Fine emery cloth
Wire brush
Battery post and cable cleaning tool
Oil filter wrench
Funnel (medium size)
Safety goggles
Jackstands (2)
Drain pan

Note: If basic tune-ups are going to be part of routine maintenance, it will be necessary to purchase a good quality stroboscopic timing light and combination tachometer/dwell meter. Although they are included in the list of special tools, it is mentioned here because they are absolutely necessary for tuning most vehicles properly.

Repair and overhaul tool set

These tools are essential for anyone who plans to perform major repairs and are in addition to those in the maintenance and minor repair tool kit. Included is a comprehensive set of sockets which, though expensive, are invaluable because of their versatil-

ity, especially when various extensions and drives are available. We recommend the 1/2-inch drive over the 3/8-inch drive. Although the larger drive is bulky and more expensive, it has the capacity of accepting a very wide range of large sockets. Ideally, however, the mechanic should have a 3/8-inch drive set and a 1/2-inch drive set.

Socket set(s)
Reversible ratchet
Extension - 10 inch
Universal joint
Torque wrench (same size drive as sockets)
Ball peen hammer - 8 ounce
Soft-face hammer (plastic/rubber)
Standard screwdriver (1/4-inch x 6 inch)
Standard screwdriver (stubby - 5/16-inch)
Phillips screwdriver (No. 3 x 8 inch)
Phillips screwdriver (stubby - No. 2)
Pliers - vise grip
Pliers - lineman's
Pliers - needle nose
Pliers - snap-ring (internal and external)
Cold chisel - 1/2-inch
Scribe
Scraper (made from flattened copper tubing)
Centerpunch
Pin punches (1/16, 1/8, 3/16-inch)
Steel rule/straightedge - 12 inch

*Allen wrench set (1/8 to 3/8-inch or
4 mm to 10 mm)*

A selection of files

Wire brush (large)

Jackstands (second set)

Jack (scissor or hydraulic type)

Note: Another tool which is often useful is an electric drill with a chuck capacity of 3/8-inch and a set of good quality drill bits.

Special tools

The tools in this list include those which are not used regularly, are expensive to buy, or which need to be used in accordance with their manufacturer's instructions. Unless these tools will be used frequently, it is not very economical to purchase many of them. A consideration would be to split the cost and use between yourself and a friend or friends. In addition, most of these tools can be obtained from a tool rental shop on a temporary basis.

This list primarily contains only those tools and instruments widely available to the public, and not those special tools produced by the vehicle manufacturer for distribution to dealer service departments. Occasionally, references to the manufacturer's special tools are included in the text of this manual. Generally, an alternative method of doing the job without the special tool is offered. However, sometimes there is no alternative to their use. Where this is the case, and the tool cannot be purchased or borrowed, the work should be turned over to the dealer service department or an automotive repair shop.

Valve spring compressor

Piston ring groove cleaning tool

Piston ring compressor

Piston ring installation tool

Cylinder compression gauge

Cylinder ridge reamer

Cylinder surfacing hone

Cylinder bore gauge

Micrometers and/or dial calipers

Hydraulic lifter removal tool

Balljoint separator

Universal-type puller

Impact screwdriver

Dial indicator set

*Stroboscopic timing light (inductive
pick-up)*

Hand operated vacuum/pressure pump

Tachometer/dwell meter

Universal electrical multimeter

Cable hoist

*Brake spring removal and installation
tools*

Floor jack

Buying tools

For the do-it-yourselfer who is just starting to get involved in vehicle maintenance and repair, there are a number of options available when purchasing tools. If maintenance and minor repair is the extent of the work to be done, the purchase of individual tools is satisfactory. If, on the other hand, extensive work is planned, it would be a good idea to purchase a modest tool set from one

of the large retail chain stores. A set can usually be bought at a substantial savings over the individual tool prices, and they often come with a tool box. As additional tools are needed, add-on sets, individual tools and a larger tool box can be purchased to expand the tool selection. Building a tool set gradually allows the cost of the tools to be spread over a longer period of time and gives the mechanic the freedom to choose only those tools that will actually be used.

Tool stores will often be the only source of some of the special tools that are needed, but regardless of where tools are bought, try to avoid cheap ones, especially when buying screwdrivers and sockets, because they won't last very long. The expense involved in replacing cheap tools will eventually be greater than the initial cost of quality tools.

Care and maintenance of tools

Good tools are expensive, so it makes sense to treat them with respect. Keep them clean and in usable condition and store them properly when not in use. Always wipe off any dirt, grease or metal chips before putting them away. Never leave tools lying around in the work area. Upon completion of a job, always check closely under the hood for tools that may have been left there so they won't get lost during a test drive.

Some tools, such as screwdrivers, pliers, wrenches and sockets, can be hung on a panel mounted on the garage or workshop wall, while others should be kept in a tool box or tray. Measuring instruments, gauges, meters, etc. must be carefully stored where they cannot be damaged by weather or impact from other tools.

When tools are used with care and stored properly, they will last a very long time. Even with the best of care, though, tools will wear out if used frequently. When a tool is damaged or worn out, replace it. Subsequent jobs will be safer and more enjoyable if you do.

How to repair damaged threads

Sometimes, the internal threads of a nut or bolt hole can become stripped, usually from overtightening. Stripping threads is an all-too-common occurrence, especially when working with aluminum parts, because aluminum is so soft that it easily strips out.

Usually, external or internal threads are only partially stripped. After they've been cleaned up with a tap or die, they'll still work. Sometimes, however, threads are badly damaged. When this happens, you've got three choices:

- 1) *Drill and tap the hole to the next suitable oversize and install a larger diameter bolt, screw or stud.*
- 2) *Drill and tap the hole to accept a threaded plug, then drill and tap the plug to the original screw size. You can also buy a plug already threaded to the original size. Then you simply drill a hole to*

the specified size, then run the threaded plug into the hole with a bolt and jam nut. Once the plug is fully seated, remove the jam nut and bolt.

- 3) *The third method uses a patented thread repair kit like Heli-Coil or Slimsert. These easy-to-use kits are designed to repair damaged threads in straight-through holes and blind holes. Both are available as kits which can handle a variety of sizes and thread patterns. Drill the hole, then tap it with the special included tap. Install the Heli-Coil and the hole is back to its original diameter and thread pitch.*

Regardless of which method you use, be sure to proceed calmly and carefully. A little impatience or carelessness during one of these relatively simple procedures can ruin your whole day's work and cost you a bundle if you wreck an expensive part.

Working facilities

Not to be overlooked when discussing tools is the workshop. If anything more than routine maintenance is to be carried out, some sort of suitable work area is essential.

It is understood, and appreciated, that many home mechanics do not have a good workshop or garage available, and end up removing an engine or doing major repairs outside. It is recommended, however, that the overhaul or repair be completed under the cover of a roof.

A clean, flat workbench or table of comfortable working height is an absolute necessity. The workbench should be equipped with a vise that has a jaw opening of at least four inches.

As mentioned previously, some clean, dry storage space is also required for tools, as well as the lubricants, fluids, cleaning solvents, etc. which soon become necessary.

Sometimes waste oil and fluids, drained from the engine or cooling system during normal maintenance or repairs, present a disposal problem. To avoid pouring them on the ground or into a sewage system, pour the used fluids into large containers, seal them with caps and take them to an authorized disposal site or recycling center. Plastic jugs, such as old antifreeze containers, are ideal for this purpose.

Always keep a supply of old newspapers and clean rags available. Old towels are excellent for mopping up spills. Many mechanics use rolls of paper towels for most work because they are readily available and disposable. To help keep the area under the vehicle clean, a large cardboard box can be cut open and flattened to protect the garage or shop floor.

Whenever working over a painted surface, such as when leaning over a fender to service something under the hood, always cover it with an old blanket or bedspread to protect the finish. Vinyl covered pads, made especially for this purpose, are available at auto parts stores.

Booster battery (jump) starting


Observe these precautions when using a booster battery to start a vehicle:

- Before connecting the booster battery, make sure the ignition switch is in the Off position.
- Turn off the lights, heater and other electrical loads.
- Your eyes should be shielded. Safety goggles are a good idea.
- Make sure the booster battery is the same voltage as the dead one in the vehicle.
- The two vehicles **MUST NOT TOUCH** each other!
- Make sure the transmission is in Neutral (manual) or Park (automatic).
- If the booster battery is not a maintenance-free type, remove the vent caps and lay a cloth over the vent holes.

Connect the red jumper cable to the positive (+) terminals of each battery.

Connect one end of the black jumper cable to the negative (-) terminal of the booster battery. The other end of this cable should be connected to a good ground on the vehicle to be started, such as a bolt or bracket on the engine block (**see illustration**). Make sure the cable will not come into contact with the fan, drivebelts or other moving parts of the engine.

Start the engine using the booster battery, then, with the engine running at idle speed, disconnect the jumper cables in the reverse order of connection.

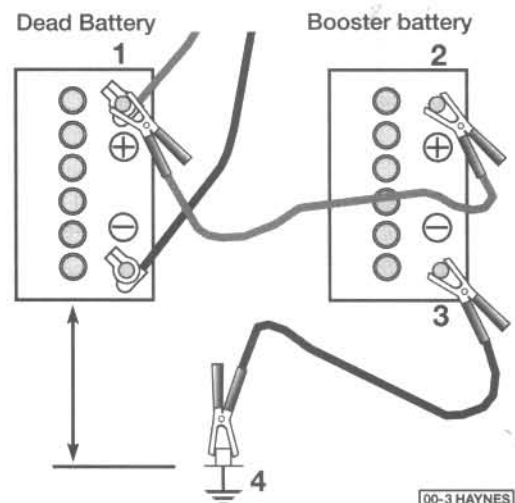

Make the booster battery cable connections in the numerical order shown (note that the negative cable of the booster battery is NOT attached to the negative terminal of the dead battery)

Jacking and towing

Jacking

Warning: *The jack supplied with the vehicle should only be used for raising the vehicle when changing a tire or placing jackstands under the frame. Never work under the vehicle or start the engine while the jack is being used as the only means of support.*

The vehicle must be on a level surface with the wheels blocked and the transaxle in Park (automatic) or Reverse (manual). Apply the parking brake if the front of the vehicle must be raised. Make sure no one is in the vehicle as it's being raised with the jack.

Remove the jack, lug nut wrench and spare tire (if needed) from the vehicle. If a tire is being replaced, use the lug wrench to remove the wheel cover. **Warning:** *Wheel covers may have sharp edges - be very careful not to cut yourself. Loosen the lug nuts one-half turn, but leave them in place until the tire is raised off the ground.*

Position the jack under the vehicle at the indicated jacking point. There's a front and rear jacking point on each side of the vehicle (see illustration).

Turn the jack handle clockwise until the tire clears the ground. Remove the lug nuts, pull the tire off and replace it with the spare. Replace the lug nuts with the beveled edges facing in and tighten them snugly. Don't attempt to tighten them completely until the

vehicle is lowered or it could slip off the jack.

Turn the jack handle counterclockwise to lower the vehicle. Remove the jack and tighten the lug nuts in a criss-cross pattern. If possible, tighten the nuts with a torque wrench (see Chapter 1 for the torque figures). If you don't have access to a torque wrench, have the nuts checked by a service station or repair shop as soon as possible.

Stow the tire, jack and wrench and unblock the wheels.

Towing

Vehicles with a manual transaxle

As a general rule, the vehicle should be towed with the front (drive) wheels off the ground. Be sure to release the parking brake. If the vehicle is being towed with the front wheels on the ground, place the transaxle in Neutral. Also, the ignition key must be in the ACC position, since the steering lock mechanism isn't strong enough to hold the front wheels straight while towing.

Vehicles with an automatic transaxle

Caution: *Never tow an automatic transaxle-equipped vehicle from the rear with the front wheels on the ground. If the vehicle must be towed from the rear place the front wheels on a towing dolly.*


Vehicles equipped with an automatic transaxle can only be towed from the rear with the front wheels off the ground. DO NOT tow the vehicle from the rear with just the front wheels on the ground or the transaxle can be seriously damaged. Vehicles with automatic transaxles can be towed with all four wheels on the ground, from the front only, under the following conditions:

- The transmission fluid level is up to the HOT mark on the dipstick (see Chapter 1 for checking procedure)*
- Maximum speed is 30 mph; maximum distance is 50 miles. If you can't be positive about meeting both of these conditions, tow the vehicle with the front wheels off the ground (tow from the front or use a towing dolly). Otherwise, severe transmission damage could occur. The parking brake must be released during towing.*

All vehicles

Equipment specifically designed for towing should be used. It should be attached to the main structural members of the vehicle, not the bumpers or brackets.

Safety is a major consideration when towing and all applicable state and local laws must be obeyed. A safety chain must be used at all times. Remember that power steering and brakes won't work with the engine off.

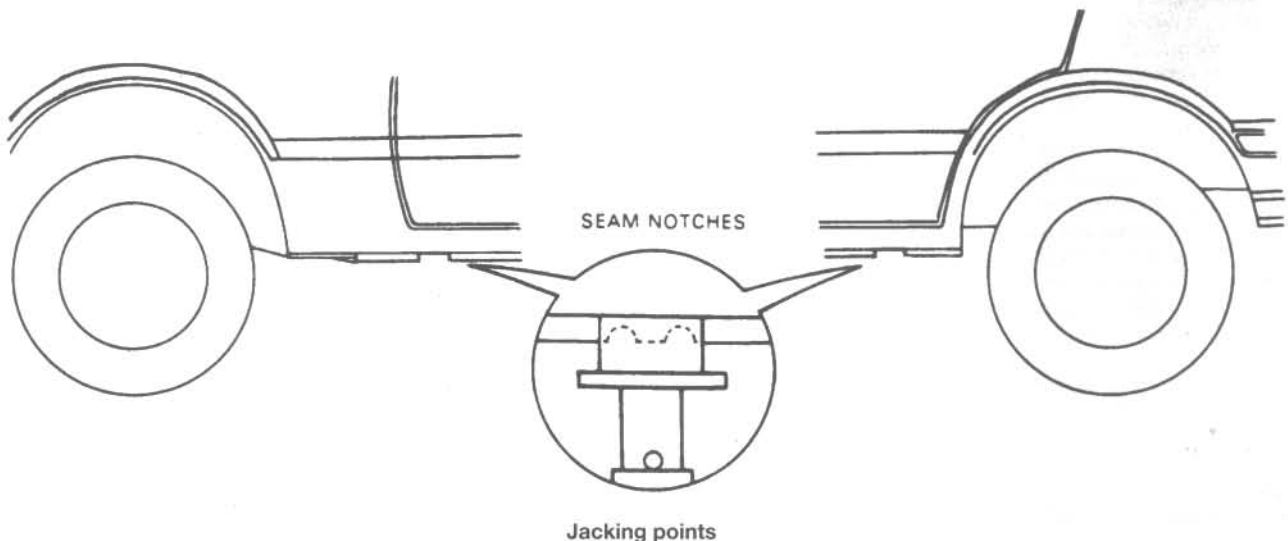

Automotive chemicals and lubricants

A number of automotive chemicals and lubricants are available for use during vehicle maintenance and repair. They include a wide variety of products ranging from cleaning solvents and degreasers to lubricants and protective sprays for rubber, plastic and vinyl.

Cleaners

Carburetor cleaner and choke cleaner is a strong solvent for gum, varnish and carbon. Most carburetor cleaners leave a dry-type lubricant film which will not harden or gum up. Because of this film it is not recommended for use on electrical components.

Brake system cleaner is used to remove grease and brake fluid from the brake system, where clean surfaces are absolutely necessary. It leaves no residue and often eliminates brake squeal caused by contaminants.

Electrical cleaner removes oxidation, corrosion and carbon deposits from electrical contacts, restoring full current flow. It can also be used to clean spark plugs, carburetor jets, voltage regulators and other parts where an oil-free surface is desired.

Demoisturants remove water and moisture from electrical components such as alternators, voltage regulators, electrical connectors and fuse blocks. They are non-conductive, non-corrosive and non-flammable.

Degreasers are heavy-duty solvents used to remove grease from the outside of the engine and from chassis components. They can be sprayed or brushed on and, depending on the type, are rinsed off either with water or solvent.

Lubricants

Motor oil is the lubricant formulated for use in engines. It normally contains a wide variety of additives to prevent corrosion and reduce foaming and wear. Motor oil comes in various weights (viscosity ratings) from 5 to 80. The recommended weight of the oil depends on the season, temperature and the demands on the engine. Light oil is used in cold climates and under light load conditions. Heavy oil is used in hot climates and where high loads are encountered. Multi-viscosity oils are designed to have characteristics of both light and heavy oils and are available in a number of weights from 5W-20 to 20W-50.

Gear oil is designed to be used in differentials, manual transmissions and other areas where high-temperature lubrication is required.

Chassis and wheel bearing grease is a heavy grease used where increased loads and friction are encountered, such as for wheel bearings, balljoints, tie-rod ends and universal joints.

High-temperature wheel bearing grease is designed to withstand the extreme temperatures encountered by wheel bearings

in disc brake equipped vehicles. It usually contains molybdenum disulfide (moly), which is a dry-type lubricant.

White grease is a heavy grease for metal-to-metal applications where water is a problem. White grease stays soft under both low and high temperatures (usually from -100 to +190-degrees F), and will not wash off or dilute in the presence of water.

Assembly lube is a special extreme pressure lubricant, usually containing moly, used to lubricate high-load parts (such as main and rod bearings and cam lobes) for initial start-up of a new engine. The assembly lube lubricates the parts without being squeezed out or washed away until the engine oiling system begins to function.

Silicone lubricants are used to protect rubber, plastic, vinyl and nylon parts.

Graphite lubricants are used where oils cannot be used due to contamination problems, such as in locks. The dry graphite will lubricate metal parts while remaining uncontaminated by dirt, water, oil or acids. It is electrically conductive and will not foul electrical contacts in locks such as the ignition switch.

Moly penetrants loosen and lubricate frozen, rusted and corroded fasteners and prevent future rusting or freezing.

Heat-sink grease is a special electrically non-conductive grease that is used for mounting electronic ignition modules where it is essential that heat is transferred away from the module.

Sealants

RTV sealant is one of the most widely used gasket compounds. Made from silicone, RTV is air curing, it seals, bonds, waterproofs, fills surface irregularities, remains flexible, doesn't shrink, is relatively easy to remove, and is used as a supplementary sealer with almost all low and medium temperature gaskets.

Anaerobic sealant is much like RTV in that it can be used either to seal gaskets or to form gaskets by itself. It remains flexible, is solvent resistant and fills surface imperfections. The difference between an anaerobic sealant and an RTV-type sealant is in the curing. RTV cures when exposed to air, while an anaerobic sealant cures only in the absence of air. This means that an anaerobic sealant cures only after the assembly of parts, sealing them together.

Thread and pipe sealant is used for sealing hydraulic and pneumatic fittings and vacuum lines. It is usually made from a Teflon compound, and comes in a spray, a paint-on liquid and as a wrap-around tape.

Chemicals

Anti-seize compound prevents seizing, galling, cold welding, rust and corrosion in

fasteners. High-temperature ant-seize, usually made with copper and graphite lubricants, is used for exhaust system and exhaust manifold bolts.

Anaerobic locking compounds are used to keep fasteners from vibrating or working loose and cure only after installation, in the absence of air. Medium strength locking compound is used for small nuts, bolts and screws that may be removed later. High-strength locking compound is for large nuts, bolts and studs which aren't removed on a regular basis.

Oil additives range from viscosity index improvers to chemical treatments that claim to reduce internal engine friction. It should be noted that most oil manufacturers caution against using additives with their oils.

Gas additives perform several functions, depending on their chemical makeup. They usually contain solvents that help dissolve gum and varnish that build up on carburetor, fuel injection and intake parts. They also serve to break down carbon deposits that form on the inside surfaces of the combustion chambers. Some additives contain upper cylinder lubricants for valves and piston rings, and others contain chemicals to remove condensation from the gas tank.

Miscellaneous

Brake fluid is specially formulated hydraulic fluid that can withstand the heat and pressure encountered in brake systems. Care must be taken so this fluid does not come in contact with painted surfaces or plastics. An opened container should always be resealed to prevent contamination by water or dirt.

Weatherstrip adhesive is used to bond weatherstripping around doors, windows and trunk lids. It is sometimes used to attach trim pieces.

Undercoating is a petroleum-based, tar-like substance that is designed to protect metal surfaces on the underside of the vehicle from corrosion. It also acts as a sound-deadening agent by insulating the bottom of the vehicle.

Waxes and polishes are used to help protect painted and plated surfaces from the weather. Different types of paint may require the use of different types of wax and polish. Some polishes utilize a chemical or abrasive cleaner to help remove the top layer of oxidized (dull) paint on older vehicles. In recent years many non-wax polishes that contain a wide variety of chemicals such as polymers and silicones have been introduced. These non-wax polishes are usually easier to apply and last longer than conventional waxes and polishes.

Conversion factors

Length (distance)

| | | |
|-------------|---------------------------|------------------------|
| Inches (in) | X 25.4 = Millimetres (mm) | X 0.0394 = Inches (in) |
| Feet (ft) | X 0.305 = Metres (m) | X 3.281 = Feet (ft) |
| Miles | X 1.609 = Kilometres (km) | X 0.621 = Miles |

Volume (capacity)

| | | |
|--|---|--|
| Cubic inches (cu in; in ³) | X 16.387 = Cubic centimetres (cc; cm ³) | X 0.061 = Cubic inches (cu in; in ³) |
| Imperial pints (Imp pt) | X 0.568 = Litres (l) | X 1.76 = Imperial pints (Imp pt) |
| Imperial quarts (Imp qt) | X 1.137 = Litres (l) | X 0.88 = Imperial quarts (Imp qt) |
| Imperial quarts (Imp qt) | X 1.201 = US quarts (US qt) | X 0.833 = Imperial quarts (Imp qt) |
| US quarts (US qt) | X 0.946 = Litres (l) | X 1.057 = US quarts (US qt) |
| Imperial gallons (Imp gal) | X 4.546 = Litres (l) | X 0.22 = Imperial gallons (Imp gal) |
| Imperial gallons (Imp gal) | X 1.201 = US gallons (US gal) | X 0.833 = Imperial gallons (Imp gal) |
| US gallons (US gal) | X 3.785 = Litres (l) | X 0.264 = US gallons (US gal) |

Mass (weight)

| | | |
|-------------|--------------------------|-----------------------|
| Ounces (oz) | X 28.35 = Grams (g) | X 0.035 = Ounces (oz) |
| Pounds (lb) | X 0.454 = Kilograms (kg) | X 2.205 = Pounds (lb) |

Force

| | | |
|------------------------|-----------------------------------|----------------------------------|
| Ounces-force (ozf; oz) | X 0.278 = Newtons (N) | X 3.6 = Ounces-force (ozf; oz) |
| Pounds-force (lbf; lb) | X 4.448 = Newtons (N) | X 0.225 = Pounds-force (lbf; lb) |
| Newtons (N) | X 0.1 = Kilograms-force (kgf; kg) | X 9.81 = Newtons (N) |

Pressure

| | | |
|---|---|--|
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | X 0.070 = Kilograms-force per square centimetre (kgf/cm ² ; kg/cm ²) | X 14.223 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | X 0.068 = Atmospheres (atm) | X 14.696 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | X 0.069 = Bars | X 14.5 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | X 6.895 = Kilopascals (kPa) | X 0.145 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Kilopascals (kPa) | X 0.01 = Kilograms-force per square centimetre (kgf/cm ² ; kg/cm ²) | X 98.1 = Kilopascals (kPa) |

Torque (moment of force)

| | | |
|-------------------------------------|--|---|
| Pounds-force inches (lbf in; lb in) | X 1.152 = Kilograms-force centimetre (kgf cm; kg cm) | X 0.868 = Pounds-force inches (lbf in; lb in) |
| Pounds-force inches (lbf in; lb in) | X 0.113 = Newton metres (Nm) | X 8.85 = Pounds-force inches (lbf in; lb in) |
| Pounds-force inches (lbf in; lb in) | X 0.083 = Pounds-force feet (lbf ft; lb ft) | X 12 = Pounds-force inches (lbf in; lb in) ¹ |
| Pounds-force feet (lbf ft; lb ft) | X 0.138 = Kilograms-force metres (kgf m; kg m) | X 7.233 = Pounds-force feet (lbf ft; lb ft) |
| Pounds-force feet (lbf ft; lb ft) | X 1.356 = Newton metres (Nm) | X 0.738 = Pounds-force feet (lbf ft; lb ft) |
| Newton metres (Nm) | X 0.102 = Kilograms-force metres (kgf m; kg m) | X 9.804 = Newton metres (Nm) |

Vacuum

| | | |
|-------------------------|--------------------------------------|---------------------------|
| Inches mercury (in. Hg) | X 3.377 = Kilopascals (kPa) | X 0.2961 = Inches mercury |
| Inches mercury (in. Hg) | X 25.4 = Millimeters mercury (mm Hg) | X 0.0394 = Inches mercury |

Power

| | | |
|-----------------|---------------------|----------------------------|
| Horsepower (hp) | X 745.7 = Watts (W) | X 0.0013 = Horsepower (hp) |
|-----------------|---------------------|----------------------------|

Velocity (speed)

| | | |
|--------------------------------|--|--|
| Miles per hour (miles/hr; mph) | X 1.609 = Kilometres per hour (km/hr; kph) | X 0.621 = Miles per hour (miles/hr; mph) |
|--------------------------------|--|--|

Fuel consumption*

| | | |
|----------------------------------|---------------------------------------|--|
| Miles per gallon, Imperial (mpg) | X 0.354 = Kilometres per litre (km/l) | X 2.825 = Miles per gallon, Imperial (mpg) |
| Miles per gallon, US (mpg) | X 0.425 = Kilometres per litre (km/l) | X 2.352 = Miles per gallon, US (mpg) |

Temperature

| | |
|--------------------------------------|---|
| Degrees Fahrenheit = (°C x 1.8) + 32 | Degrees Celsius (Degrees Centigrade; °C) = (°F - 32) x 0.56 |
|--------------------------------------|---|

*It is common practice to convert from miles per gallon (mpg) to litres/100 kilometres (l/100km), where mpg (Imperial) x 1/100 km = 282 and mpg (US) x 1/100 km = 235

Safety first!

Regardless of how enthusiastic you may be about getting on with the job at hand, take the time to ensure that your safety is not jeopardized. A moment's lack of attention can result in an accident, as can failure to observe certain simple safety precautions. The possibility of an accident will always exist, and the following points should not be considered a comprehensive list of all dangers. Rather, they are intended to make you aware of the risks and to encourage a safety conscious approach to all work you carry out on your vehicle.

Essential DOs and DON'Ts

DON'T rely on a jack when working under the vehicle. Always use approved jackstands to support the weight of the vehicle and place them under the recommended lift or support points.

DON'T attempt to loosen extremely tight fasteners (i.e. wheel lug nuts) while the vehicle is on a jack - it may fall.

DON'T start the engine without first making sure that the transmission is in Neutral (or Park where applicable) and the parking brake is set.

DON'T remove the radiator cap from a hot cooling system - let it cool or cover it with a cloth and release the pressure gradually.

DON'T attempt to drain the engine oil until you are sure it has cooled to the point that it will not burn you.

DON'T touch any part of the engine or exhaust system until it has cooled sufficiently to avoid burns.

DON'T siphon toxic liquids such as gasoline, antifreeze and brake fluid by mouth, or allow them to remain on your skin.

DON'T inhale brake lining dust - it is potentially hazardous (see *Asbestos* below).

DON'T allow spilled oil or grease to remain on the floor - wipe it up before someone slips on it.

DON'T use loose fitting wrenches or other tools which may slip and cause injury.

DON'T push on wrenches when loosening or tightening nuts or bolts. Always try to pull the wrench toward you. If the situation calls for pushing the wrench away, push with an open hand to avoid scraped knuckles if the wrench should slip.

DON'T attempt to lift a heavy component alone - get someone to help you.

DON'T rush or take unsafe shortcuts to finish a job.

DON'T allow children or animals in or around the vehicle while you are working on it.

DO wear eye protection when using power tools such as a drill, sander, bench grinder,

etc. and when working under a vehicle.

DO keep loose clothing and long hair well out of the way of moving parts.

DO make sure that any hoist used has a safe working load rating adequate for the job.

DO get someone to check on you periodically when working alone on a vehicle.

DO carry out work in a logical sequence and make sure that everything is correctly assembled and tightened.

DO keep chemicals and fluids tightly capped and out of the reach of children and pets.

DO remember that your vehicle's safety affects that of yourself and others. If in doubt on any point, get professional advice.

Asbestos

Certain friction, insulating, sealing, and other products - such as brake linings, brake bands, clutch linings, torque converters, gaskets, etc. - may contain asbestos. Extreme care must be taken to avoid inhalation of dust from such products, since it is hazardous to health. If in doubt, assume that they do contain asbestos.

Fire

Remember at all times that gasoline is highly flammable. Never smoke or have any kind of open flame around when working on a vehicle. But the risk does not end there. A spark caused by an electrical short circuit, by two metal surfaces contacting each other, or even by static electricity built up in your body under certain conditions, can ignite gasoline vapors, which in a confined space are highly explosive. Do not, under any circumstances, use gasoline for cleaning parts. Use an approved safety solvent.

Always disconnect the battery ground (-) cable at the battery before working on any part of the fuel system or electrical system. Never risk spilling fuel on a hot engine or exhaust component. It is strongly recommended that a fire extinguisher suitable for use on fuel and electrical fires be kept handy in the garage or workshop at all times. Never try to extinguish a fuel or electrical fire with water.

Fumes

Certain fumes are highly toxic and can quickly cause unconsciousness and even death if inhaled to any extent. Gasoline vapor falls into this category, as do the vapors from some cleaning solvents. Any draining or pouring of such volatile fluids should be done in a well ventilated area.

When using cleaning fluids and solvents, read the instructions on the container

carefully. Never use materials from unmarked containers.

Never run the engine in an enclosed space, such as a garage. Exhaust fumes contain carbon monoxide, which is extremely poisonous. If you need to run the engine, always do so in the open air, or at least have the rear of the vehicle outside the work area.

If you are fortunate enough to have the use of an inspection pit, never drain or pour gasoline and never run the engine while the vehicle is over the pit. The fumes, being heavier than air, will concentrate in the pit with possibly lethal results.

The battery

Never create a spark or allow a bare light bulb near a battery. They normally give off a certain amount of hydrogen gas, which is highly explosive.

Always disconnect the battery ground (-) cable at the battery before working on the fuel or electrical systems.

If possible, loosen the filler caps or cover when charging the battery from an external source (this does not apply to sealed or maintenance-free batteries). Do not charge at an excessive rate or the battery may burst.

Take care when adding water to a non maintenance-free battery and when carrying a battery. The electrolyte, even when diluted, is very corrosive and should not be allowed to contact clothing or skin.

Always wear eye protection when cleaning the battery to prevent the caustic deposits from entering your eyes.

Household current

When using an electric power tool, inspection light, etc., which operates on household current, always make sure that the tool is correctly connected to its plug and that, where necessary, it is properly grounded. Do not use such items in damp conditions and, again, do not create a spark or apply excessive heat in the vicinity of fuel or fuel vapor.

Secondary ignition system voltage

A severe electric shock can result from touching certain parts of the ignition system (such as the spark plug wires) when the engine is running or being cranked, particularly if components are damp or the insulation is defective. In the case of an electronic ignition system, the secondary system voltage is much higher and could prove fatal.

Troubleshooting

Contents

| <i>Symptom</i> | <i>Section</i> | <i>Symptom</i> | <i>Section</i> |
|---|----------------|--|----------------|
| Engine | | | |
| Engine backfires..... | 13 | Manual transaxle | |
| Engine diesels (continues to run) after switching off..... | 15 | Difficulty in engaging gears..... | 36 |
| Engine hard to start when cold..... | 4 | Noisy in all gears..... | 33 |
| Engine hard to start when hot..... | 5 | Noisy in Neutral with engine running..... | 32 |
| Engine lacks power..... | 12 | Noisy in one particular gear..... | 34 |
| Engine lopes while idling or idles erratically..... | 8 | Oil leakage..... | 37 |
| Engine misses at idle speed..... | 9 | Slips out of high gear..... | 35 |
| Engine misses throughout driving speed range..... | 10 | Automatic transaxle | |
| Engine rotates but will not start..... | 2 | Fluid leakage..... | 41 |
| Engine stalls..... | 11 | General shift mechanism problems..... | 38 |
| Engine starts but stops immediately..... | 7 | Transaxle slips, shifts rough, is noisy or has no drive in forward or reverse gears..... | 40 |
| Engine will not rotate when attempting to start..... | 1 | Transaxle will not downshift with accelerator pedal pressed to the floor..... | 39 |
| Pinging or knocking engine sounds during - acceleration or uphill..... | 14 | Driveaxles | |
| Starter motor noisy or excessively rough in engagement..... | 6 | Clicking noise in turns..... | 42 |
| Starter motor operates without rotating engine..... | 3 | Knock or clunk when accelerating after coasting..... | 43 |
| Engine electrical system | | Shudder or vibration during acceleration..... | 44 |
| Battery will not hold a charge..... | 16 | Rear axle | |
| Ignition light tails to come on when key is turned on..... | 18 | Noise..... | 45 |
| Ignition light fails to go out..... | 17 | Brakes | |
| Fuel system | | Brake pedal feels spongy when depressed..... | 49 |
| Excessive fuel consumption..... | 19 | Brake pedal pulsates during brake application..... | 52 |
| Fuel leakage and/or fuel odor..... | 20 | Excessive brake pedal travel..... | 48 |
| Cooling system | | Excessive effort required to stop vehicle..... | 50 |
| Coolant loss..... | 25 | Noise (high-pitched squeal with the brakes applied)..... | 47 |
| External coolant leakage..... | 23 | Pedal travels to the floor with little resistance..... | 51 |
| Internal coolant leakage..... | 24 | Vehicle pulls to one side during braking..... | 46 |
| Overcooling..... | 22 | Suspension and steering systems | |
| Overheating..... | 21 | Excessive pitching and/or rolling around corners or during braking..... | 55 |
| Poor coolant circulation..... | 26 | Excessive play in steering..... | 57 |
| Clutch | | Excessive tire wear (not specific to one area)..... | 59 |
| Clutch slips (engine speed increases with no increase in vehicle speed)..... | 28 | Excessive tire wear on inside edge..... | 61 |
| Clutch pedal stays on floor when disengaged..... | 31 | Excessive tire wear on outside edge..... | 60 |
| Fails to release (pedal pressed to the floor - shift lever does not move freely in and out of Reverse)..... | 27 | Excessively stiff steering..... | 56 |
| Grabbing (chattering) as clutch is engaged..... | 29 | Lack of power assistance..... | 58 |
| Squeal or rumble with clutch fully disengaged (pedal depressed)..... | 30 | Shimmy, shake or vibration..... | 54 |
| | | Tire tread worn in one place..... | 62 |
| | | Vehicle pulls to one side..... | 53 |

This section provides an easy reference guide to the more common problems which may occur during the operation of your vehicle. These problems and possible causes are grouped under various components or systems; i.e. Engine, Cooling System, etc., and also refer to the Chapter and/or Section which deals with the problem.

Remember that successful troubleshooting is not a mysterious black art practiced only by professional mechanics.

It's simply the result of a bit of knowledge combined with an intelligent, systematic approach to the problem. Always work by a process of elimination, starting with the simplest solution and working through to the most complex - and never overlook the obvious. Anyone can forget to fill the gas tank or leave the lights on overnight, so don't assume that you are above such oversights.

Finally, always get clear in your mind why a problem has occurred and take steps

to ensure that it doesn't happen again. If the electrical system fails because of a poor connection, check all other connections in the system to make sure that they don't fail as well. If a particular fuse continues to blow, find out why - don't just go on replacing fuses. Remember, failure of a small component can often be indicative of potential failure or incorrect functioning of a more important component or system.

Engine

1 Engine will not rotate when attempting to start

- 1 Battery terminal connections loose or corroded. Check the cable terminals at the battery. Tighten the cable or remove corrosion as necessary.
- 2 Battery discharged or faulty. If the cable connections are clean and tight on the battery posts, turn the key to the On position and switch on the headlights and/or windshield wipers. If they fail to function, the battery is discharged.
- 3 Automatic transaxle not completely engaged in Park or Neutral or clutch pedal not completely depressed.
- 4 Broken, loose or disconnected wiring in the starting circuit. Inspect all wiring and connectors at the battery, starter solenoid and ignition switch.
- 5 Starter motor pinion jammed in flywheel ring gear. If manual transaxle, place transaxle in gear and rock the vehicle to manually turn the engine. Remove starter and inspect pinion and flywheel at earliest convenience (Chapter 5).
- 6 Starter solenoid faulty (Chapter 5).
- 7 Starter motor faulty (Chapter 5).
- 8 Ignition switch faulty (Chapter 12).

2 Engine rotates but will not start

- 1 Fuel tank empty.
- 2 Fault in the carburetor or fuel injection system (Chapter 4).
- 3 Battery discharged (engine rotates slowly). Check the operation of electrical components as described in the previous Section.
- 4 Battery terminal connections loose or corroded (see previous Section).
- 5 Fuel pump faulty (Chapter 4).
- 6 Excessive moisture on, or damage to, ignition components (see Chapter 5).
- 7 Worn, faulty or incorrectly gapped spark plugs (Chapter 1).
- 8 Broken, loose or disconnected wiring in the starting circuit (see previous Section).
- 9 Distributor loose, causing ignition timing to change. Turn the distributor as necessary to start the engine, then set the ignition timing as soon as possible (Chapter 1).
- 10 Broken, loose or disconnected wires at the ignition coil or faulty coil (Chapter 5).

3 Starter motor operates without rotating engine

- 1 Starter pinion sticking. Remove the starter (Chapter 5) and inspect.
- 2 Starter pinion or flywheel teeth worn or broken. Remove the flywheel/driveplate access cover and inspect.

4 Engine hard to start when cold

- 1 Battery discharged or low. Check as described in Section 1.
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Carburetor in need of overhaul (carbureted models) (Chapter 4).
- 4 Distributor rotor carbon tracked and/or damaged (Chapters 1 and 5).
- 5 Choke control stuck or inoperative (carbureted models) (Chapters 1 and 4).

5 Engine hard to start when hot

- 1 Air filter clogged (Chapter 1).
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Fuel not reaching the carburetor (carburetor-equipped models) (see Section 2).

6 Starter motor noisy or excessively rough in engagement

- 1 Pinion or flywheel gear teeth worn or broken. Remove the cover at the rear of the engine (if so equipped) and inspect.
- 2 Starter motor mounting bolts loose or missing.

7 Engine starts but stops immediately

- 1 Loose or faulty electrical connections at distributor, coil or alternator.
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Insufficient fuel reaching the carburetor (carburetor-equipped models). Check the fuel pump (Chapter 4).
- 4 Vacuum leak at the gasket surfaces of the intake manifold, or carburetor/throttle body. Make sure all mounting bolts/nuts are tightened securely and all vacuum hoses connected to the carburetor and manifold are positioned properly and in good condition.

8 Engine lopes while idling or idles erratically

- 1 Vacuum leakage. Check the mounting bolts/nuts at the carburetor/throttle body and intake manifold for tightness. Make sure all vacuum hoses are connected and in good condition. Use a stethoscope or a length of fuel hose held against your ear to listen for vacuum leaks while the engine is running. A hissing sound will be heard. A soapy water solution will also detect leaks.
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).

- 3 Leaking EGR valve or plugged PCV valve (see Chapters 1 and 6).
- 4 Air filter clogged (Chapter 1).
- 5 Fuel pump not delivering sufficient fuel to the carburetor (carbureted models) (see Chapter 4).
- 6 Carburetor out of adjustment (Chapter 4).
- 7 Leaking head gasket. Perform a compression check (Chapter 2).
- 8 Camshaft lobes worn (Chapter 2).

9 Engine misses at idle speed

- 1 Spark plugs worn or not gapped properly (Chapter 1).
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Faulty spark plug wires (Chapter 1).

10 Engine misses throughout driving speed range

- 1 Fuel filter clogged and/or impurities in the fuel system (Chapter 1).
- 2 Faulty or incorrectly gapped spark plugs (Chapter 1).
- 3 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 4 Incorrect ignition timing (Chapter 1).
- 5 Check for cracked distributor cap, disconnected distributor wires and damaged distributor components (Chapter 1).
- 6 Defective spark plug wires (Chapter 1).
- 7 Faulty emissions system components (Chapter 6).
- 8 Low or uneven cylinder compression pressures. Remove the spark plugs and test the compression with a gauge (Chapter 2).
- 9 Weak or faulty ignition system (Chapter 5).
- 10 Vacuum leaks at the carburetor/throttle body, intake manifold or vacuum hoses (see Section 8).

11 Engine stalls

- 1 Idle speed incorrect. Refer to the VECI label and Chapter 1.
- 2 Fuel filter clogged and/or water and impurities in the fuel system (Chapter 1).
- 3 Distributor components damp or damaged (Chapter 5).
- 4 Fault in the fuel system or sensors (Chapters 4 and 6).
- 5 Faulty emissions system components (Chapter 6).
- 6 Faulty or incorrectly gapped spark plugs (Chapter 1). Also check the spark plug wires (Chapter 1).
- 7 Vacuum leak at the carburetor/throttle body, intake manifold or vacuum hoses. Check as described in Section 8.

12 Engine lacks power

- 1 Incorrect ignition timing (Chapter 1).
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Excessive play in the distributor shaft. At the same time, check for a damaged rotor, faulty distributor cap, wires, etc. (Chapters 1 and 5).
- 4 Faulty or incorrectly gapped spark plugs (Chapter 1).
- 5 Carburetor not adjusted properly or excessively worn (carbureted models) (Chapter 4).
- 6 Faulty coil (Chapter 5).
- 7 Brakes binding (Chapter 1).
- 8 Automatic transaxle fluid level incorrect (Chapter 1).
- 9 Clutch slipping (Chapter 8).
- 10 Fuel filter clogged and/or impurities in the fuel system (Chapter 1).
- 11 Emissions control system not functioning properly (Chapter 6).
- 12 Use of substandard fuel. Fill the tank with the proper octane fuel.
- 13 Low or uneven cylinder compression pressures. Test with a compression tester, which will detect leaking valves and/or a blown head gasket (Chapter 2).

13 Engine backfires

- 1 Emissions system not functioning properly (Chapter 6).
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Ignition timing incorrect (Chapter 1).
- 4 Faulty secondary ignition system (cracked spark plug insulator, faulty plug wires, distributor cap and/or rotor) (Chapters 1 and 5).
- 5 Carburetor or fuel injection system in need of adjustment or worn excessively (Chapter 4).
- 6 Vacuum leak at the carburetor/throttle body, intake manifold or vacuum hoses. Check as described in Section 8.
- 7 Valves sticking (Chapter 2).

14 Pinging or knocking engine sounds during acceleration or uphill

- 1 Incorrect grade of fuel. Fill the tank with fuel of the proper octane rating.
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Ignition timing incorrect (Chapter 1).
- 4 Carburetor in need of adjustment (carbureted models) (Chapter 4).
- 5 Improper spark plugs. Check the plug type against the VECI label located in the engine compartment. Also check the plugs and wires for damage (Chapter 1).
- 6 Worn or damaged distributor components (Chapter 5).

- 7 Faulty emissions system (Chapter 6).
- 8 Vacuum leak. Check as described in Section 9.

15 Engine diesels (continues to run) after switching off

- 1 Idle speed too high. Refer to Chapter 1.
- 2 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 3 Ignition timing incorrectly adjusted (Chapter 1).
- 4 Thermo-controlled air cleaner heat valve not operating properly (Chapters 1 and 6).
- 5 Excessive engine operating temperature. Probable causes of this are a malfunctioning thermostat, clogged radiator, faulty water pump (see Chapter 3).

Engine electrical system

16 Battery will not hold a charge

- 1 Alternator drivebelt defective or not adjusted properly (Chapter 1).
- 2 Electrolyte level low or battery discharged (Chapter 1).
- 3 Battery terminals loose or corroded (Chapter 1).
- 4 Alternator not charging properly (Chapter 5).
- 5 Loose, broken or faulty wiring in the charging circuit (Chapter 5).
- 6 Short in the vehicle wiring causing a continual drain on battery (refer to Chapter 12 and the Wiring Diagrams).
- 7 Battery defective internally.

17 Ignition light fails to go out

- 1 Fault in the alternator or charging circuit (Chapter 5).
- 2 Alternator drivebelt defective or not properly adjusted (Chapter 1).

18 Ignition light fails to come on when key is turned on

- 1 Instrument cluster warning light bulb defective (Chapter 12).
- 2 Alternator faulty (Chapter 5).
- 3 Fault in the instrument cluster printed circuit, dashboard wiring or bulb holder (Chapter 12).

Fuel system

19 Excessive fuel consumption

- 1 Dirty or clogged air filter element (Chapter 1).

- 2 Incorrectly set ignition timing (Chapter 1).
- 3 Choke sticking or improperly adjusted (carbureted models) (see Chapter 1).
- 4 Emissions system not functioning properly (Chapter 6).
- 5 Fault in the fuel or electrical systems (Chapters 4 and 5).
- 6 Carburetor or fuel injection system internal parts excessively worn or damaged (Chapter 4).
- 7 Low tire pressure or incorrect tire size (Chapter 1).

20 Fuel leakage and/or fuel odor

- 1 Leak in a fuel feed or vent line (Chapter 4).
- 2 Tank overfilled. Fill only to automatic shut-off.
- 3 Evaporative emissions system canister clogged (Chapter 6).
- 4 Vapor leaks from system lines (Chapter 4).
- 5 Carburetor or fuel injection system internal parts excessively worn or out of adjustment (Chapter 4).

Cooling system

21 Overheating

- 1 Insufficient coolant in the system (Chapter 1).
- 2 Water pump drivebelt defective or not adjusted properly (Chapter 1).
- 3 Radiator core blocked or radiator grille dirty and restricted (see Chapter 3).
- 4 Thermostat faulty (Chapter 3).
- 5 Fan blades broken or cracked (Chapter 3).
- 6 Radiator cap not maintaining proper pressure. Have the cap pressure tested by gas station or repair shop.
- 7 Ignition timing incorrect (Chapter 1).

22 Overcooling

Thermostat faulty (Chapter 3).

23 External coolant leakage

- 1 Deteriorated or damaged hoses or loose clamps. Replace hoses and/ or tighten the clamps at the hose connections (Chapter 1).
- 2 Water pump seals defective. If this is the case, water will drip from the weep hole in the water pump body (Chapter 3).
- 3 Leakage from radiator core or header tank This will require the radiator to be professionally repaired (see Chapter 3 for removal procedures).
- 4 Engine drain plug leaking (Chapter 1) or water jacket core plugs leaking (see Chapter 2).