

# Service Manual Trucks

Group **37**

Release **01**

Wiring diagram

FM

FH

CHID A689836–


CHID B548688–

CHID D131669–

CHID E750419–

CHID W100028–

CHID CKD887300–

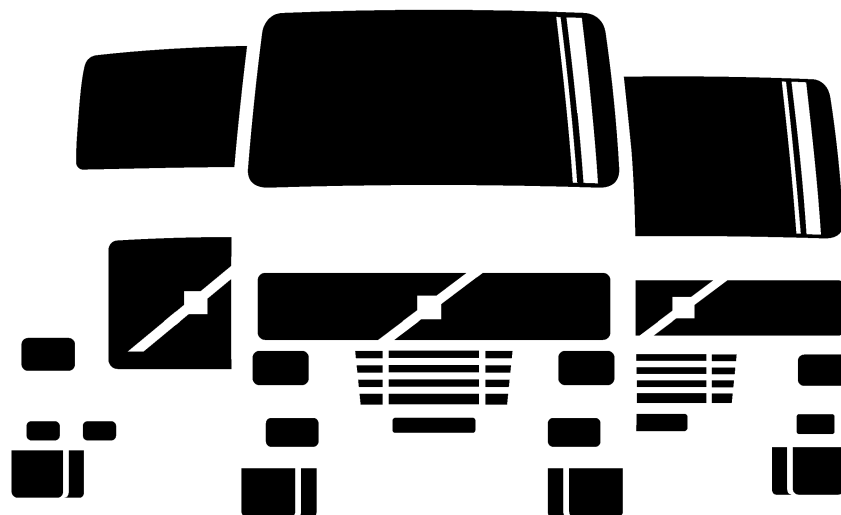

# Foreword

The descriptions and service procedures contained in this manual are based on designs and methods studies carried out up to June 09.

The products are under continuous development. Vehicles and components produced after the above date may therefore have different specifications and repair methods. When this is judged to have a significant bearing on this manual, supplementary service bulletins will be issued to cover the changes.

The new edition of this manual will update the changes.

In service procedures where the title incorporates an operation number, this is a reference to V.S.T. (Volvo Standard Times).

Service procedures which do not include an operation number in the title are for general information and no reference is made to V.S.T.

The following levels of observations, cautions and warnings are used in this Service Documentation:

**Note:** Indicates a procedure, practice, or condition that must be followed in order to have the vehicle or component function in the manner intended.

**Caution:** Indicates an unsafe practice where damage to the product could occur.

**Warning:** Indicates an unsafe practice where personal injury or severe damage to the product could occur.

**Danger:** Indicates an unsafe practice where serious personal injury or death could occur.

## Volvo Truck Corporation

Göteborg, Sweden

**Order number: 20186030**

© 09 Volvo Truck Corporation, Göteborg, Sweden


All rights reserved. No part of this publication may be reproduced, stored in retrieval system, or transmitted in any forms by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Volvo Truck Corporation.

ENG32943.ihval


# Contents

<b>Example of wiring diagram</b> .....	2
<b>Component wiring diagram index</b> .....	5
<b>Component wiring diagrams</b> .....	9
<b>Illustrations index</b> .....	131
<b>Illustrations</b> .....	132
<b>Fuses</b> .....	235
<b>Relays</b> .....	237
<b>Wiring harness illustration index</b> .....	239
<b>Ground connections</b> .....	242
List of ground connections .....	244
<b>List of connectors</b> .....	245
<b>List of components</b> .....	256
<b>Abbreviations</b> .....	263
<b>Cable colour code</b> .....	265
<b>Feedback</b>	


# Example of wiring diagram

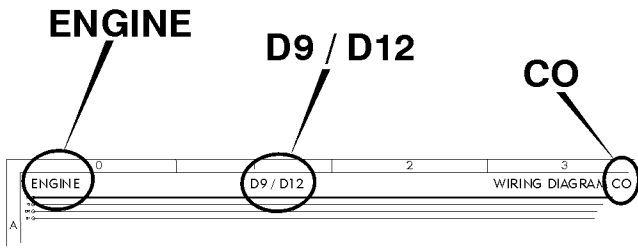


Component wiring diagram title, variant/subtitle and symbol.

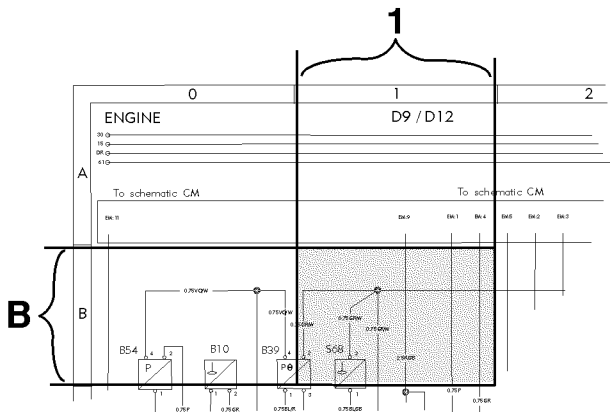


Coordinates (B 1).

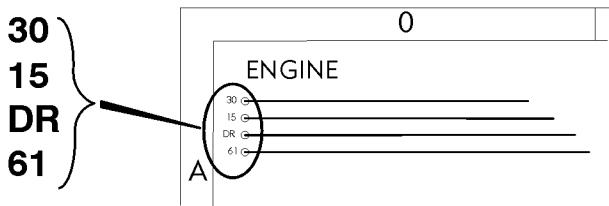


30 Voltage battery, kl.30.  
 15 Voltage with starter key in drive position, kl.15.  
 DR Voltage with starter key in drive position, preheat position and start position, kl.DR.  
 61 Voltage when alternator charges, kl.61.

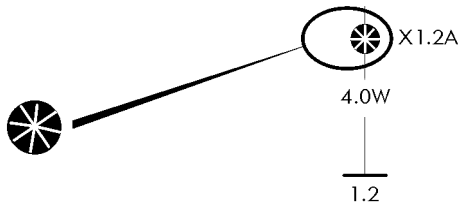

Splice.



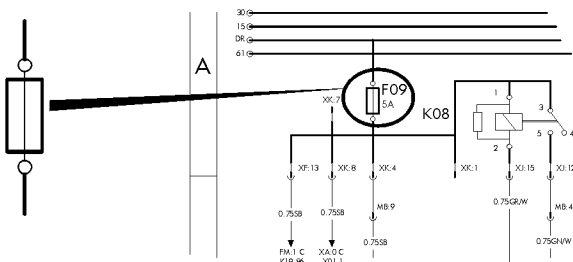


Fuse.

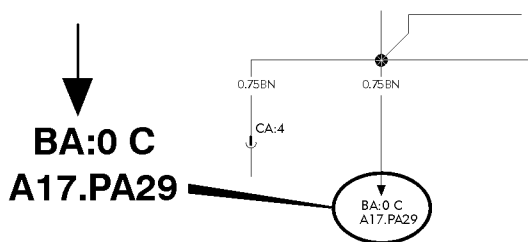

Reference arrow, for diagram BA, coordinates 0 C, component A17, connector PA pin 29.


**GEARTRONIC**  
**I-SHIFT**  
**POWERTRONIC**

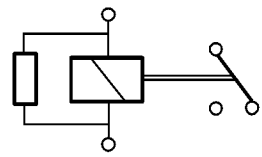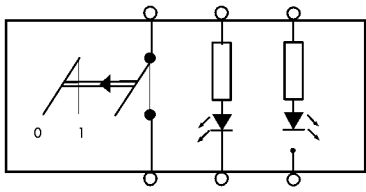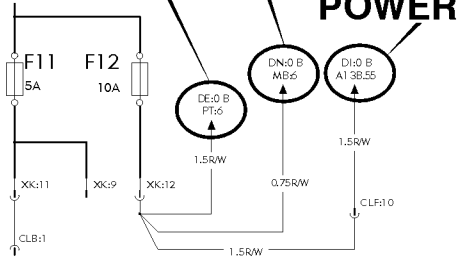


The maximum of variants are drawn, think about that all wires and components are not standard for all markets or vehicle models.

Switch.


Relay.

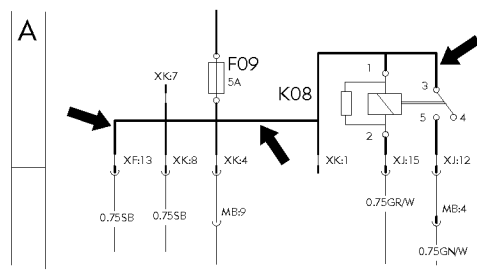


Conductor on circuit card.

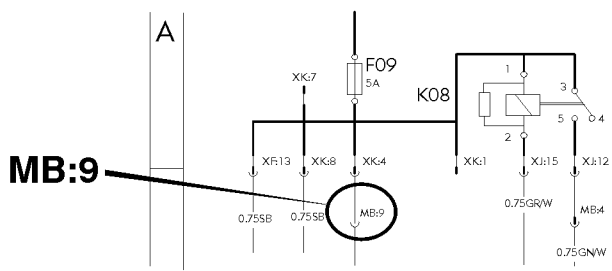


Connector MB terminal 9.

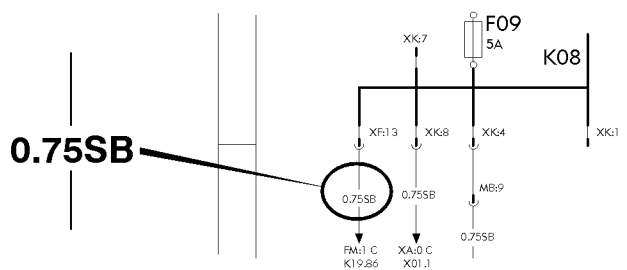


Wire area and colour.

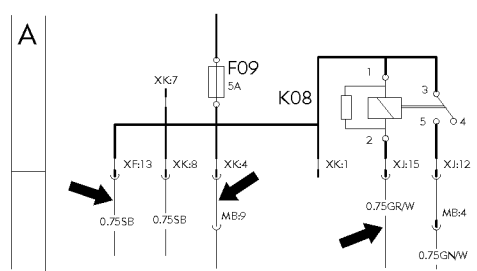


Thin lines, wires.

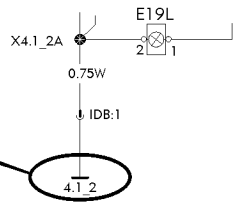


Earth connection point 4, earth connection 1 and wire 2.

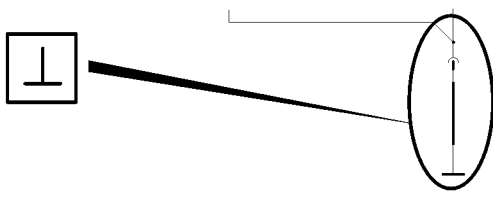

Earth connection to circuit card.

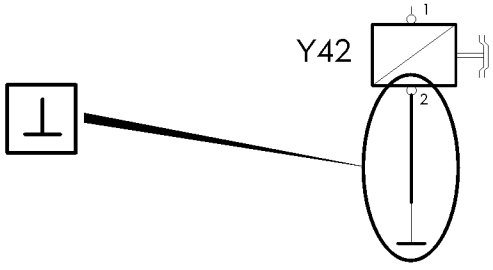

Earth connection without wire.

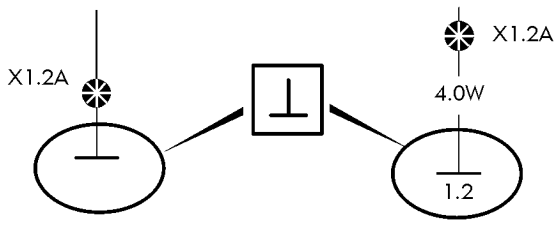

Same splice can be drawn on several diagrams. The wire from the splice to the earth connection point will only be drawn and coded on one diagram. On the other diagrams will only the earth connection point be written besides the splice.

# Component wiring diagram index

<b>AA</b>	Power supply, starting system .....	page 9
<b>AB</b>	Main switch .....	page 10
<b>AC</b>	Power distribution .....	page 11
<b>AE</b>	ADR, main switch .....	page 12
<b>AF</b>	ADR, main switch, ADR3 .....	page 13
<b>BA</b>	Vehicle ECU .....	page 14
<b>BE</b>	Driver Assistance System, ACC .....	page 15
<b>BI</b>	Instrument cluster .....	page 16
<b>BM</b>	Tachograph in dash .....	page 17
<b>BN</b>	Tachograph in shelf .....	page 18
<b>BU</b>	Dynafleet TIS-BAS/TIS-MED/TIS-HIGH .....	page 19
<b>BX</b>	FMS Gateway .....	page 20
<b>BZ</b>	Toll collect .....	page 21
<b>BZ RHD</b>	Toll collect .....	page 22
<b>CH</b>	Engine interface EM-JPN07 .....	page 23
<b>CJ</b>	Engine interface .....	page 24
<b>CO</b>	Engine D9B, D11A, D11B, D13A .....	page 25
	Engine D11C, EM-EU5 .....	page 26
	Engine D11C, EM-EU5 .....	page 27
	Engine D13B, EGR-C, EM-EC06 .....	page 28
	Engine D13B, EGR-C, EM-EC06 .....	page 29
	Engine D13B, EM-JPN07 .....	page 30
	Engine D13B, EM-JPN07 .....	page 31
	Engine D13C, EM-EU5 .....	page 32
	Engine D13C, EM-EU5 .....	page 33
	Engine D16C4 .....	page 34
	Engine D16E .....	page 35
	Engine D16G, EM-EU5 .....	page 36
	Engine D16G, EM-EU5 .....	page 37
<b>CP</b>	12V trailer ABS converter, VERS-AUS, TABS-12V .....	page 38
<b>CV</b>	SCR .....	page 39
<b>DC</b>	Gear selector ECU (I-SHIFT/POWERTRONIC) .....	page 40
<b>DI</b>	Powertronic .....	page 41
<b>DM</b>	Retarder manual gearshift .....	page 42
<b>DP</b>	I-shift .....	page 43
<b>DQ</b>	Power take off .....	page 44
<b>DU</b>	Diff-lock .....	page 45
<b>EE</b>	ABS basic, E-version .....	page 46

<b>EE RHD</b>	ABS basic, E-version .....	page 47
<b>EF</b>	ABS 6x2 VERS-SAM .....	page 48
<b>EO</b>	EBS ECU .....	page 49
<b>EO RHD</b>	EBS ECU .....	page 50
<b>EP</b>	EBS modulators .....	page 51
<b>FA</b>	Air-suspension .....	page 52
<b>FA RHD</b>	Air-suspension .....	page 53
<b>FB</b>	Air-suspension .....	page 54
<b>FB RHD</b>	Air-suspension .....	page 55
<b>FG</b>	Load indicator .....	page 56
<b>FI</b>	Bogie lift A-ride .....	page 57
<b>FK</b>	Bogie lift A-ride with axle load limiter .....	page 58
<b>FL</b>	Bogie lift J-ride 6x2 .....	page 59
<b>FM</b>	Axle lock, self steered axle .....	page 60
<b>FO</b>	Electronic steered axle .....	page 61
<b>FP</b>	Dual steered front axle .....	page 62
<b>FQ</b>	Air dryer .....	page 63
<b>FU</b>	Central lubrication system .....	page 64
<b>FX</b>	Fuel heater, Thermoline .....	page 65
<b>GA</b>	LCM head lights, FH .....	page 66
<b>GA2</b>	LCM head lights, FM .....	page 67
<b>GA3</b>	LCM head lights, FM VAL-BAS2 .....	page 68
<b>GB</b>	LCM trailer .....	page 69
<b>GB2</b>	LCM trailer, VAL-BAS2 .....	page 70
<b>GC</b>	LCM rear lights .....	page 71
<b>GC RHD</b>	LCM rear lights .....	page 72
<b>GE</b>	Rear lights overhang .....	page 73
<b>GF</b>	Rear lights, India/Korea .....	page 74
<b>GG</b>	Trailer connections, RIGID .....	page 75
<b>GH</b>	Trailer connections, TRACTOR .....	page 76
<b>GK</b>	Trailer connections (AUS only) .....	page 77
<b>GL</b>	Identification lamps .....	page 78
<b>GL2</b>	Identification lamps, sunvisor H1 .....	page 79
<b>GM</b>	Wiper, rainsensor .....	page 80
<b>GQ</b>	Horn .....	page 81
<b>GR</b>	Trailer connections TREL14 .....	page 82
<b>GU</b>	Headlights adjust .....	page 83



<b>HE</b>	Fan in dash board .....	page 84
<b>HG</b>	Climate unit, CU,-BAS,-MCC,-ECC .....	page 85
<b>HI</b>	Air heater, UADR .....	page 86
<b>HI2</b>	Air heater, ADR .....	page 87
<b>HM</b>	Water heater .....	page 88
<b>HP</b>	Short stop cab heater .....	page 89
<b>HY</b>	Climat unit, CU,-HEAT,-ACMAN,-ACAUT. ....	page 90
<b>HY RHD</b>	Climat unit, CU,-HEAT,-ACMAN,-ACAUT. ....	page 91
<b>HZ</b>	Air cooler, Brazil .....	page 92
<b>IA</b>	El. heated/adj. seat .....	page 93
<b>IE</b>	El. heat/adj. mirrors, El. window winders .....	page 94
<b>IF</b>	Foldable mirror bracket .....	page 95
<b>IH</b>	Interior light, FM, FH H1 .....	page 96
<b>IH2</b>	Interior light, FH, INLI-NLD .....	page 97
<b>IH3</b>	Interior light, FM, FH INLI-NL/INLI-BAS .....	page 98
<b>IH4</b>	Interior light, H2/H3 .....	page 99
<b>IK</b>	Alcolock, start prevention system .....	page 100
<b>IM</b>	Central locking, immobiliser .....	page 101
<b>IQ</b>	El. sunroof, cig. lighter, refrigerator .....	page 102
<b>IQ2</b>	Cig. lighter VAL-BAS2 .....	page 103
<b>IR</b>	12V power supply .....	page 104
<b>IR2</b>	Power outlets .....	page 105
<b>IS</b>	SRS. Air-bag .....	page 106
<b>IU</b>	Audio .....	page 107
<b>IU RHD</b>	Audio .....	page 108
<b>IV</b>	Amplifier .....	page 109
<b>IX</b>	Integrated telephone .....	page 110
<b>IZ</b>	Backup camera .....	page 111
<b>KA</b>	Cab tilt .....	page 112
<b>KE</b>	Load light, 5:th wheel lamp .....	page 113
<b>KI</b>	Light sign .....	page 114
<b>KM</b>	Beacon warning light .....	page 115
<b>ME</b>	Extra fuse block, key switch relay .....	page 116
<b>MF</b>	Extra fuse block, SPDU-S .....	page 117
<b>NA</b>	Body builder (BB), auxsw-6 and swapbody .....	page 118
<b>NB</b>	Body builder (BB), tailprep and swapbody .....	page 119
<b>NC</b>	Body builder (BB), ELCE-CK, BBM, PTO2 .....	page 120
<b>NI</b>	Extra spotlamps front/roof, max 4x70W .....	page 121

<b>NK</b>	Burglar alarm .....	page 122
<b>NU</b>	Body builder (BB), SPEED-DU .....	page 123
<b>NX</b>	Body builder (BB), SPDU-S .....	page 124
<b>OA</b>	Tyre pressure monitoring (TPM) .....	page 125
<b>XA</b>	Bus J1708/J1587 .....	page 126
<b>XB</b>	Bus J1939 .....	page 127
<b>XC</b>	Bus J1939-7, OBD .....	page 128
<b>YA</b>	Ground connector .....	page 129
<b>ZA RHD</b>	Ground/Misc. ....	page 130

# Component wiring diagrams

