



---

**1983**

---

**BMW 633CSi**

---

**Electrical**

---

**Troubleshooting**

---

**Manual**

---

BMW of North America, Inc.  
Montvale, New Jersey

### FOREWORD


In the interests of continuing technical development work we reserve the right to modify designs and equipment.

Printed in USA

© Copyright BMW of North America, Inc.  
January 1983

Not to be reproduced wholly or in part  
without written permission of  
BMW of North America, Inc.

PN 01 00 1 467 793

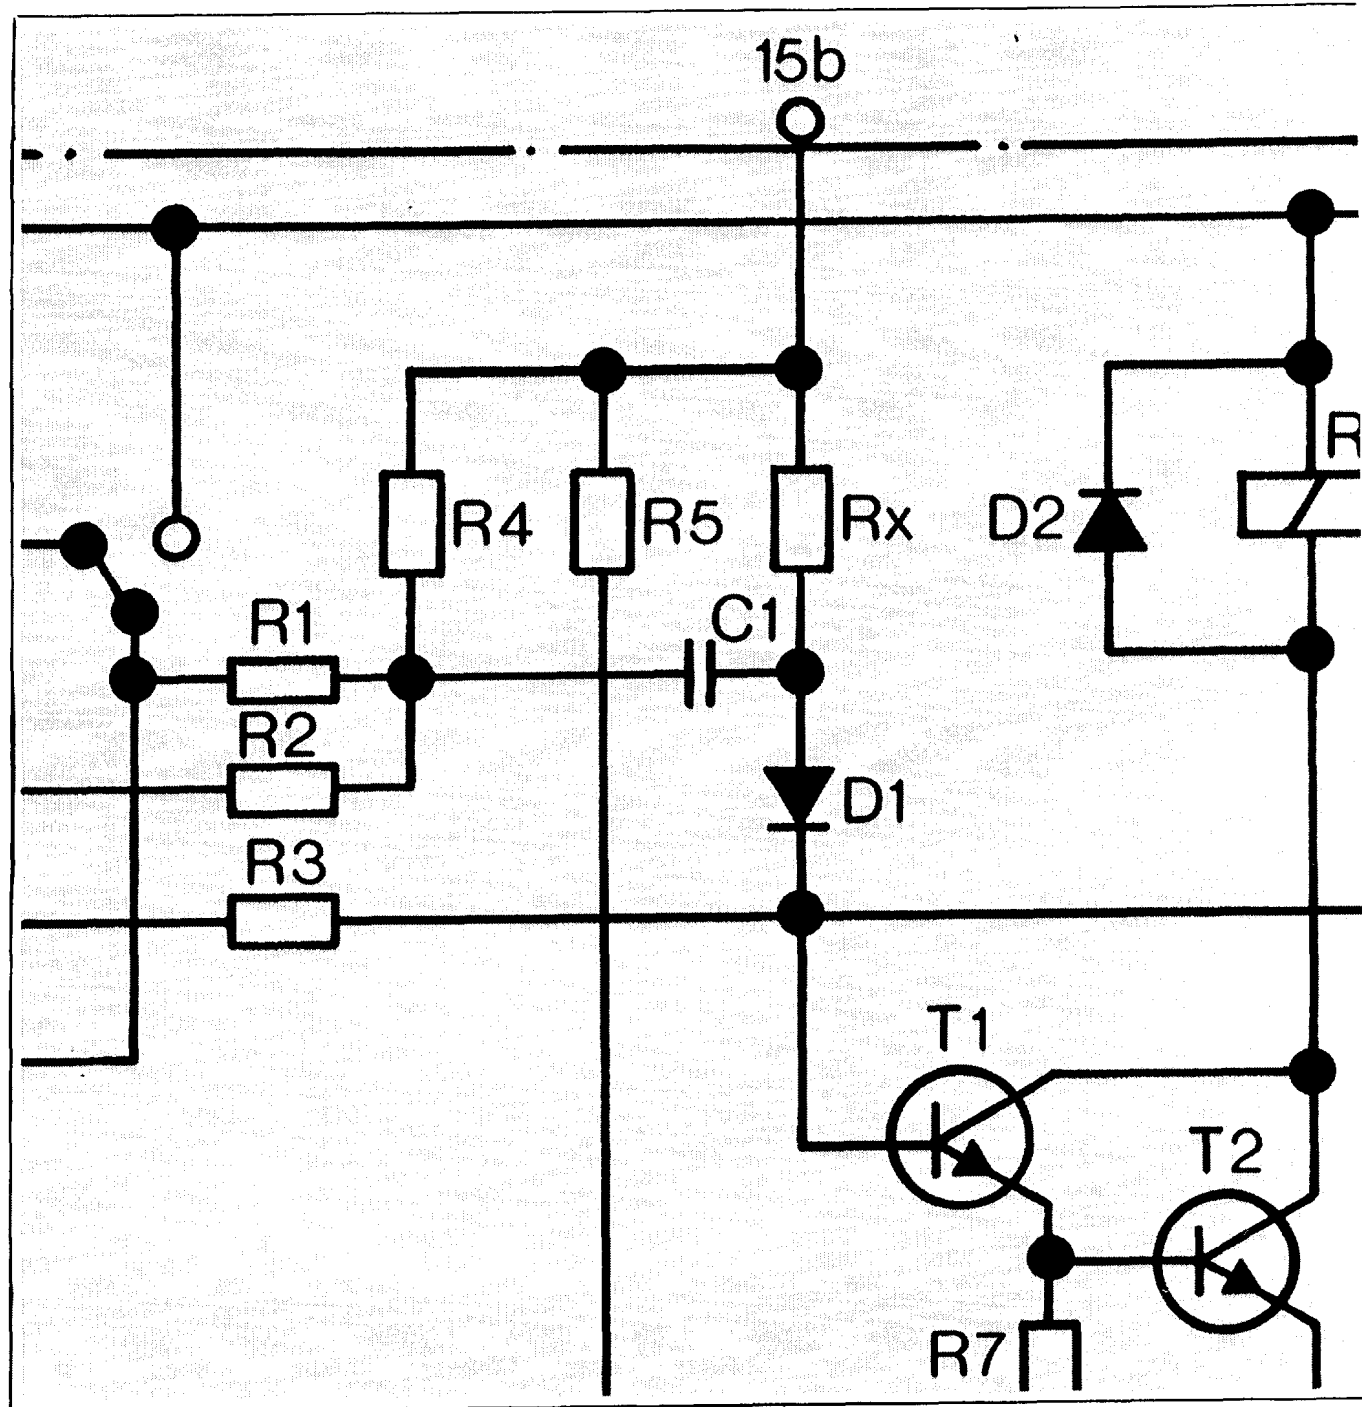


1983  
 BMW 633CSi  
 Electrical  
 Troubleshooting  
 Manual

**CONTENTS**

---

Index .....	2
How To Use This Manual .....	3
Symbols .....	4
Wire Size Conversion Chart ...	5
Systematic Troubleshooting ...	6
Diagnostic Connector .....	101
Power Distribution Box .....	102
Fuse Data .....	103
Schematic Diagrams .....	104
Component Charts and Figures .....	201

---

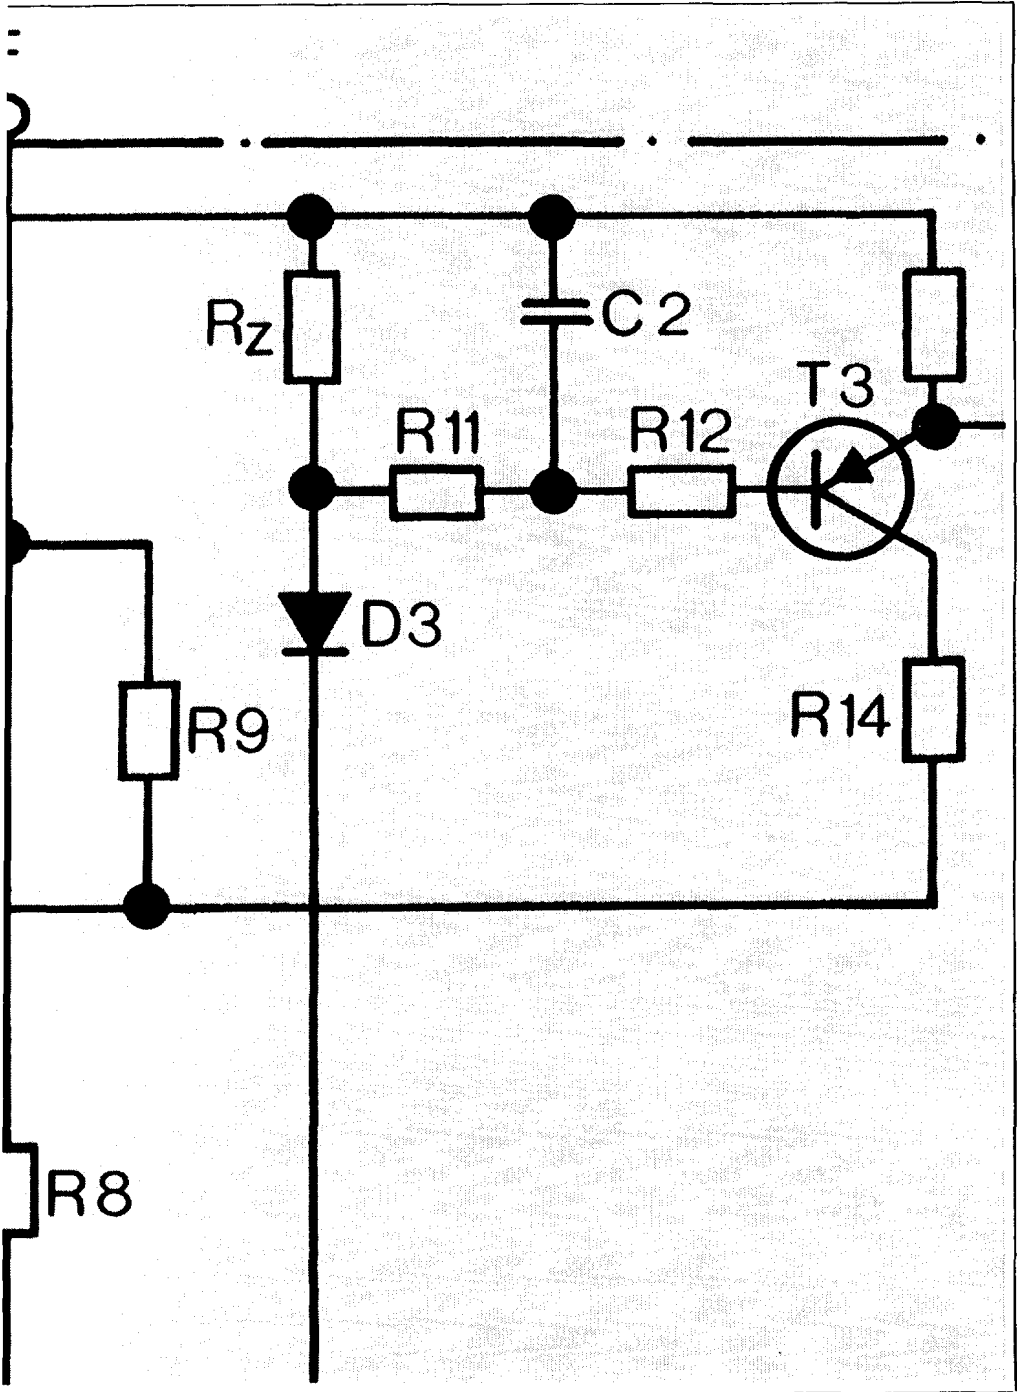

### Index—Alphabetical Listing of Electrical Circuits

	SCHEMATIC PAGE		SCHEMATIC PAGE
Accessory Connector .....	157	Lights (continued)	
Active Check Control .....	123	—Hazard Warning .....	130
Air Conditioning .....	149	—Headlights .....	128
Auxiliary Fan .....	148	—Interior .....	127
Brake Lining Warning .....	126	—License .....	133
Central Locking .....	144	—Rear Marker .....	133
Charging System .....	109	—Stoplights .....	134
Cigar Lighter .....	139	—Tail .....	132
Cruise Control .....	134	—Turn .....	130
Diagnostic Connector .....	101	—Transmission Range .....	136
Evaporative Control .....	111	—Trunk .....	133
Fuel Control .....	114	—Underhood .....	132
Fuel Delivery .....	111	—Visor .....	136
Fuel Gauge .....	119	On-Board Computer .....	116
Fuse Data .....	103	Power Antenna .....	147
Gauges .....	118	Power Distribution .....	104
Ground Distribution .....	153	Power Distribution Box .....	102
Heater .....	149	Power Mirrors .....	146
Heated Door Lock .....	140	Power Windows .....	142
Horn .....	140	Radio .....	147
Idle Speed Control .....	112	Rear Defogger .....	141
Ignition .....	113	Seatbelt Warning .....	115
Ignition Key Warning .....	115	Service Interval Indicator .....	121
Lights		Speedometer .....	118
—Backup .....	138	Start .....	110
—Dash .....	136	Sunroof .....	152
—Fog .....	128	Warning Indicators .....	118
—Front Park .....	132	Windshield Washer Jet Heaters .....	158
—Glove Box .....	139	Wiper/Washer .....	122

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.


The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.


WIRE SIZE CONVERSION CHART	
METRIC (CROSSSECTIONAL AREA IN MM <sup>2</sup> )	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK


# 4 SYMBOLS



ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN




COMPONENT WITH SCREW TERMINALS



SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)




CONNECTOR ON COMPONENT LEAD (PIGTAIL)




CONNECTOR ATTACHED TO COMPONENT




COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

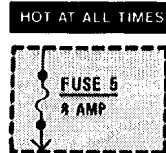



INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER

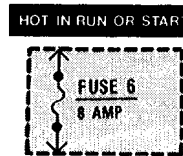


INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

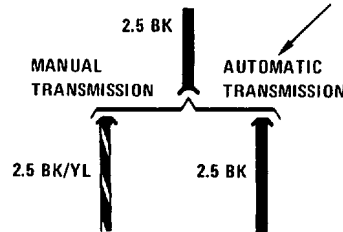


WIRE CHOICES FOR OPTIONS ARE SHOWN AND LABELED

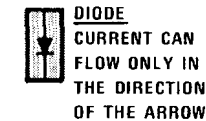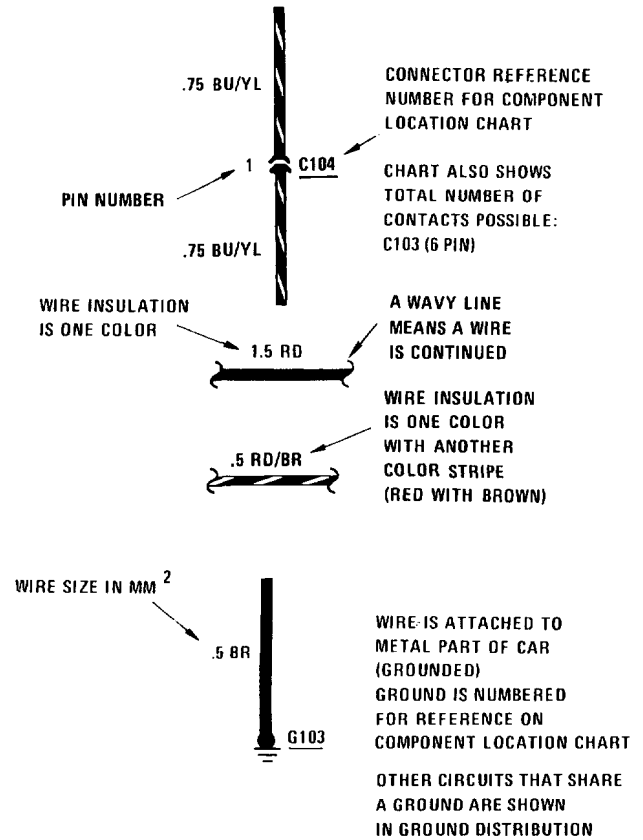



CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT



ACTIVE CHECK CONTROL








ONE POLE,  
TWO POSITION  
SWITCH

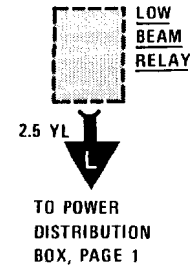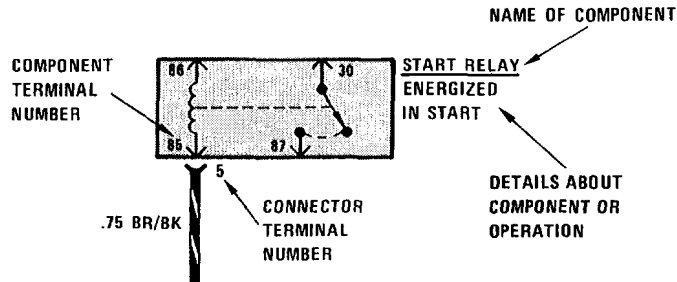


LOW  
BEAM  
RELAY

CURRENT PATH IS CONTINUED AS LABELED. THE ARROW SHOWS DIRECTION OF CURRENT FLOW AND IS REPEATED WHERE CURRENT PATH CONTINUES.

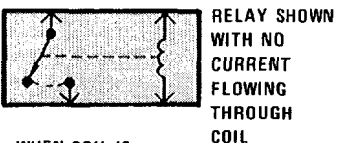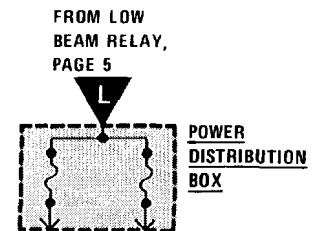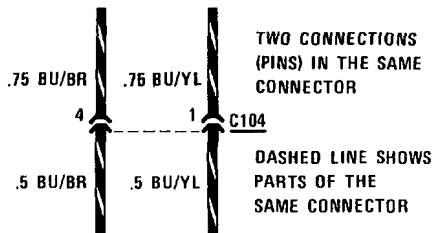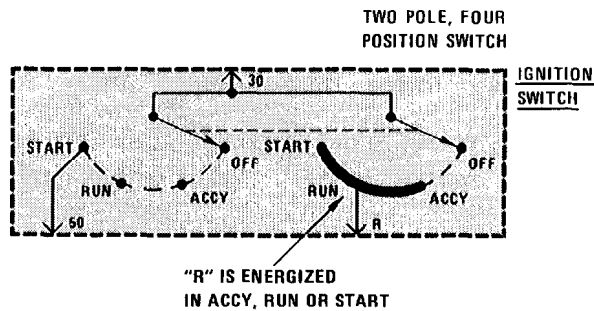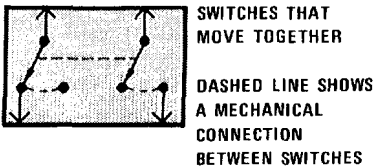

WHEN COIL IS  
ENERGIZED, SWITCH  
IS PULLED CLOSED

RELAY SHOWN  
WITH NO  
CURRENT  
FLOWING  
THROUGH  
COIL

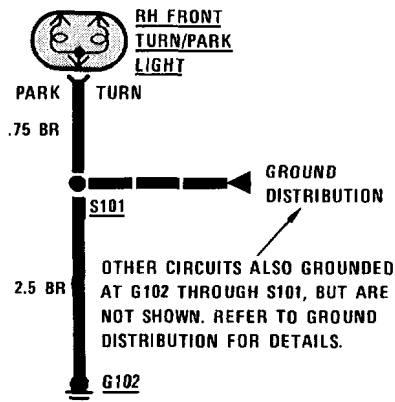

LIGHT  
EMITTING  
DIODE

## 6 SYSTEMATIC TROUBLESHOOTING

### TROUBLESHOOTING PROCEDURE

#### 1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

#### 2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

#### 3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

#### 4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

#### 5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

### TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

### TROUBLESHOOTING TESTS

#### Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

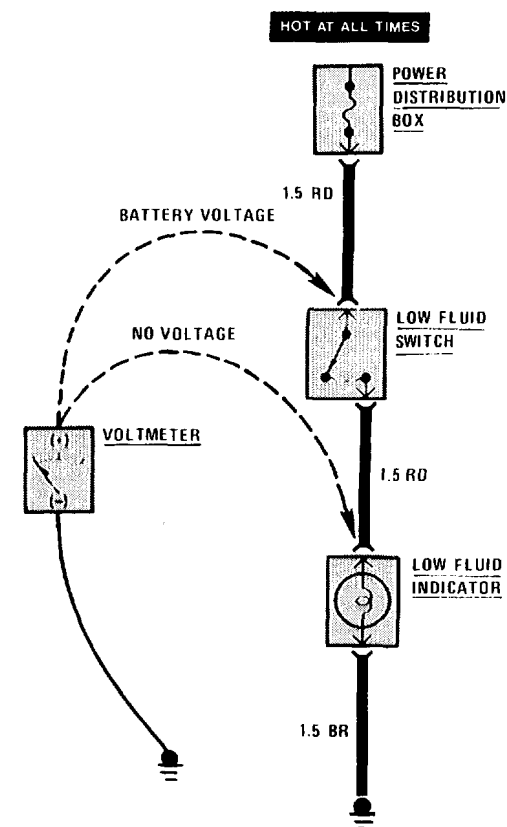

Voltage Test