





# Troubleshooting and Repair Manual M11 Series Engines (STC, CELECT™, CELECT™ Plus Models)

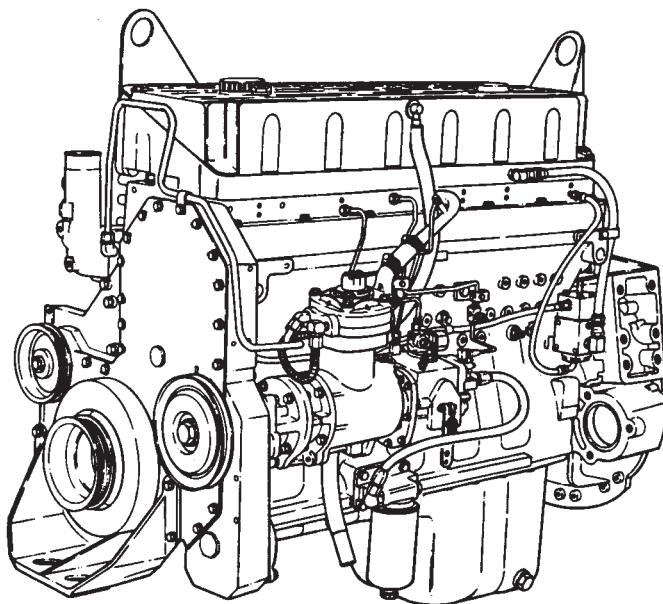

**STC**

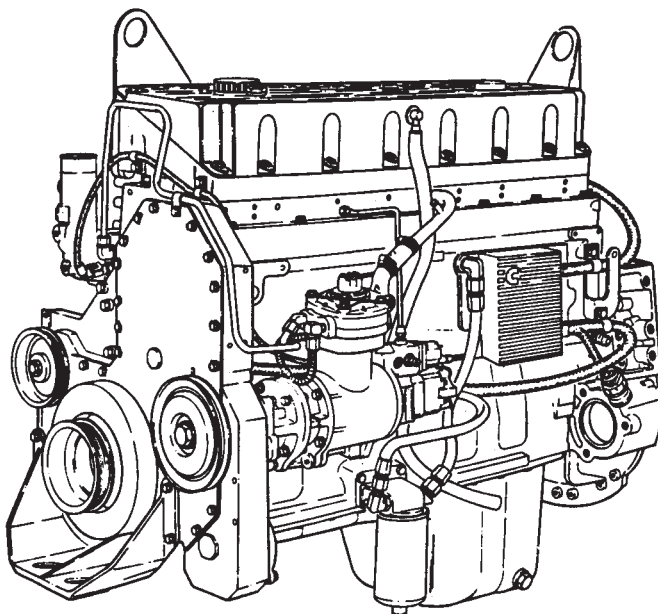

**CELECT™/CELECT™ Plus**

00200023

# Foreword

This manual provides instructions for troubleshooting and repairing this engine in the chassis. Component and assembly rebuild procedures are provided in the engine shop manual. Refer to Section i - Introduction for instructions on how to use this manual.

**Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.**

The manual is organized to guide a service technician through the logical steps of identifying and correcting problems related to the engine. This manual does not cover vehicle or equipment problems. Consult the vehicle or equipment manufacturer for repair procedures.

A series of specific service manuals (for example: Shop, Specifications, and Alternative Repair) are available and can be ordered by filling out and mailing the Literature Order Form located in Section L - Service Literature.

The repair procedures used in this manual are recommended by Cummins Engine Co., Inc. Some service procedures require the use of special service tools. Use the correct tools as described.

Cummins Engine Company, Inc. encourages the user of this manual to report errors, omissions, and recommendations for improvement. Please use the postage paid, pre-addressed Literature Survey Form in the back of this manual for communicating your comments.

The specifications and rebuild information in this manual is based on the information in effect at the time of printing. Cummins Engine Company, Inc. reserves the right to make any changes at any time without obligation. If differences are found between your engine and the information in this manual, contact a Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357).

The latest technology and the highest quality components are used to manufacture Cummins engines. When replacement parts are needed, we recommend using only genuine Cummins or ReCon<sup>®</sup> exchange parts. These parts can be identified by the following trademarks:



# Table of Contents

	Section
Introduction .....	i
Engine Identification .....	E
Troubleshooting Symptoms .....	TS
Complete Engine — Group 00 .....	0
Cylinder Block — Group 01 .....	1
Cylinder Head — Group 02 .....	2
Rocker Levers — Group 03 .....	3
Cam Followers/Tappets — Group 04 .....	4
Fuel System — Group 05 .....	5
Injectors and Fuel Lines — Group 06 .....	6
Lubricating Oil System — Group 07 .....	7
Cooling System — Group 08 .....	8
Drive Units — Group 09 .....	9
Air Intake System — Group 10 .....	10
Exhaust System — Group 11 .....	11
Compressed Air System — Group 12 .....	12
Electrical Equipment — Group 13 .....	13
Engine Testing — Group 14 .....	14
Mounting Adaptations — Group 16 .....	16
Miscellaneous Hardware — Group 17 .....	17
Vehicle Braking — Group 20 .....	20
Service Literature .....	L
Component Manufacturers .....	M
Specifications .....	V
Index .....	X

**THIS PAGE LEFT INTENTIONALLY BLANK.**

# Section i - Introduction

## Section Contents

	<b>Page</b>
<b>About this Manual</b> .....	i-1
<b>Acronyms and Abbreviations</b> .....	i-10
<b>General Cleaning Instructions</b> .....	i-9
Glass or Plastic Bead Cleaning .....	i-9
Solvent and Acid Cleaning .....	i-9
Steam Cleaning .....	i-9
<b>General Repair Instructions</b> .....	i-8
Welding on a Vehicle with an Electronic Controlled Fuel System .....	i-8
<b>General Safety Instructions</b> .....	i-7
Important Safety Notice .....	i-7
<b>How to Use the Manual</b> .....	i-1
<b>Illustrations</b> .....	i-6
<b>Symbols</b> .....	i-2

## About this Manual

This Troubleshooting and Repair Manual is intended to aid in determining the cause of engine related problems and to provide recommended repair procedures.

The material in this manual covers all M11 Series engines. The manual is divided into sections. Each section is equivalent to a group used in Cummins' filmcard system. Some sections contain **reference** numbers and **procedure** numbers. **Reference** numbers provide general information, specifications, diagrams, and service tools where applicable. **Procedure** numbers are used to identify and reference specific repair procedures for correcting the problem.

This manual is designed so the troubleshooting trees are used to locate the cause of an engine problem. The troubleshooting trees then direct the user to the correct repair procedure. The repair procedures within a section are in numerical order. However, the repair steps within a given procedure are organized in the order the repair **must** be performed regardless of the numerical order of the steps. The user **must** use the contents pages or the index at the back of the manual to locate specific topics when not using the troubleshooting trees.

This manual covers all base engine repair procedures and some fuel system repair procedures for the STC fuel system. Repair procedures and fault code diagnosis for the electronic fuel systems (CELECT™ and CELECT™ Plus) is covered in Troubleshooting and Repair Manual, Bulletin No. 3666130.

## How to Use the Manual

This manual is organized to provide an easy flow from problem identification to problem correction. A list of troubleshooting symptoms containing the most common engine problems is in the Troubleshooting Symptoms, Section (TS). The manual is designed to use the Troubleshooting Symptoms as a guide to locating the problem and directing the end user to the correct procedure for making the repair. Complete the following steps to locate and correct the problem.

- (Step 1)                      Locate the symptom on the Section Contents pages of Section TS.
- Reference to the page number where the Troubleshooting Symptom Tree is found is made to the right of the symptom tree title.
- (Step 2)                      The left column of boxes in the Troubleshooting Symptom Charts indicates a probable cause of the problem, starting at the top with the simplest and easiest to repair, and continuing downward to the most difficult.
- The right column of boxes provides a brief description of the corrective action with a reference number to the correct procedure used to make the repair.
- (Step 3)                      Locate the probable cause in the left column then turn to the procedure referenced in the right column.
- (Step 4)                      The Troubleshooting Symptom Charts are based on the following assumptions:
1. The engine has been installed according to the manufacturer's specifications.
  2. The easiest repairs are done first.
  3. "Generic" solutions to cover problems with the most common applications and Original Equipment Manufacturer (OEM).

## Symbols

The following symbols have been used in this manual to help communicate the intent of the instructions. When one of the symbols appears, it conveys the meaning defined below:



**WARNING** - Serious personal injury or extensive property damage can result if the warning instructions are **not** followed.



**CAUTION** - Minor personal injury can result or a part, an assembly, or the engine can be damaged if the caution instructions are **not** followed.



Indicates a **REMOVAL** or **DISASSEMBLY** step.



Indicates an **INSTALLATION** or **ASSEMBLY** step.



**INSPECTION** is required.



**CLEAN** the part or assembly.



**PERFORM** a mechanical or time **MEASUREMENT**.



**LUBRICATE** the part or assembly.



Indicates that a **WRENCH** or **TOOL SIZE** will be given.



**TIGHTEN** to a specific torque.



**PERFORM** an electrical **MEASUREMENT**.



Refer to another location in this manual or another publication for additional information.



The component weighs 23 kg [50 lb] or more. To avoid personal injury, use a hoist or get assistance to lift the component.

## Simbolos

Los símbolos siguientes son usados en este manual para clarificar el proceso de las instrucciones. Cuando aparece uno de estos símbolos, su significado se especifica en la parte inferior.



**ADVERTENCIA** - Serios daños personales o daño a la propiedad puede resultar si las instrucciones de Advertencia no se consideran.



**PRECAUCION** - Daños menores pueden resultar, o de piezas del conjunto o el motor puede averiarse si las instrucciones de Precaución no se siguen.



Indica un paso de **REMOCION** o **DESMONTAJE**.



Indica un paso de **INSTALACION** o **MONTAJE**.



Se requiere **INSPECCION**.



**LIMPIESE** la pieza o el montaje.



**EJECUTESE** una **MEDICION** mecánica o del tiempo.



**LUBRIQUESE** la pieza o el montaje.



Indica que se dará una **LLAVE DE TUERCAS** o el **TAMAÑO DE HERRAMIENTA**.



**APRIETESE** hasta un par torsor específico.



**EJECUTESE** una **MEDICION** eléctrica.



Para información adicional refiérase a otro emplazamiento de este manual o a otra publicación anterior.



El componente pesa 23 kg [50 lb] o mas. Para evitar dano corporal empleen una cabria u obtengan ayuda para elevar el componente.



## Symbole

In diesem Handbuch werden die folgenden Symbole verwendet, die wesentliche Funktionen hervorheben. Die Symbole haben folgende Bedeutung:



**WARNUNG** - Wird die Warnung nicht beachtet, dann besteht erhöhte Unfall- und Beschädigungsgefahr.



**VORSICHT** - Werden die Vorsichtsmassnahmen nicht beachtet, dann besteht Unfall- und Beschädigungsgefahr.



**AUSBAU** bzw. **ZERLEGEN**.



**EINBAU** bzw. **ZUSAMMENBAU**.



**INSPEKTION** erforderlich.



Teil oder Baugruppe **REINIGEN**.



**DIMENSION** - oder **ZEITMESSUNG**.



Teil oder Baugruppe **ÖLEN**.



**WERKZEUGGRÖSSE** wird angegeben.



**ANZUG** auf vorgeschriebenes Drehmoment erforderlich.



Elektrische **MESSUNG DURCHFÜHREN**.



Weitere Informationen an anderer Stelle bzw. in anderen Handbüchern.



Das teil weigt 23 kg [50 lb] oder mehr. Zur Vermeidung von Koerperverletzung winde benutzen oder hilfe beim heben des teils in anspruch nehmen.

## Symboles

Les symboles suivants sont utilisés dans ce manuel pour aider à communiquer le but des instructions. Quand l'un de ces symboles apparaît, il évoque le sens défini ci-dessous:



**AVERTISSEMENT** - De graves lésions corporelles ou des dommages matériels considérables peuvent survenir si les instructions données sous les rubriques "Avertissement" ne sont pas suivies.



**ATTENTION** - De petites lésions corporelles peuvent survenir, ou bien une pièce, un ensemble ou le moteur peuvent être endommagés si les instructions données sous les rubriques "Attention" ne sont pas suivies.



Indique une opération de **DEPOSE**.



Indique une opération de **MONTAGE**.



**L'INSPECTION** est nécessaire.



**NETTOYER** la pièce ou l'ensemble.



**EFFECTUER** une **MESURE** mécanique ou de temps.



**GRAISSER** la pièce ou l'ensemble.



Indique qu'une **DIMENSION DE CLE** ou **D'OUTIL** sera donnée.



**SERRER** à un couple spécifique.



**EFFECTUER** une **MESURE** électrique.




Se reporter à un autre endroit dans ce manuel ou à une autre publication pour obtenir des informations plus complètes.




Le composant pèse 23 kg [50 lb] ou davantage. Pour éviter toute blessure, employer un appareil de levage ou demander de l'aide pour le soulever.

## Illustrations

Some of the illustrations throughout this manual are generic and will **not** look exactly like the engine or parts used in your application. The illustrations can contain symbols to indicate an action required and an acceptable or **not** acceptable condition.

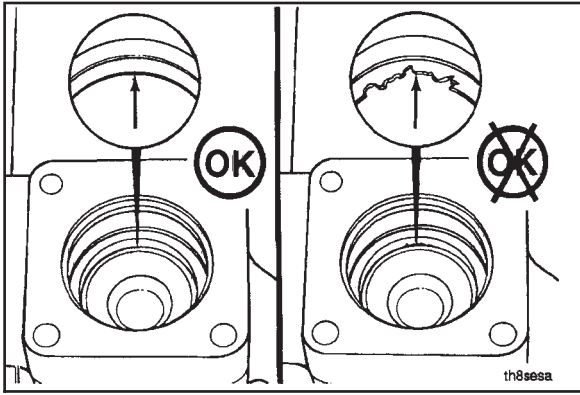

The illustrations are intended to show repair or replacement procedures. The procedure will be the same for all applications, although the illustration can differ.

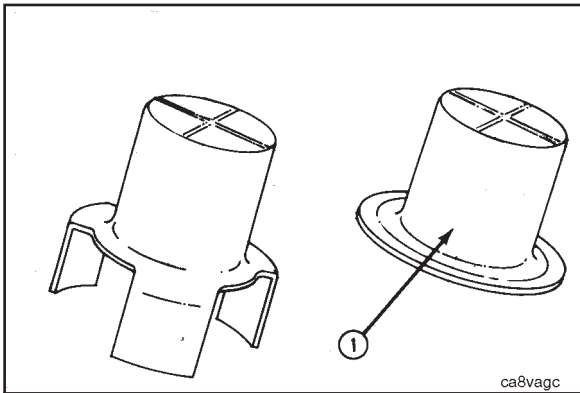

## General Safety Instructions

### Important Safety Notice



**Improper practices or carelessness can cause burns, cuts, mutilation, asphyxiation or other bodily injury or death.**

Read and understand all of the safety precautions and warnings before performing any repair. This list contains the general safety precautions that **must** be followed to provide personal safety. Special safety precautions are included in the procedures when they apply.

- Make sure the work area surrounding the product is dry, well lit, ventilated, free from clutter, loose tools, parts, ignition sources and hazardous substances. Be aware of hazardous conditions that can exist.
- **Always** wear protective glasses and protective shoes when working.
- Rotating parts can cause cuts, mutilation or strangulation.
- Do **not** wear loose-fitting or torn clothing. Remove all jewelry when working.
- Disconnect the battery (negative [-] cable first) and discharge any capacitors before beginning any repair work. Disconnect the air starting motor if equipped to prevent accidental engine starting. Put a “Do **Not** Operate” tag in the operator’s compartment or on the controls.
- Use **ONLY** the proper engine barring techniques for manually rotating the engine. Do **not** attempt to rotate the crankshaft by pulling or prying on the fan. This practice can cause serious personal injury, property damage, or damage to the fan blade(s) causing premature fan failure.
- If an engine has been operating and the coolant is hot, allow the engine to cool before you slowly loosen the filler cap and relieve the pressure from the cooling system.
- Do **not** work on anything that is supported **ONLY** by lifting jacks or a hoist. **Always** use blocks or proper stands to support the product before performing any service work.
- Relieve all pressure in the air, oil, fuel and the cooling systems before any lines, fittings, or related items are removed or disconnected. Be alert for possible pressure when disconnecting any device from a system that utilizes pressure. Do **not** check for pressure leaks with your hand. High pressure oil or fuel can cause personal injury.
- To prevent suffocation and frostbite, wear protective clothing and **ONLY** disconnect fuel and liquid refrigerant (freon) lines in a well ventilated area. To protect the environment, liquid refrigerant systems **must** be properly emptied and filled using equipment that prevents the release of refrigerant gas (fluorocarbons) into the atmosphere. Federal law requires capturing and recycling refrigerant.
- To avoid personal injury, use a hoist or get assistance when lifting components that weigh 23 kg [50 lb] or more. Make sure all lifting devices such as chains, hooks, or slings are in good condition and are of the correct capacity. Make sure hooks are positioned correctly. **Always** use a spreader bar when necessary. The lifting hooks **must not** be side-loaded.
- Corrosion inhibitor, a component of SCA and lubricating oil, contains alkali. Do **not** get the substance in your eyes. Avoid prolonged or repeated contact with skin. Do **not** swallow internally. In case of contact, immediately wash skin with soap and water. In case of contact, immediately flood eyes with large amounts of water for a minimum of 15 minutes. **IMMEDIATELY CALL A PHYSICIAN. KEEP OUT OF REACH OF CHILDREN.**
- Naptha and Methyl Ethyl Ketone (MEK) are flammable materials and **must** be used with caution. Follow the manufacturer’s instructions to provide complete safety when using these materials. **KEEP OUT OF REACH OF CHILDREN.**
- To avoid burns, be alert for hot parts on products that have just been turned off, and hot fluids in lines, tubes, and compartments.
- **Always** use tools that are in good condition. Make sure you understand how to use them before performing any service work. Use **ONLY** genuine Cummins or Cummins ReCon® replacement parts.
- **Always** use the same fastener part number (or equivalent) when replacing fasteners. Do **not** use a fastener of lesser quality if replacements are necessary.
- Do **not** perform any repair when fatigued or after consuming alcohol or drugs that can impair your functioning.
- Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.

## General Repair Instructions

This engine incorporates the latest diesel technology at the time it was manufactured; yet, it is designed to be repaired using normal repair practices performed to quality standards.

- **Cummins Engine Company, Inc. does not recommend or authorize any modifications or repairs to engines or components except for those detailed in Cummins Service Information. In particular, unauthorized repair to safety-related components can cause personal injury or death. Below is a partial listing of components classified as safety-related:**

Air Compressor  
Air Controls  
Air Shutoff Assemblies  
Balance Weights  
Cooling Fan  
Fan Hub Assembly  
Fan Mounting Bracket(s)  
Fan Mounting Capscrews  
Fan Hub Spindle  
Flywheel  
Flywheel Crankshaft Adapter

Flywheel Mounting Capscrews  
Fuel Shutoff Assemblies  
Fuel Supply Tubes  
Lifting Brackets  
Throttle Controls  
Turbocharger Compressor Casing  
Turbocharger Oil Drain Line(s)  
Turbocharger Oil Supply Line(s)  
Turbocharger Turbine Casing  
Vibration Damper Mounting Capscrews

- **Follow all safety instructions noted in the procedures**
  - Follow the manufacturer's recommendations for cleaning solvents and other substances used during the repair of the engine. Some solvents and used engine oil have been identified by government agencies as toxic or carcinogenic. Avoid excessive breathing, ingestion and contact with such substances. **Always** use good safety practices with tools and equipment.
- **Provide a clean environment and follow the cleaning instructions specified in the procedures**
  - The engine and its components **must** be kept clean during any repair. Contamination of the engine or components will cause premature wear.
- **Perform the inspections specified in the procedures**
- **Replace all components or assemblies which are damaged or worn beyond the specifications**
- **Use genuine Cummins new or ReCon® service parts and assemblies**
  - The assembly instructions have been written to use again as many components and assemblies as possible. When it is necessary to replace a component or assembly, the procedure is based on the use of new Cummins or Cummins ReCon® components. All of the repair services described in this manual are available from all Cummins Distributors and most Dealer locations.
- **Follow the specified disassembly and assembly procedures to avoid damage to the components**

Complete rebuild instructions are available in the shop manual which can be ordered or purchased from a Cummins Authorized Repair Location. Refer to Section L — Service Literature for ordering instructions.

### Welding on a Vehicle with an Electronic Controlled Fuel System



**Disconnect both the positive (+) and negative (-) battery cables from the battery before welding on the vehicle. Attach the welder ground cable no more than 0.61 meters [2 feet] from the part being welded. Do not connect the ground cable of the welder to the ECM cooling plate or ECM. Welding on the engine or engine mounted components is not recommended.**

## General Cleaning Instructions

### Solvent and Acid Cleaning

Several solvent and acid-type cleaners can be used to clean the engine parts. Experience has shown that the best results can be obtained using a cleaner that can be heated to 90 to 95 degrees Celsius [180 to 200 degrees Fahrenheit]. A cleaning tank that provides a constant mixing and filtering of the cleaning solution will give the best results. **Cummins Engine Company, Inc. does not recommend any specific cleaners. Always** follow the cleaner manufacturer's instructions.

Remove all the gasket material, o-rings, and the deposits of sludge, carbon, etc., with a wire brush or scraper before putting the parts in a cleaning tank. Be careful **not** to damage any gasket surfaces. When possible, steam clean the parts before putting them in the cleaning tank.

#### **WARNING**

**Acid is extremely dangerous and can damage the machinery. Always provide a tank of strong soda water as a neutralizing agent.**

Rinse all of the parts in hot water after cleaning. Dry completely with compressed air. Blow the rinse water from all of the capscrew holes and the oil drillings.

If the parts are **not** to be used immediately after cleaning, dip them in a suitable rustproofing compound. The rustproofing compound **must** be removed from the parts before installation on the engine.

### Steam Cleaning

Steam cleaning can be used to remove all types of dirt that can contaminate the cleaning tank. It is a good way to clean the oil drillings.

#### **WARNING**

**Wear protective clothing to prevent personal injury from the high pressure and extreme heat.**

Do **not** steam clean the following parts:

- |                          |                                    |
|--------------------------|------------------------------------|
| 1. Electrical Components | 5. Belts and Hoses                 |
| 2. Wiring                | 6. Bearings                        |
| 3. Injectors             | 7. Electronic Control Module (ECM) |
| 4. Fuel Pump             | 8. ECM Connectors                  |

### Glass or Plastic Bead Cleaning

Glass or plastic bead cleaning can be used on many engine components to remove carbon deposits. The cleaning process is controlled by the size of the glass or plastic beads, the operating pressure, and the cleaning time.

#### **CAUTION**

**Do not use glass or plastic bead cleaning on aluminum piston skirts. Do not use glass bead cleaning on aluminum ring grooves. Small particles of glass or plastic will embed in the aluminum and result in premature wear. Valves, turbocharger shafts, etc., can also be damaged. Follow the cleaning directions listed in the procedures.**

**NOTE:** Plastic bead blasting media, Part No. 3822735, can be used to clean aluminum ring grooves. Do **not** use any bead blasting media on pin bores or aluminum skirts.

Follow the equipment manufacturer's cleaning instructions. The following guidelines can be used to adapt to manufacturer's instructions:

1. Bead size: - Use U.S. size No. 16-20 for piston cleaning with plastic bead media, Part No. 3822735.  
- Use U.S. size No. 70 for piston domes with glass media.  
- Use U.S. size No. 60 for general purpose cleaning with glass media.
2. Operating Pressure: - Glass: Use 620 kPa [90 psi] for general purpose cleaning.  
- Plastic: Use 270 kPa [40 psi] for piston cleaning.
3. Steam clean or wash the parts with solvent to remove all of the foreign material and glass or plastic beads after cleaning. Rinse with hot water. Dry with compressed air.
4. Do **not** contaminate the wash tanks with glass or plastic beads.

## Acronyms and Abbreviations

<b>AFC</b>	Air Fuel Control	<b>km/l</b>	Kilometers per Liter
<b>API</b>	American Petroleum Institute	<b>kPa</b>	Kilopascal
<b>ASA</b>	Air Signal Attenuator	<b>LNG</b>	Liquid Natural Gas
<b>ASTM</b>	American Society of Testing and Materials	<b>LTA</b>	Low Temperature Aftercooling
<b>°C</b>	Celsius	<b>MIP</b>	Mixer Inlet Pressure
<b>CARB</b>	California Air Resources Board	<b>MPa</b>	Megapascal
<b>C.I.D.</b>	Cubic Inch Displacement	<b>mph</b>	Miles Per Hour
<b>CNG</b>	Compressed Natural Gas	<b>mpq</b>	Miles Per Quart
<b>CPL</b>	Control Parts List	<b>N•m</b>	Newton-meter
<b>cSt</b>	Centistokes	<b>NG</b>	Natural Gas
<b>ECM</b>	Electronic Control Module	<b>OEM</b>	Original Equipment Manufacturer
<b>ECS</b>	Emission Control System	<b>ppm</b>	Parts Per Million
<b>EPA</b>	Environmental Protection Agency	<b>psi</b>	Pounds Per Square Inch
<b>EPS</b>	Engine Position Sensor	<b>PTO</b>	Power Takeoff
<b>°F</b>	Fahrenheit	<b>rpm</b>	Revolutions Per Minute
<b>GVW</b>	Gross Vehicle Weight	<b>SAE</b>	Society of Automotive Engineers
<b>Hg</b>	Mercury	<b>SCA</b>	Supplemental Coolant Additive
<b>hp</b>	Horsepower	<b>STC</b>	Step Timing Control
<b>H<sub>2</sub>O</b>	Water	<b>VS</b>	Variable Speed
<b>ICM</b>	Ignition Control Module	<b>VSS</b>	Vehicle Speed Sensor

# Section E - Engine Identification

## Section Contents

	Page
<b>Engine Diagrams</b> .....	E-6
<b>Engine Identification</b> .....	E-1
Cummins Engine Nomenclature .....	E-2
ECM Dataplate .....	E-1
Engine Dataplate .....	E-1
Fuel Pump Dataplate .....	E-1
<b>Specifications</b> .....	E-3
Air Intake System .....	E-5
Batteries (Specific Gravity) .....	E-5
Cooling System .....	E-4
Electrical System .....	E-5
Exhaust System .....	E-5
Fuel System .....	E-4
General Specifications .....	E-3
Lubricating Oil System .....	E-4




## Engine Identification

### Engine Dataplate

The engine dataplate shows specific information about your engine. The engine serial number and control parts list (CPL) provide information for ordering parts and service needs. The engine dataplate **must not** be changed unless approved by Cummins Engine Company, Inc.

The dataplate is located on the fuel pump side of the engine, on the rocker housing. Have the following engine data available when communicating with a Cummins Authorized Repair Location. The information on the dataplate is **mandatory** when sourcing service parts.

1. Engine Serial Number (ESN)
2. Control Parts List (CPL)
3. Model
4. Horsepower and rpm rating

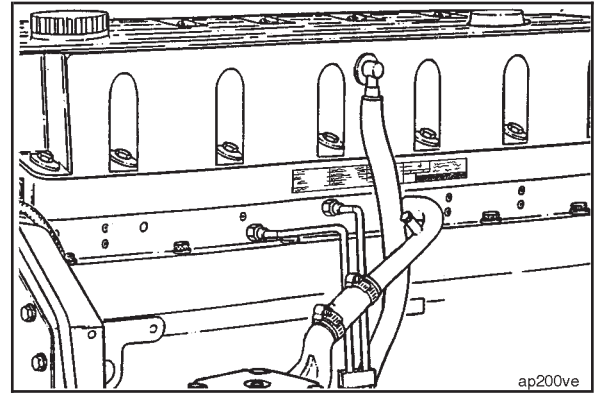

Engine No. Moteur No.	Advert. HP Puiss. Indiquée(ch)	at	RPM	E.C.S.	NO	IMPORTANT ENGINE INFORMATION: This engine conforms to U.S. EPA and California regulations applicable to <b>19</b> Model Year New Heavy Duty Engine. This engine has a primary intended service application as a heavy heavy-duty diesel engine. This engine is certified to operate on diesel fuel.
Family	Peak Torque (FT-LB) Torque Cime	at	RPM	Inj. Timing Code Calge d'injection	PM	
Model Modèle	Fuel rate at Advert. HP Débit Combust. à Puiss. Indiquée		mm 3 stroke	C.I.D./L Pouce Cube	FEL EPA CARB	This engine is not certified for use in an urban bus as defined at 40 CFR 86.083-2. Sales of this engine for use in an urban bus is a violation of Federal law under the Clean Air Act.
Date of Mfg. Date Fabrication	Valve Lash Cold Jeux Soupapes à Froid	Int. Adm.	Ext. Ech.	CPL	Cummins This engine is not certified for use in an urban bus as defined at 40 CFR 86.083-2. Sales of this engine for use in an urban bus is a violation of Federal law under the Clean Air Act.	
Idle Speed RPM Vitesse de Ralentir	Inj. Set Courses Inj.		Governed Speed Vitesse Gouvernée	RPM	WARNING: Injury may result and warranty is voided if fuel rate, RPM, or altitudes exceed published maximum values for the model and application. AVERTISSEMENT: Danger de blessures et d'annulation de la garantie en réajustement, tirage ou altitude dépassés, les valeurs maximums annoncées pour ce modèle et son utilisation.	
Ref. No.				Cummins Engine Co., Inc. Made in U.S.A.		

00200016


### ECM Dataplate

There are two dataplates on the top of the electronic control module (ECM).

**NOTE:** The ECM referenced here is used with the CELECT™ and CELECT™ Plus fuel systems only.

The dataplate on the left contains the part number (P/N), serial number (S/N) and the date code (D/C) of the ECM.


The dataplate on the right contains the engine serial number (ESN), fuel code (FC) and engine calibration information.

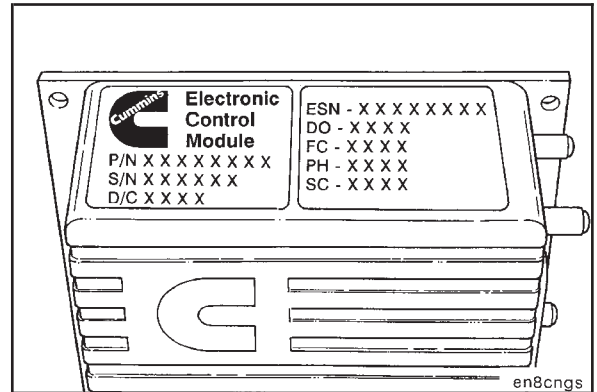

### Fuel Pump Dataplate

**NOTE:** The fuel pump dataplate referenced here is the style dataplate used on a Cummins PT (pressure/time) fuel pump. This is the type fuel pump used on a STC fuel system. It is **not** used on fuel pumps with the CELECT™ or CELECT™ Plus fuel systems.

The fuel pump dataplate is located on the top of the fuel pump. It provides information for fuel pump calibration.

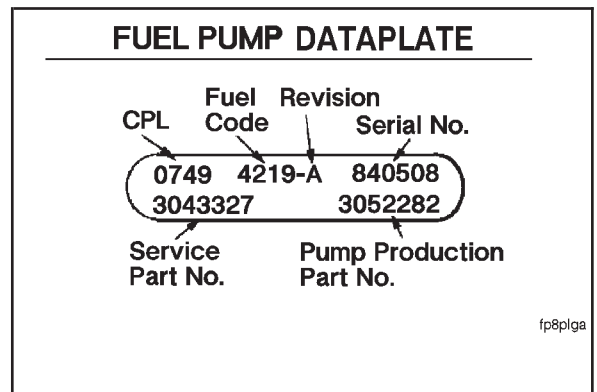


fp8plga

### Cummins Engine Nomenclature

Cummins engine nomenclature provides engine data as illustrated in the graphic.


This graphic illustrates nomenclature used with automotive engines.

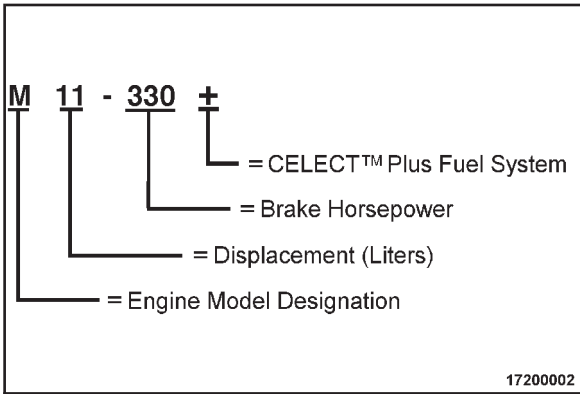

This graphic illustrates nomenclature used with off-highway (industrial) engines.

**NOTE:** The following letters designate some of the different market applications for a Cummins engine.

- A = Agriculture
- C = Construction
- G = Generator Drive

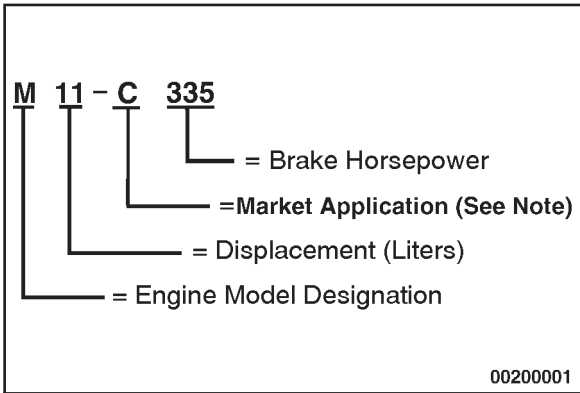

## Specifications

### General Specifications

Horsepower (Refer to engine dataplate)

Engine speed @ Maximum Output:

Governed Speed (rpm)	
Automotive (CELECT™ and CELECT™ Plus)	1800
Vocational (CELECT™ and CELECT™ Plus)	2100
Industrial (STC)	2100

Bore and Stroke ..... 125 mm [4.921 in] x 147 mm [5.787 in]


Displacement ..... 10.8 liters [661 C.I.D.]

Firing Order ..... 1-5-3-6-2-4


Engine Weight (with standard accessories):

CELECT™ and CELECT™ Plus	
Dry Weight	940 Kg [2070 lb]
Wet Weight	996 Kg [2193 lb]
STC	
Dry Weight	929 Kg [2045 lb]
Wet Weight	981 Kg [2160 lb]

Cylinder Location and Firing Order

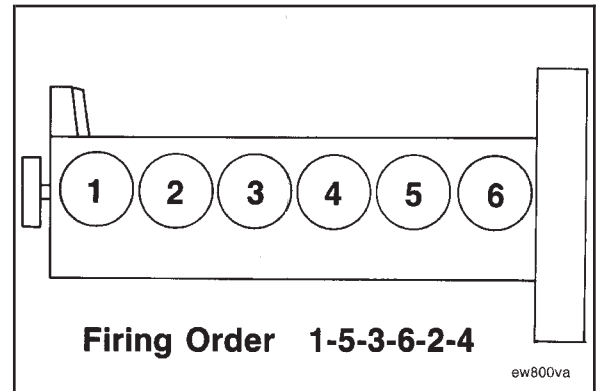

Intake and Exhaust Valve Locations

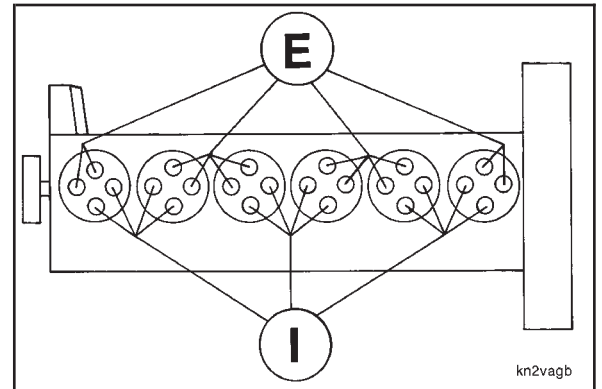

**Fuel System**

For performance and fuel rate values, refer to the engine data sheet or the fuel pump code for the particular model involved.

**Engine Idle Speed**

CELECT™ .....	650 to 800 rpm
CELECT™ Plus .....	600 to 800 rpm

**Fuel Inlet Maximum Restriction:**

<b>CELECT™ and CELECT™ Plus</b>	
Clean Fuel Filter .....	152 mm Hg [6 in Hg]
Dirty Fuel Filter .....	254 mm Hg [10 in Hg]
<b>STC</b>	
Clean Fuel Filter .....	102 mm Hg [4 in Hg]
Dirty Fuel Filter .....	204 mm Hg [8 in Hg]

**Fuel Drain Line Maximum Restriction**

CELECT™ and CELECT™ Plus .....	89 mm Hg [3.5 in Hg]
<b>STC</b>	
Without Check Valves .....	63 mm Hg [2.5 in Hg]
With Check Valves .....	165 mm Hg [6.5 in Hg]

**Minimum Fuel Pressure:**

During Cranking .....	172 kPa [25 psi]
1200 rpm .....	827 kPa [120 psi]

Fuel Inlet Maximum Temperature ..... 71°C [160°F]

Engine Minimum Cranking Speed ..... 150 rpm

**Shutoff Valve Solenoid Coil Resistance**

12 VDC .....	7.0 to 8.0 ohms
--------------	-----------------

**Lubricating Oil System**

**Oil Pressure:**

Low Idle (Minimum Allowable) .....	70 kPa [10 psi]
At 1200 rpm or Torque Peak (Minimum Allowable) .....	207 kPa [30 psi]

**Oil Capacity of Standard Engine:**

Combination Filter .....	2.6 liters [0.7 U.S. gal.]
Oil Pan (High-Low) .....	34 - 26.5 liters [9 - 7 U.S. gal.]

**Cooling System**

**Coolant Capacity (Engine Only)**

Charge Air Cooled Engines .....	9.5 liters [2.5 U.S. gal.]
Aftercooled Engines .....	12.9 liters [3.4 U.S. gal.]

Standard Modulating Thermostat-Range ..... 82° to 93°C [180 to 200°F]

**Cylinder Block Coolant Pressure (Pressure Cap Removed):**

<b>Minimum</b>	
Closed Thermostat - 1800 RPM - No Load .....	138 kPa [20 psi]
<b>Maximum</b>	
Closed Thermostat .....	275 kPa [40 psi]

Maximum Allowable Operating Coolant Temperature ..... 100°C [212°F]

Minimum Recommended Operating Coolant Temperature ..... 71°C [160°F]

Maximum Allowable Deaeration Time ..... 35 minutes

Minimum Recommended Pressure Cap ..... 48 kPa [7 psi]

Maximum Allowable Coolant Flow to Accessories — (Liters/Min. [GPM]) ..... 75.7 Liters [20 U.S. gal.]

**Coolant Sensing Fan Control:**

On .....	96°C [205°F]
Off .....	91°C [195°F]