

WSM

WORKSHOP MANUAL **DIESEL ENGINE**

OC60-E2, OC95-E2

Kubota

TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of OC60-E2, OC95-E2. It is divided into three parts, "General", "Mechanism" and "Servicing".

■ General

Information on the engine identification, the general precautions, maintenance check list, check and maintenance and special tools are described.

■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel Engine Mechanism Workshop Manual (Code No. 97897-01873) for the one which has not been described to this workshop manual.

■ Servicing

Information on the troubleshooting, servicing specification lists, tightening torque, checking and adjusting, disassembling and assembling, and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

Due to covering many models of this manual, information or picture being used have not been specified as one model.

February 2005

© KUBOTA Corporation 2005

000009675E

SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol" is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to repair or use this unit.



DANGER

- Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

- Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

- Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

■ IMPORTANT

- Indicates that equipment or property damage could result if instructions are not followed.

■ NOTE


- Gives helpful information.

0000001386E

BEFORE SERVICING AND REPAIRING

- Read all instructions and safety instructions in this manual and on your engine safety decals.
- Clean the work area and engine.
- Park the machine on a firm and level ground.
- Allow the engine to cool before proceeding.
- Stop the engine, and remove the key
- Disconnect the battery negative cable

0000001387E



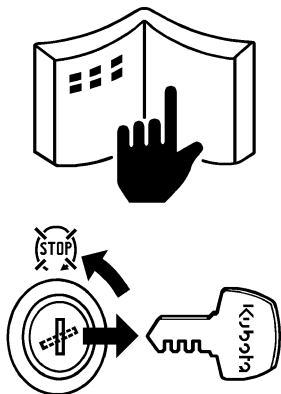


SAFETY STARTING

- Do not start the engine by shorting across starter terminals or bypassing the safety start switch.
- Unauthorized modifications to the engine may impair the function and / or safety and affect engine life.

0000001388E



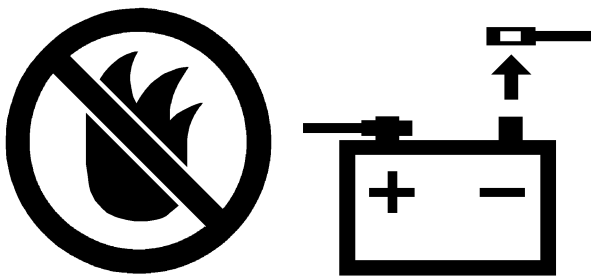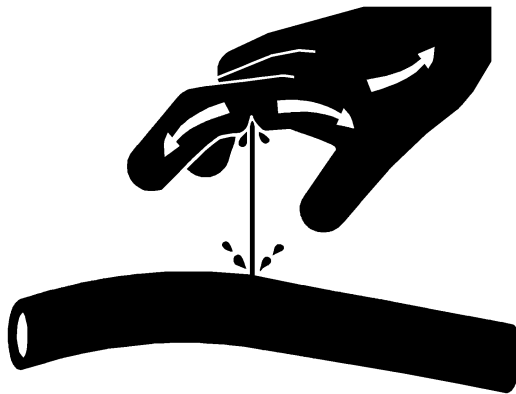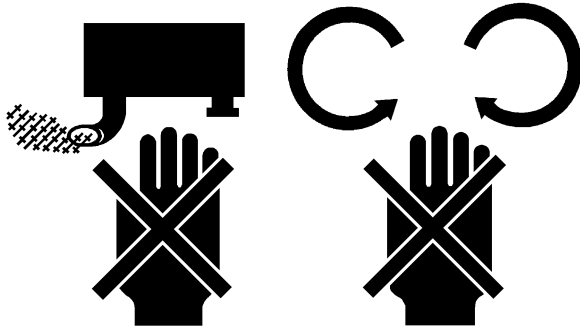

SAFETY WORKING


- Do not work on the machine while under the influence of alcohol, medication, or other substances or while fatigued.
- Wear close fitting clothing and safety equipment appropriate to the job.
- Use tools appropriate to the work. Makeshift tools, parts, and procedures are not recommended.
- When servicing is performed together by two or more persons, take care to perform all work safely.
- Do not touch the rotating or hot parts while the engine is running.
- Never remove the radiator cap while the engine is running, or immediately after stopping. Otherwise, hot water will spout out from radiator. Only remove radiator cap when cool enough to touch with bare hands. Slowly loosen the cap to first stop to relieve pressure before removing completely.
- Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or fuel lines. Tighten all connections before applying pressure.
- Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

0000001389E

AVOID FIRES

- Fuel is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.
- To avoid sparks from an accidental short circuit, always disconnect the battery negative cable first and connect it last.
- Battery gas can explode. Keep sparks and open flame away from the top of battery, especially when charging the battery.
- Make sure that no fuel has been spilled on the engine.


0000001390E

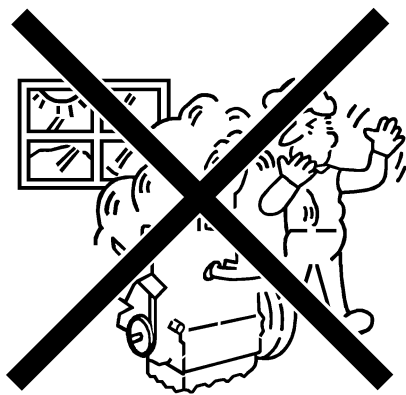

VENTILATE WORK AREA

- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in a closed area. The exhaust gas contains poisonous carbon monoxide.


0000001391E

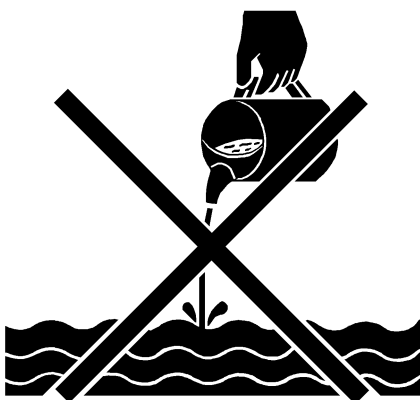

DISPOSE OF FLUIDS PROPERLY

- Do not pour fluids into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, electrolyte and other harmful waste.

0000001393E

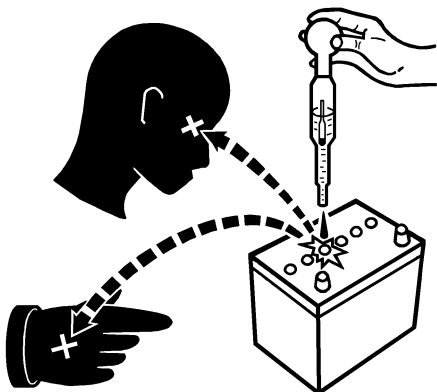

PREVENT ACID BURNS


- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, clothing and cause blindness if splashed into eyes. Keep electrolyte away from eyes, hands and clothing. If you spill electrolyte on yourself, flush with water, and get medical attention immediately.

0000001392E

PREPARE FOR EMERGENCIES

- Keep a first aid kit and fire extinguisher handy at all times.
- Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

0000001394E

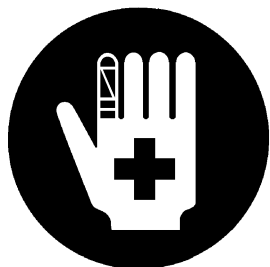

SPECIFICATIONS



Model	OC60-E2(-X)	OC60-E2(-X)-L	OC95-E2(-X)	OC95-E2(-X)-L
Number of Cylinders	1			
Type	Oil-cooled 4-cycle diesel engine			
Bore x Stroke	72 x 68 (2.83 x 2.68)		83 x 77 (3.27 x 3.03)	
Total Displacement	276 (16.8)	276 (16.8)	416 (25.4)	416 (25.4)
ISO Net Continuous	4.2 / 3600 (5.6 / 3600)		6.3 / 3600 (8.5 / 3600)	
ISO / SAE Net Intermittent	4.5 / 3600 (6.1 / 3600)		7.0 / 3600 (9.5 / 3600)	
Maximum Bare Speed	3800			
Minimum Bare Idling Speed	1300			
Combustion System	TVCS (Three-vortex combustion system)			
Fuel Injection Pump	ND type (DENSO)			
Governor	Centrifugal mechanical governor			
Direction of Rotation	Clockwise (View from flywheel side)			
Injection Nozzle	DN4PD82 (DENSO)			
Injection Timing (Static)	0.26 to 0.30 rad (15 ° to 17 °) before top dead center		0.23 to 0.26 rad (13 ° to 15 °) before top dead center	
Injection Pressure	13.7 MPa (140 kgf/cm ² , 1987 psi)			
Compression Ratio	24.5 : 1		24.0 : 1	
Lubricating System	Forced lubrication with trochoid pump			
Lubricating Filter	Oil strainer			
Cooling System	Oil cooling + Air cooling			
Starting System	Electric starting with starter			
Starting Motor	12 V 1.0 kW		12 V 1.2 kW	
Charging Alternator	12 V, 48 W	12 V, 150 W	12 V, 48 W	12 V, 150 W
Fuel	Diesel fuel No.2-D (ASTM D975)			
Fuel Tank Capacity	3.6 L (0.95 U.S.gals, 0.79 Imp.gals)		5.5 L (1.45 U.S.gals, 1.2 Imp.gals)	
Lubricating Oil	Quality better than API service CC class (SAE 10W-30)			
Lubricating Oil Capacity	1.3 L (1.37 U.S.qts, 1.14 Imp.qts)		1.7 L (1.80 U.S.qts, 1.49 Imp.qts)	
Weight (Dry)	38(83.8)		55 (121.3)	

000009651E

PERFORMANCE CURVES

OC60-E2

OC95-E2

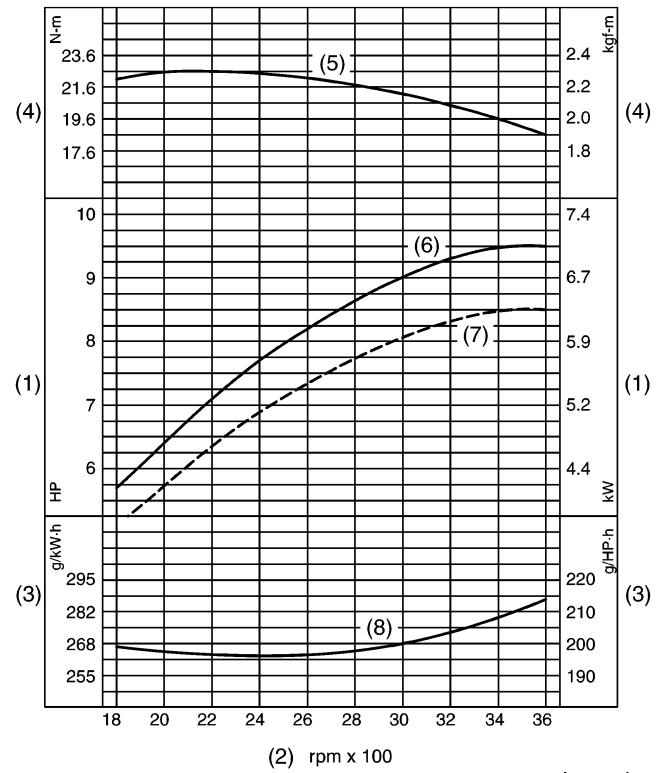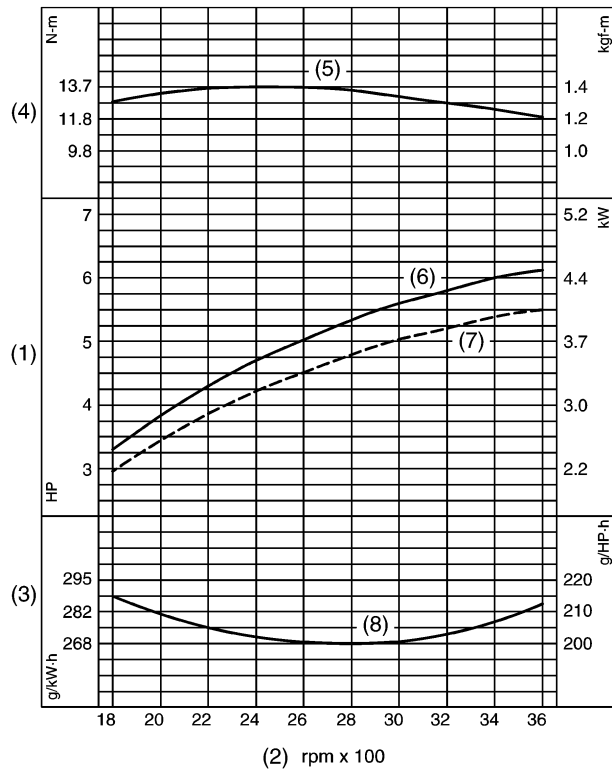

— Intermittent
 - - - - - Continuous

3ECAABEP001A

- (1) Brake Horsepower
- (2) Engine Speed

- (3) Fuel Consumption
- (4) Torque


- (5) Net Intermittent Torque
- (6) Net Intermittent B.H.P.

- (7) Net Continuous B.H.P.
- (8) Net Intermittent B.S.F.C

000009659E

DIMENSIONS


■ STANDARD TYPE [OC60-E2]

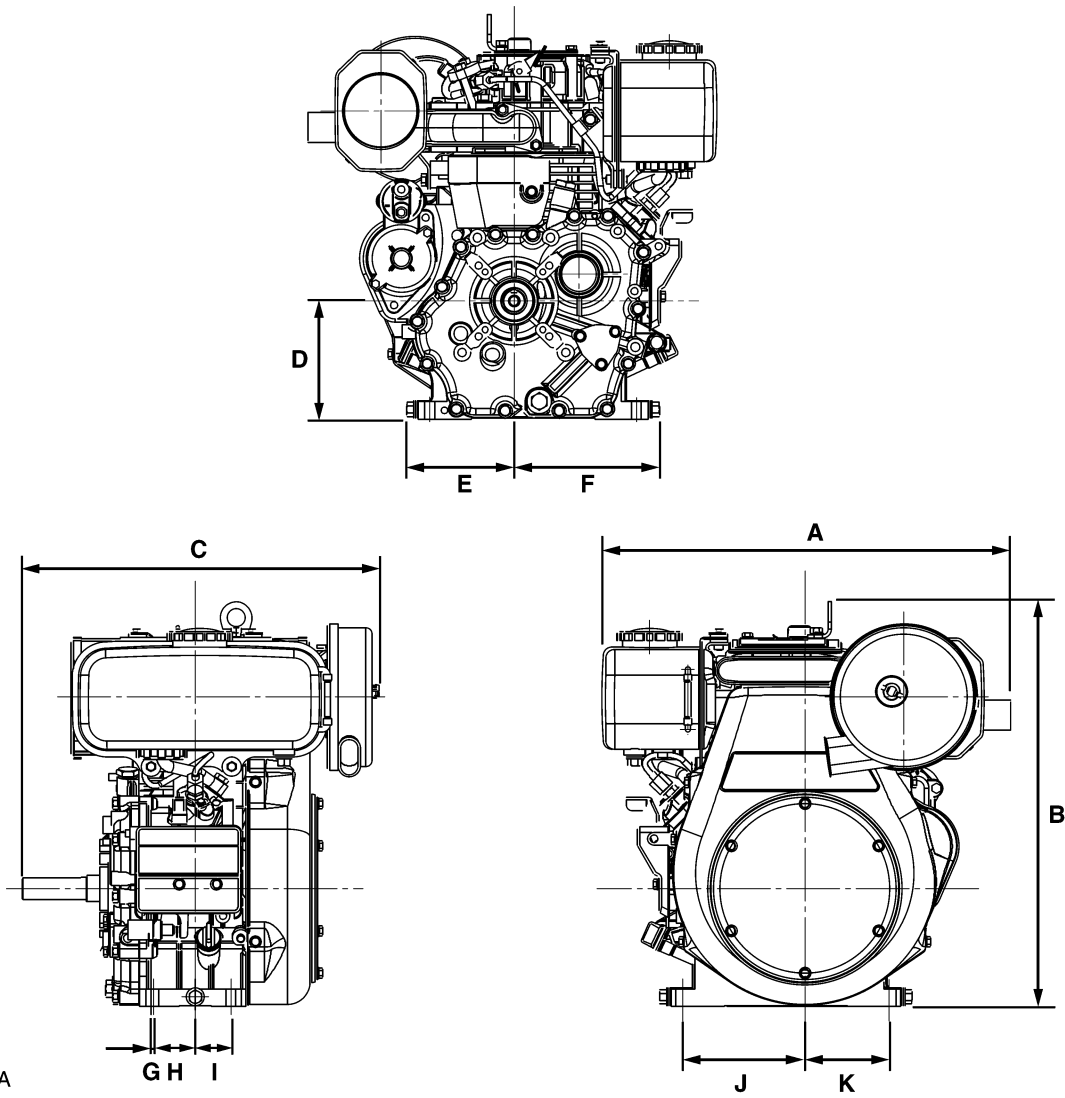

3ECAABFP001A

000009663E


■ X TYPE (WITH STOP SOLENOID) [OC60-E2]

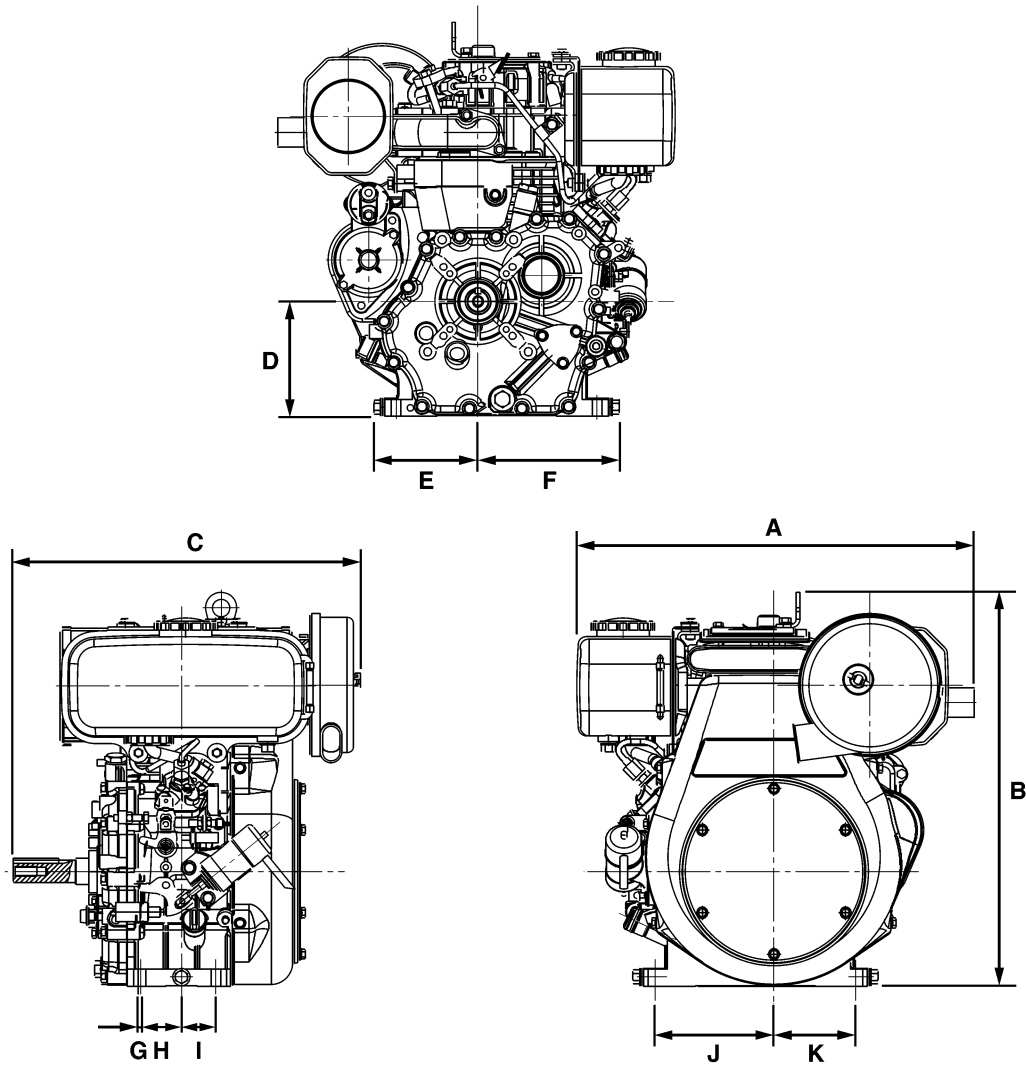

3ECAABFP002A

	STANDARD TYPE	X TYPE
A	461 mm (18.15 in.)	461 mm (18.15 in.)
B	457.5 mm (18.02 in.)	457.5 mm (18.02 in.)
C	403 mm (15.87 in.)	403 mm (15.87 in.)
D	133.5 mm (5.26 in.)	133.5 mm (5.26 in.)
E	121 mm (4.77 in.)	121 mm (4.77 in.)
F	164 mm (6.46 in.)	164 mm (6.46 in.)
G	3 mm (0.12 in.)	3 mm (0.12 in.)
H	47 mm (1.85 in.)	47 mm (1.85 in.)
I	40 mm (1.57 in.)	40 mm (1.57 in.)
J	138 mm (5.43 in.)	138 mm (5.43 in.)
K	95 mm (3.47 in.)	95 mm (3.47 in.)

■ STANDARD TYPE [OC95-E2]

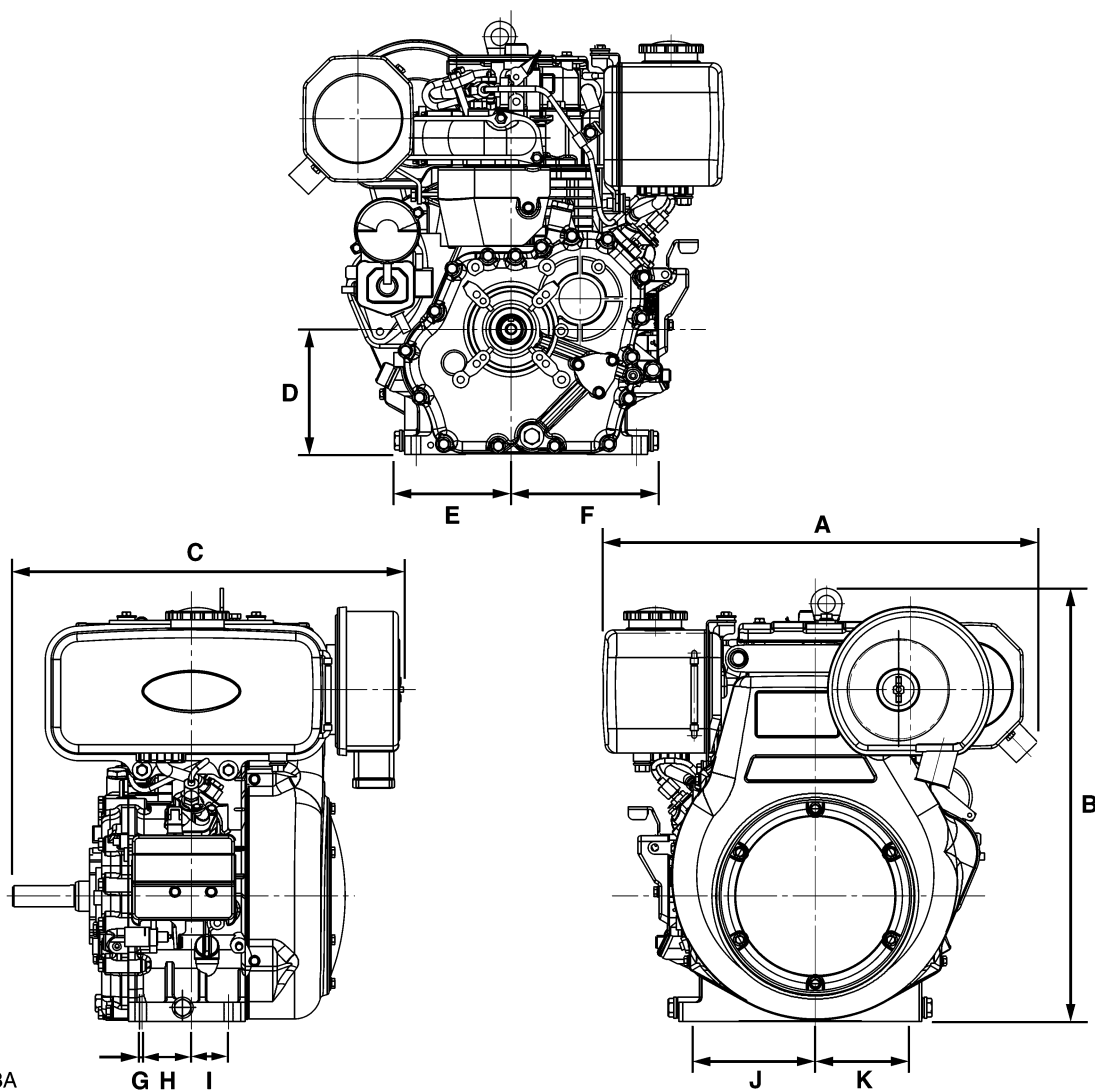

3ECAABFP003A

000009665E